

A Button / Taster / Drukknop / Bouton / Botón / Tasto

Press button A once to switch on the CANfinder*. Pressing button A again will switch the device off.


B LED

In case the CANfinder* is switched on but doesn't detect a signal, the LED will start to blink red. The device will switch off automatically after 1 minute.

C Flashlight / Taschenlampe / Inspectielamp / Lampe d'inspection / Linterna / Torcia


Press and hold down the button A to activate the white LED C. Now the device can be used as a flash light.



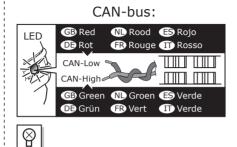

The CANfinder* detects signals without grounding. A voltage drop or rise will be indicated by LED B. This LED will light up Green for 12V to 0V and Red for 0V to 12V. When looking for the turn signal wire, LED B will flash in the same frequency as the turn signal.Pulsed tail light functions and the dimming of the lights when the engine is running can also be detected.

Batteries / Batterien / Batterij / Batterie / Pilas / Batterie

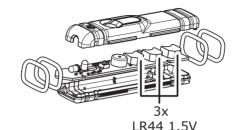

Button Cell / Knopfzelle / Knoppcel / Cel / Célula / Bottone

CANfinder* Power consumption OFF < 0.001 μ A, Standby 1.5mA, Detection (R/G LED ON) 14mA, W LED ON 37 mA Battery 3X LR44 1.5V

