


CITROEN / FIAT / PEUGEOT / TOYOTA

Part No: TO-265-07MU

Electric wiring kit for towbars / 7-pin / 12N / 12 Volt / ISO 1724

Fitting instructions

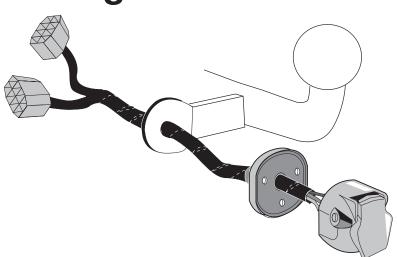





IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

We always recommend whenever possible, the following troubleshooting process:

- → An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!
- → Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
- → If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!

Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.


All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

1/14

ECS UK c/o 3 Hardman Street Manchester M3 3AT

SALE: +44 (0) 1625 462281 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk

Email-sales: uksales@ecs-elecrtronics.com Email-technical: ukts@ecs-electronics.com

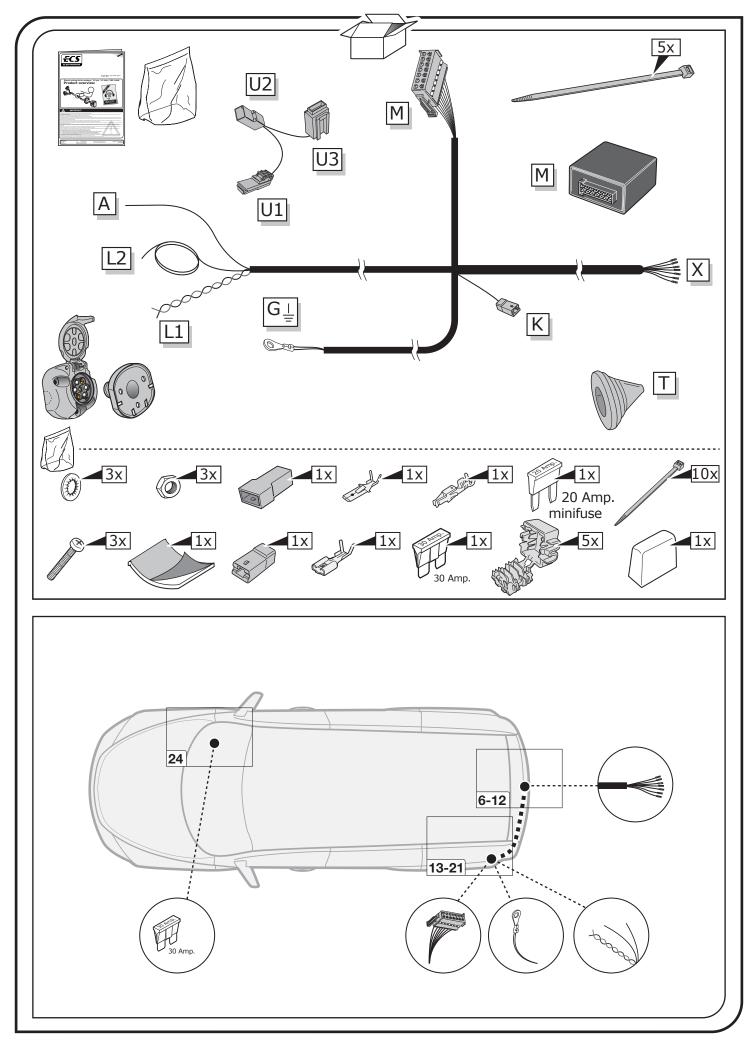



SYMBOL EXPLANATION

Left (58-L) respectively Right (58-R) tail light				
Stop light (54) / high mounted, third stop light (54)				
Turn signal indicator left				
Turn signal indicator right				
Rear fog light(s)				
Reversing light(s)				
Permanent power supply / 13pin socket, chamber 9				
Charging wire for trailer battery / 13pin socket, chamber 10				
Trailer / trailer recognition				
Permanent current power supply				
Ground or Earth (31)				
Ground connection battery terminal lug				
Positive connection battery terminal lug				

(12V)	Cigarette lighter / accessory socket				
	Loudspeaker / buzzer				
	Park Distance Control				
-/-	Switch / source of function				
→	Connect together				
+ +	Disconnect				
4	Look at / See further information				
	Look carefully at selected area				
\bigvee	Present / Occupied / OK				
\mathbb{X}	Not present / Not occupied / Not OK				
D ((((Acoustic indication				
\triangle	Attention / important advice				
20 Amp.	Fuse / fuse capacity 20 Ampère				

 TOOLS

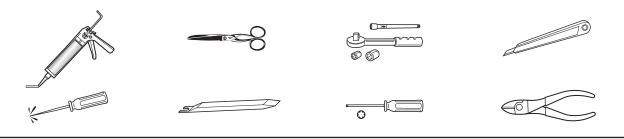



ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! You must observe the manufacturer's instructions!!



Note: It may be necessary to check if this vehicle has a stored radio code before disconnecting the battery!




ATTENTION!


In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal **must be disconnected** from the vehicle's battery **before starting work!**


Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected!


1


Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!

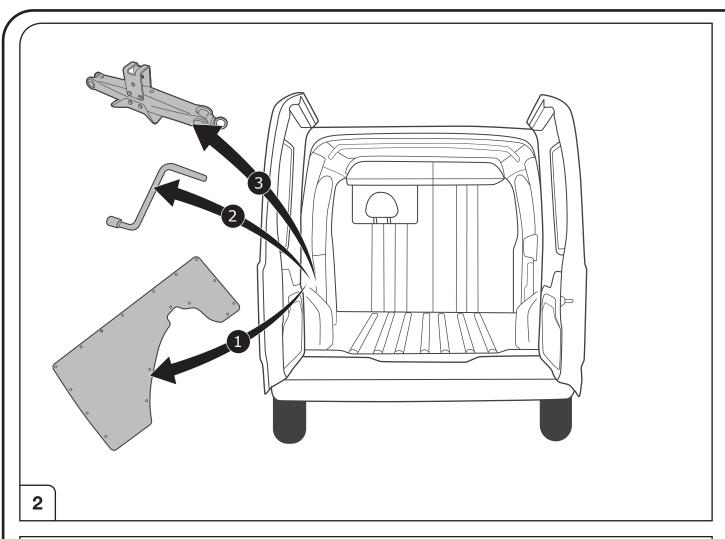


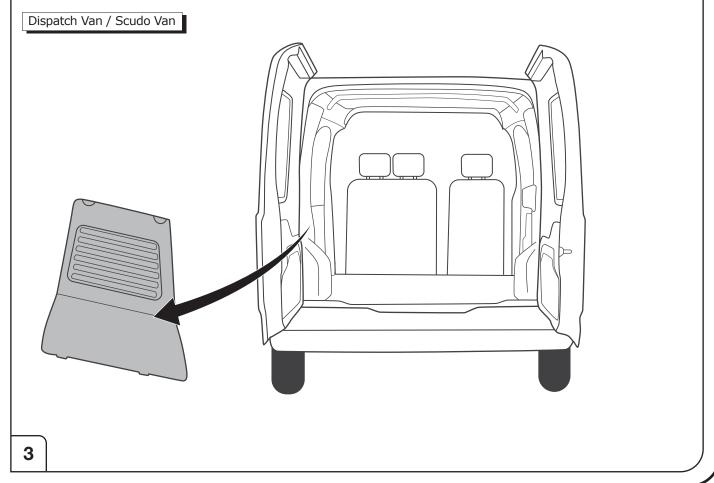


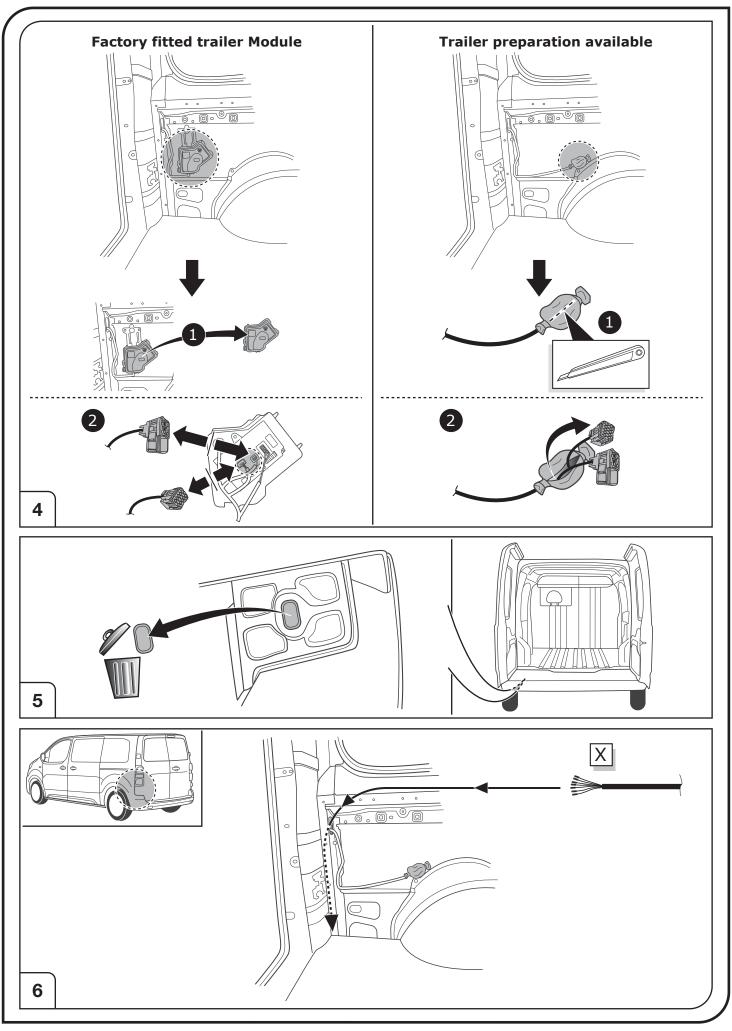

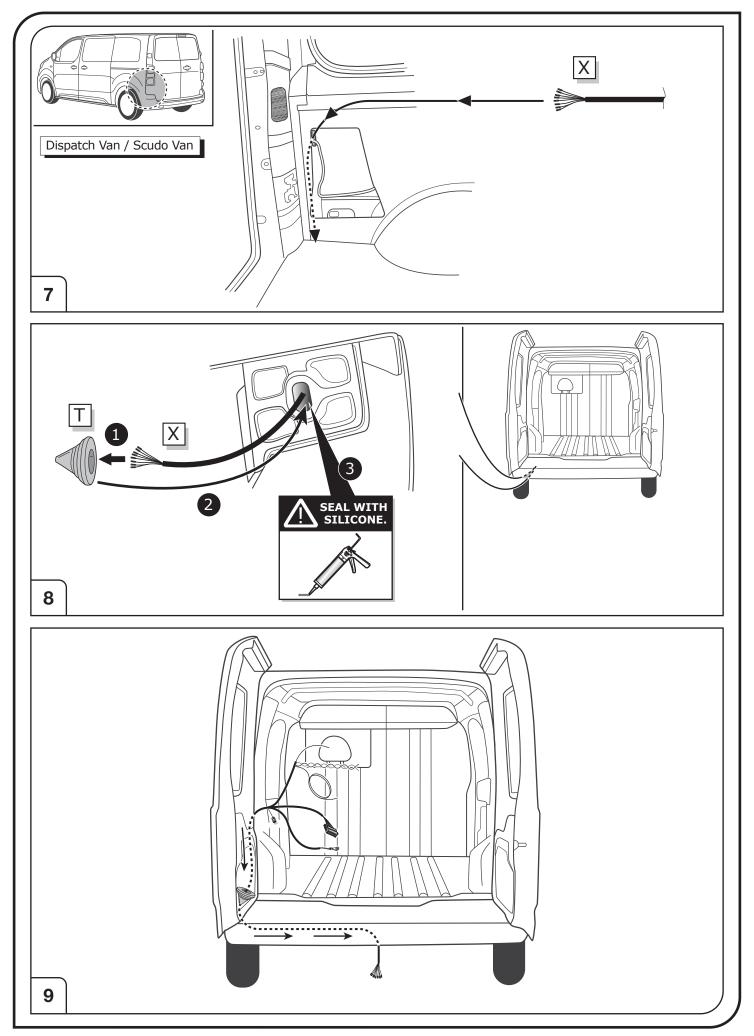


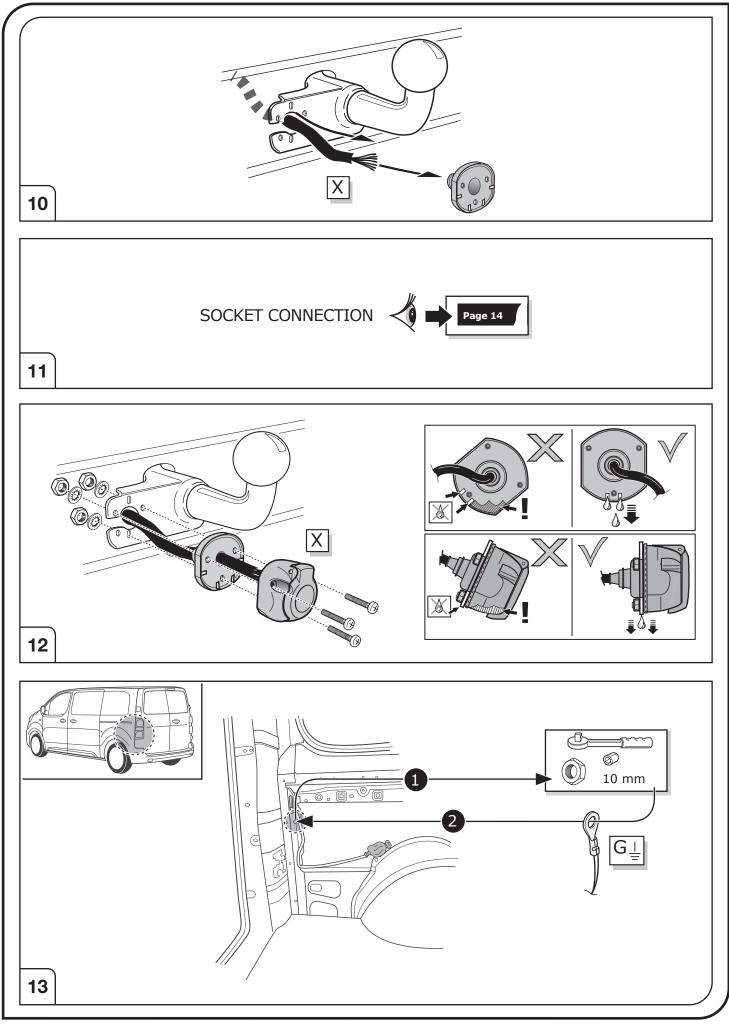


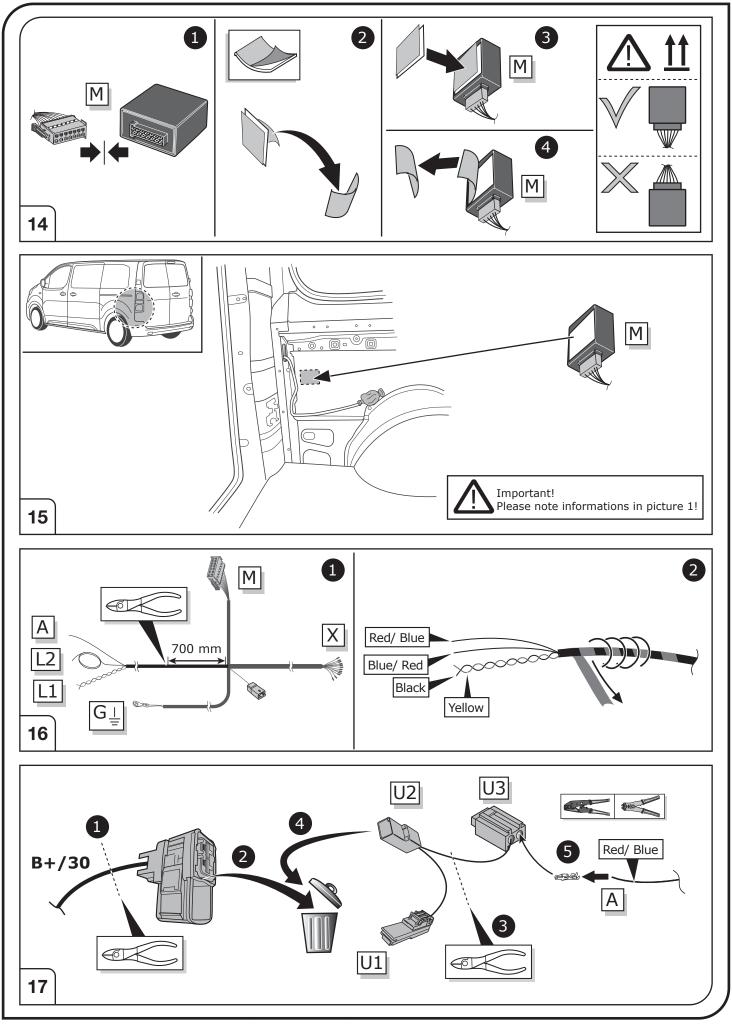

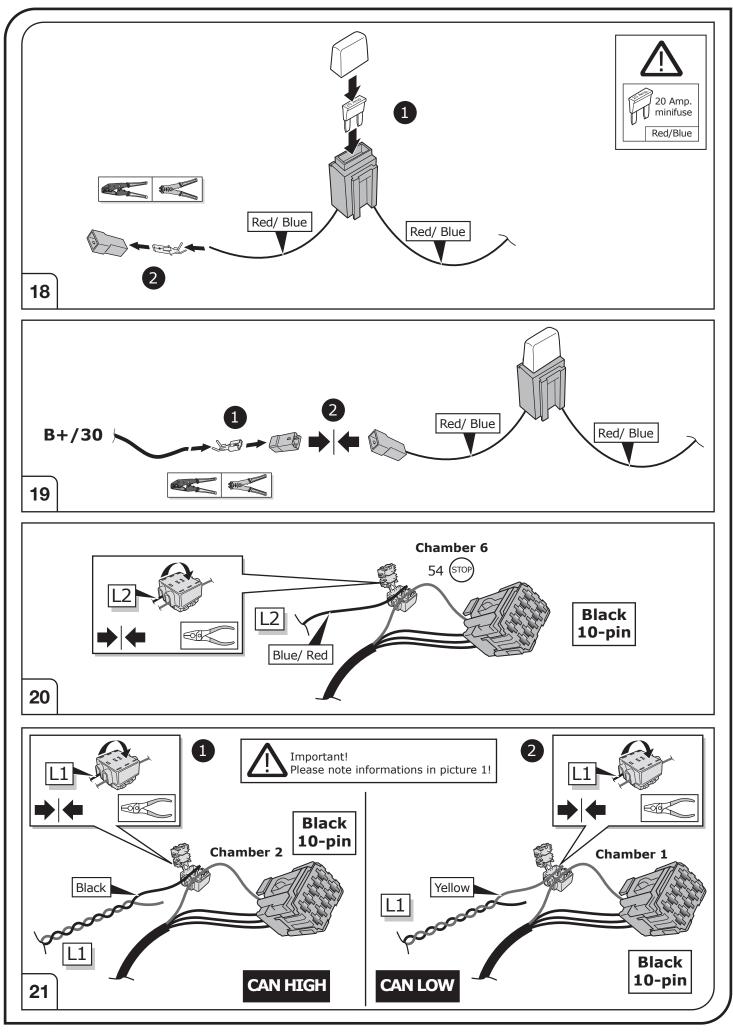

9/14

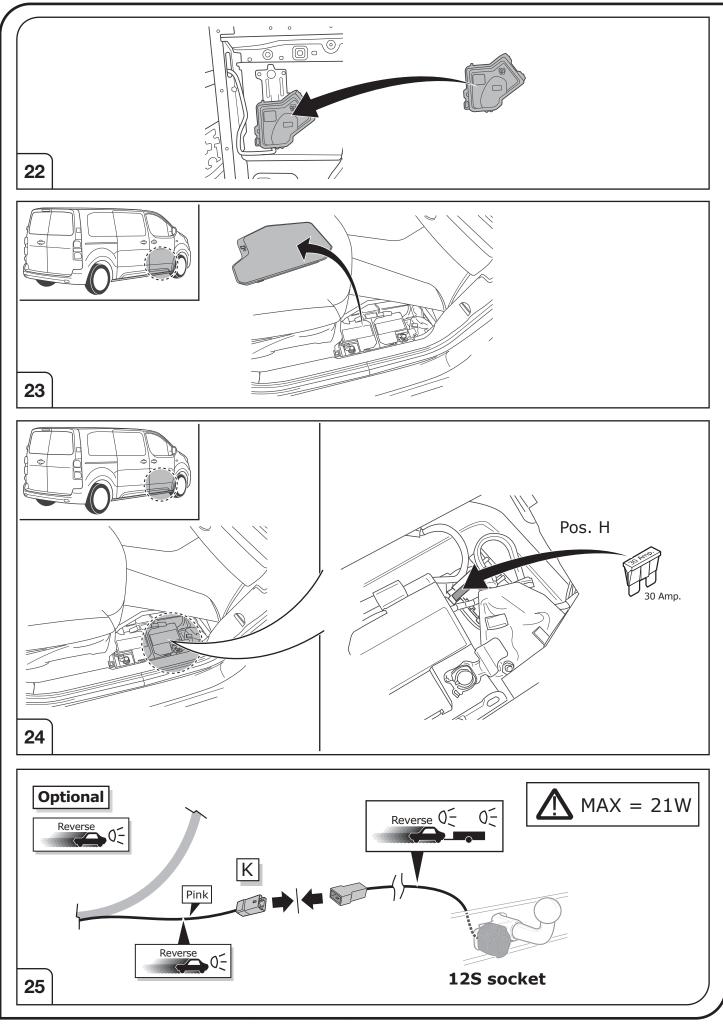

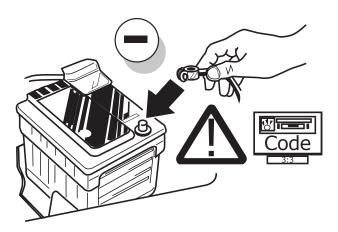

26

Set up trailer operation CITROËN

The activation of

- trailer indicator monitoring
- PDC deactivation

has to be carried out using the CITROËN Proxia-Tester as follows:

- remote loading / remote coding
- installation / de-installation
- selection vehicle type
- trailer control unit (BSR)
- installation of equipment

FIAT

The activation of the trailer indicator monitoring and cutoff of the vehicle's PDC must be carried out with the aid of the FIAT EXAMINER tester as follows:

Module programming

- Test the controllers
- Select the type of vehicle
- Group SAFETY
- System BODY COMPUTER
- Active diagnosis
- Configuration
- Manual configuration of the system
- Continue to subgroup EXECUTION
- Set trailer controller to present

PEUGEOT / TOYOTA


The activation of the trailer indicator monitoring and cutoff of the vehicle's PDC must be carried out with the aid of the DIAGBOX tester as follows:


- choose vehicle
- delivery
- equipment
- trailer control unit (BSR)
- installation of equipment




27

11/14

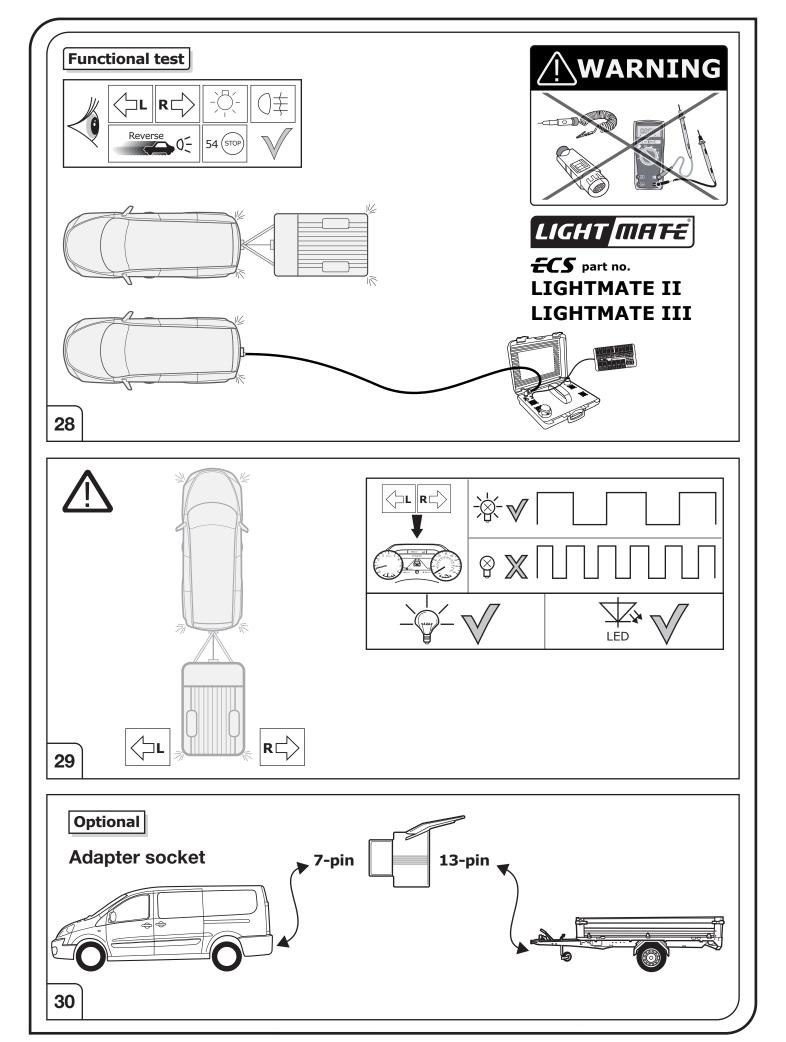


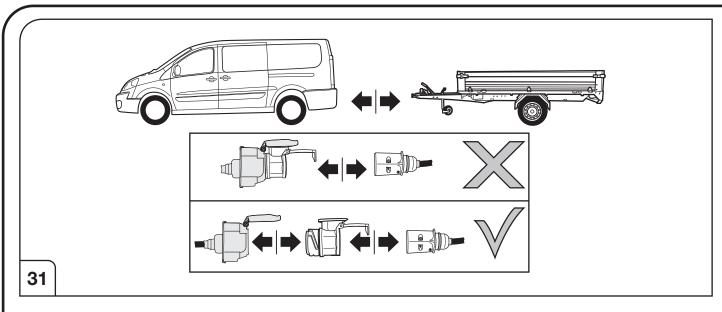


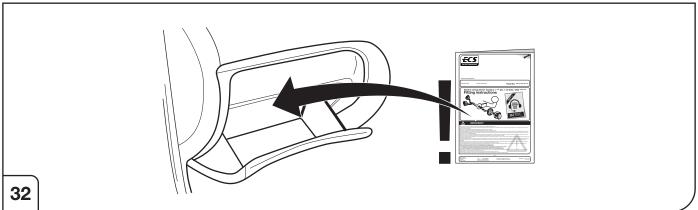

13/14

SOCKET CONNECTION

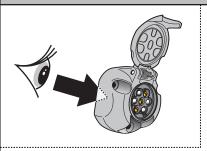

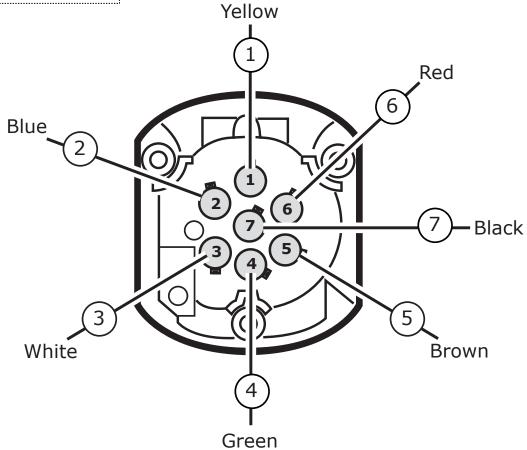

SOCKET CONNECTION

DIN/ISO	Çι	()≢	<u>-</u> 1-7	R➪	-\̈́-	STOP	-¤-
1724	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	52W	3x21W	52W
	Yellow	Blue	White	Green	Brown	Red	Black

14/14