



! INFO !

Do not charge the battery of the towing vehicle and/or towed vehicle directly via the socket.

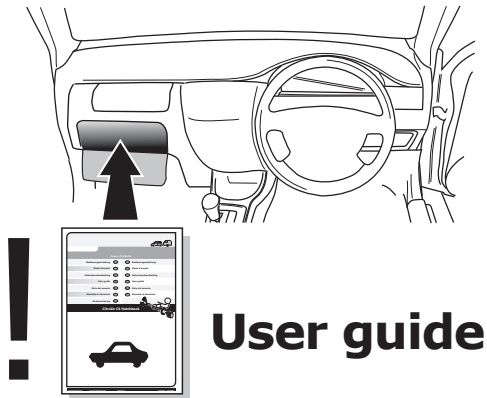

User guide

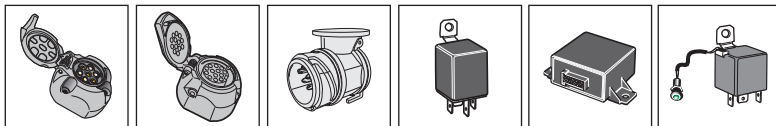


SPARE PARTS

www.ecs-electronicsuk.co.uk




Partnr.: HN-292-DHU









User Guide

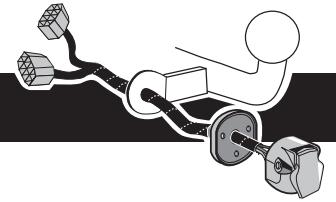


Honda CR-V 2007-

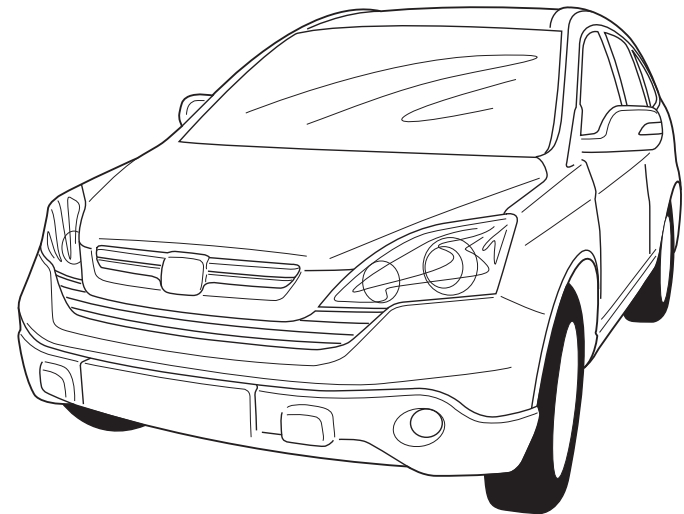



INFO

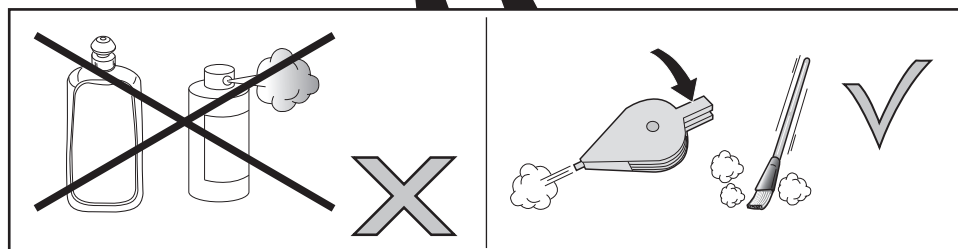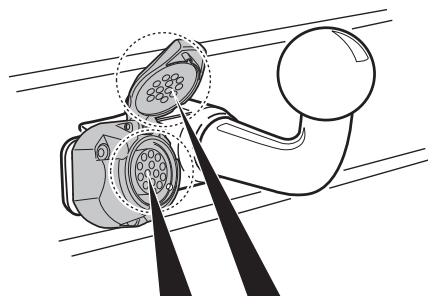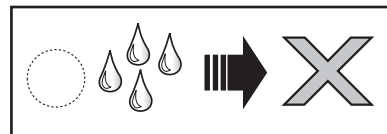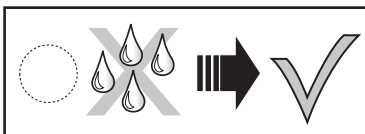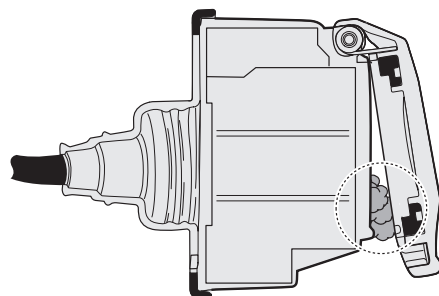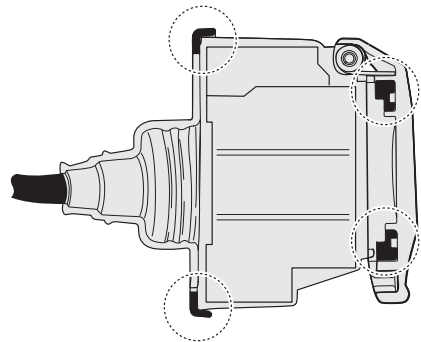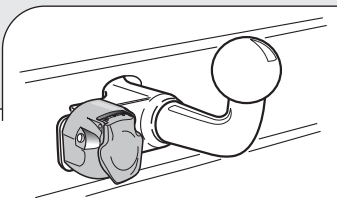 



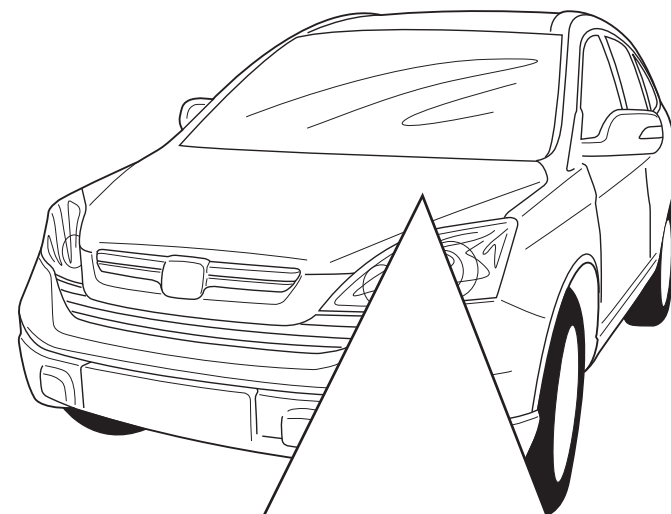



 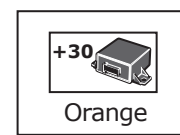







CHANGING THE FUSE



15 Amp.



SOCKET CONNECTION


DIN/ISO 11446															
	1/L	2	2a	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13	
Pmax	21W	2x21W			21W	52W	3x21W	52W	2x21W	180W/15Amp	180W/15Amp				
Colour	Yellow	Blue	Grey	White	Green	Brown	Red 1,00 mm²	Black	Black/ Red	Brown/ White	Red 2,50 mm²	White	Red/ Blue	White	




In a coupled trailer with working fog lamp, the fog lamp of the vehicle will be switched off, if applicable.



 The flashing lights on the trailer are monitored. If one of the indicators of the trailer breaks down, a buzzer will be audible and/or a visual signal will be visible on the dashboard. Check the flashing lights on the trailer.







 The brake lights on the trailer are monitored by the module. If all the brake lights on the trailer are defective, a buzzer is heard upon braking. Check the brake lights on the trailer.




The wiring kit has a possibility to switch off any Park Distance Control in the case of a coupled trailer.





INFO : Ring.

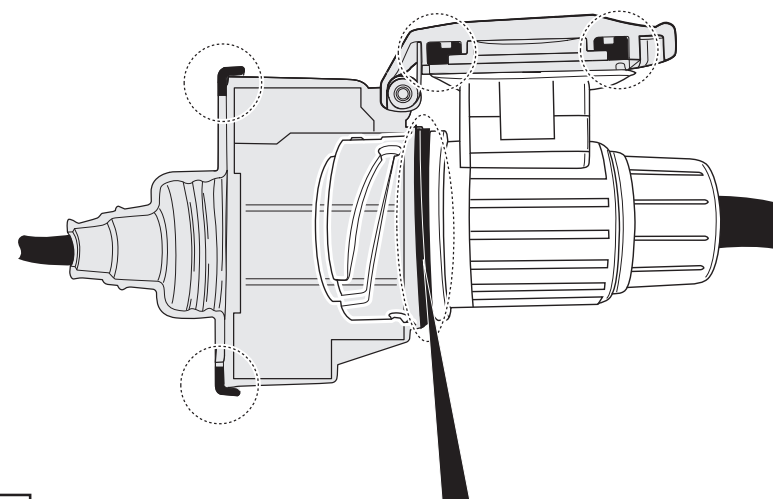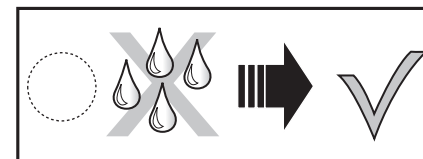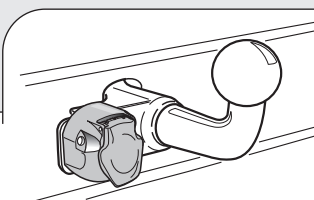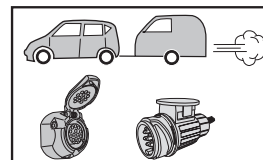





INFO

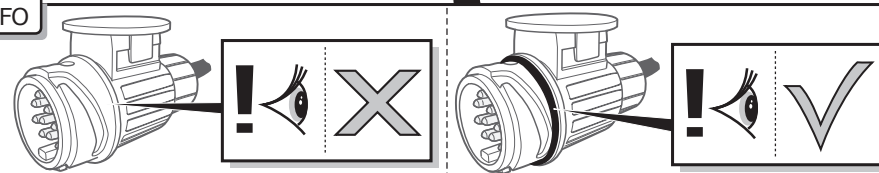

INFO : Adapt.

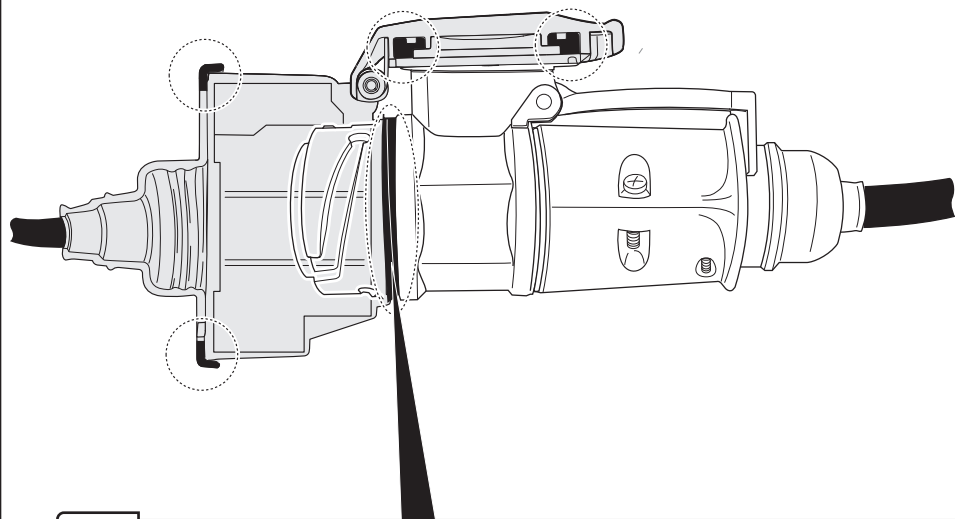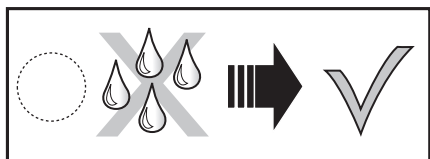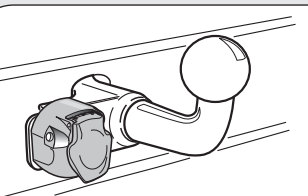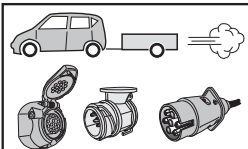

INFO

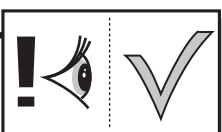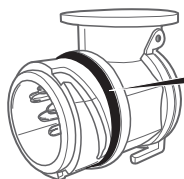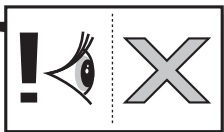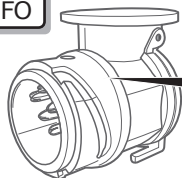

INFO : Storage

