

- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will resultin cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.

• Do not overload circuits; the maximum loads per connection are detailed in this manual.


 Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.

In the event of functional problems,
troubleshooting must be limited to about 0.5 hours,
contact the technical support:


t.skinner@ecs-electronics.com / 07440 202 052.




Part list

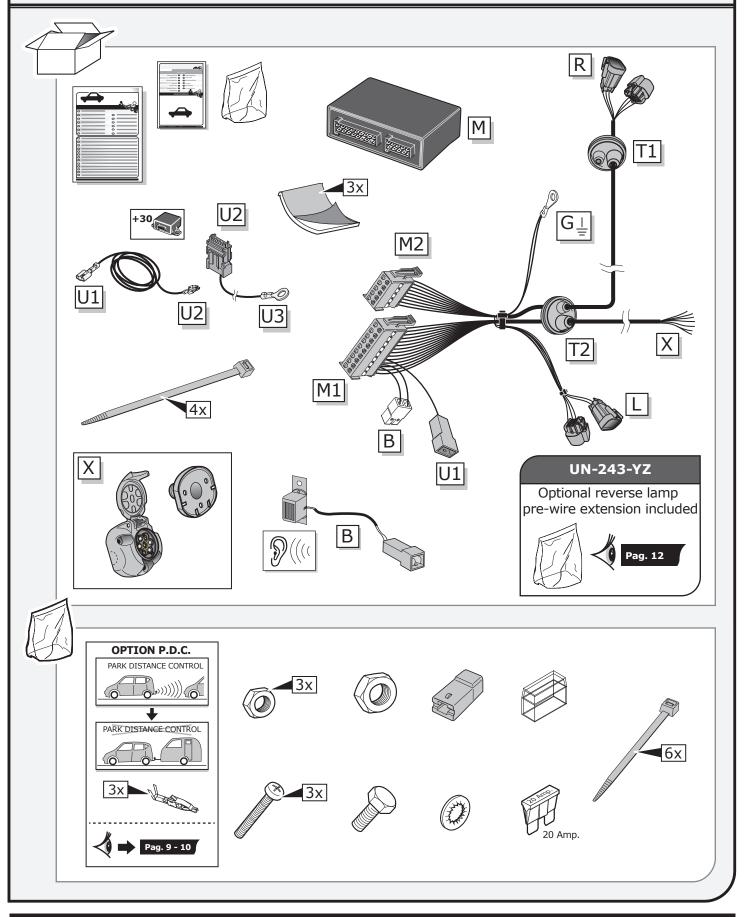



© ECS Electronics B.V. Pag. 2 OP-061-BHU / 290416TT

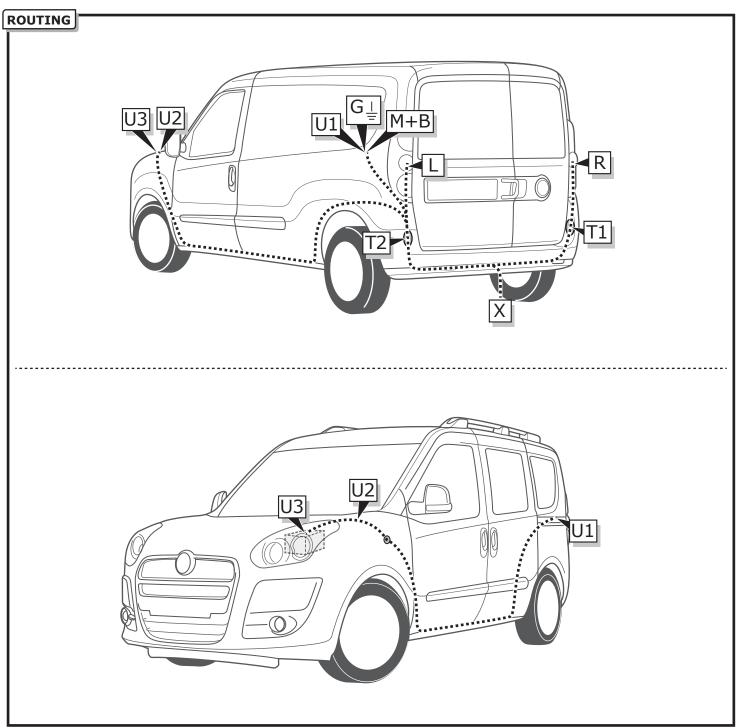


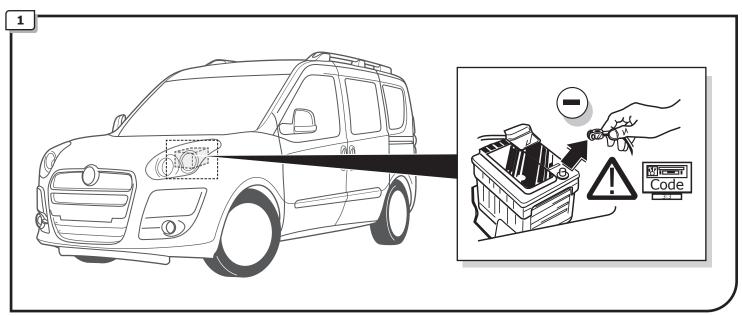


© ECS Electronics B.V. Pag. 3 OP-061-BHU / 290416TT

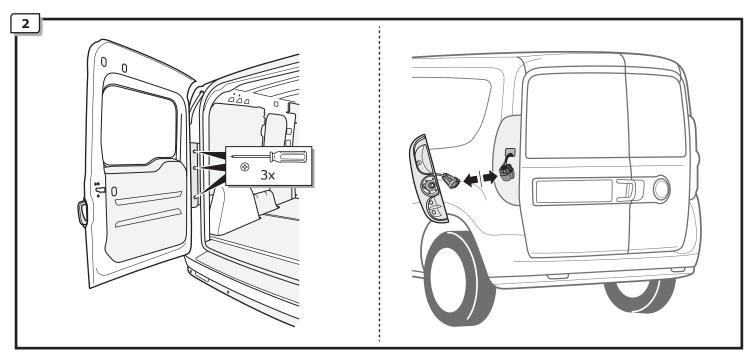


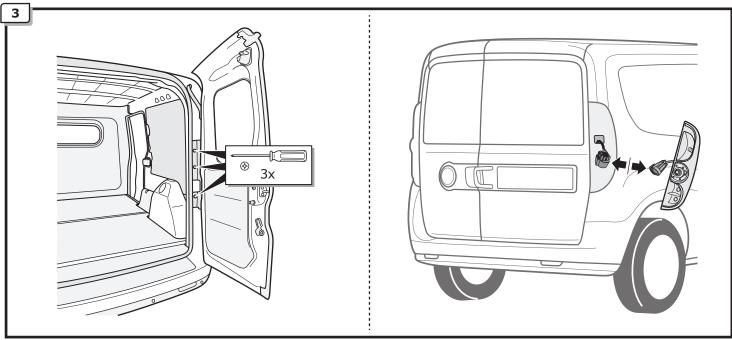


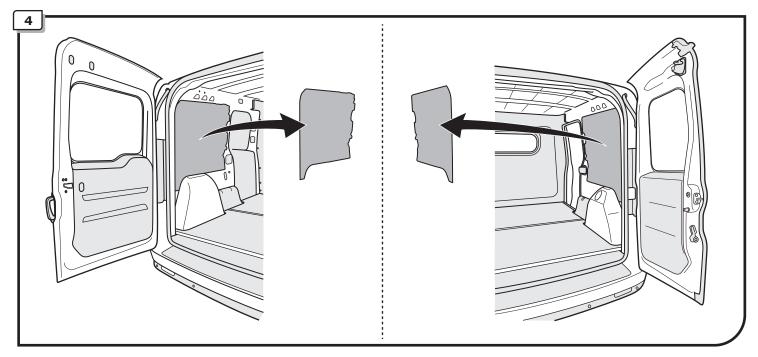


© ECS Electronics B.V. Pag. 4 OP-061-BHU / 290416TT

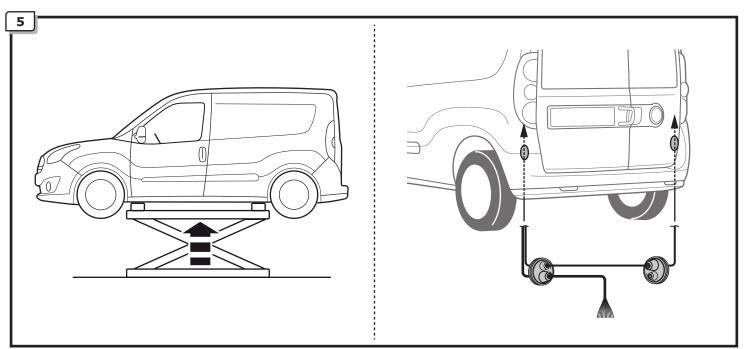


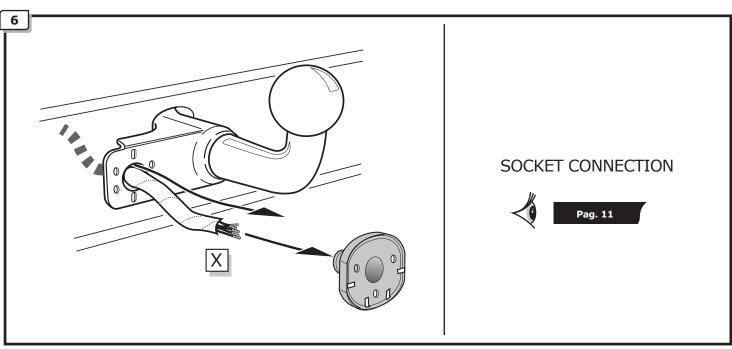


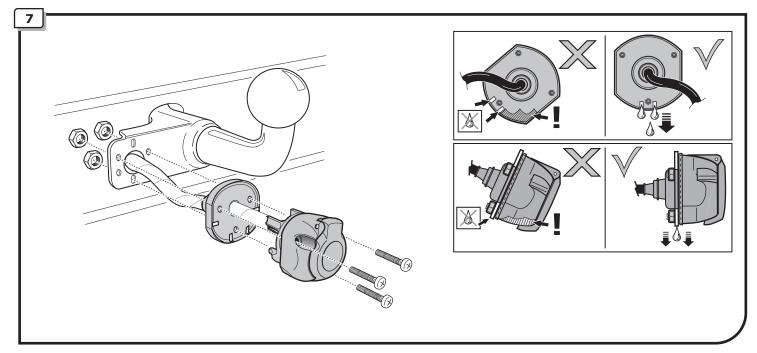


© ECS Electronics B.V. Pag. 5 OP-061-BHU / 290416TT

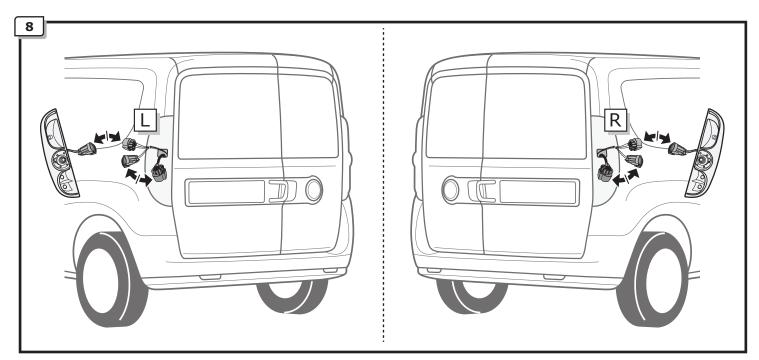


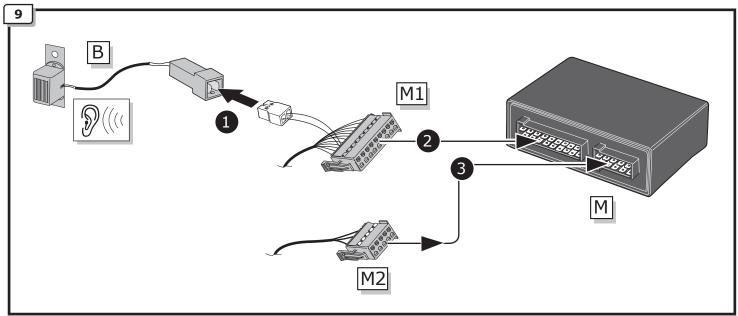


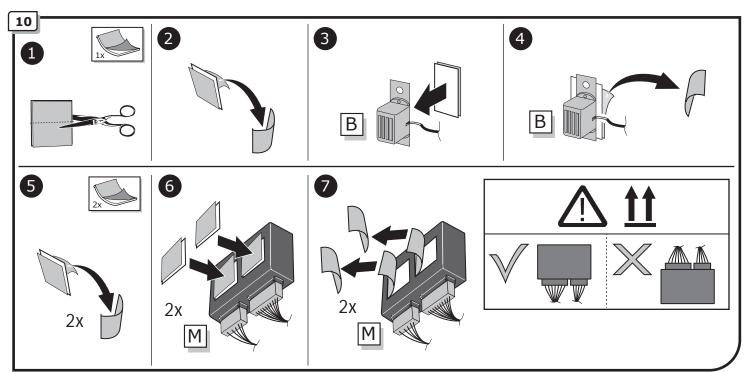

© ECS Electronics B.V. Pag. 6 OP-061-BHU / 290416TT

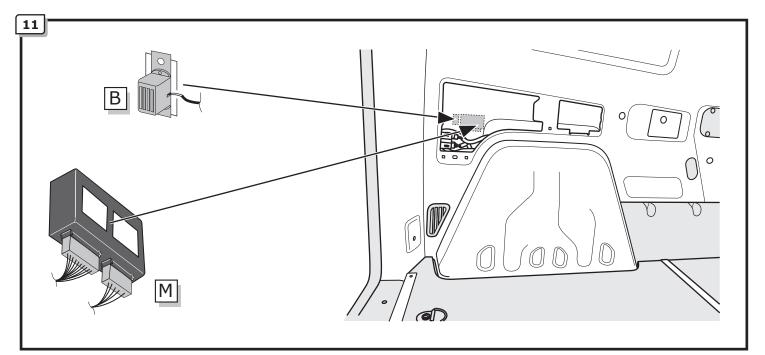


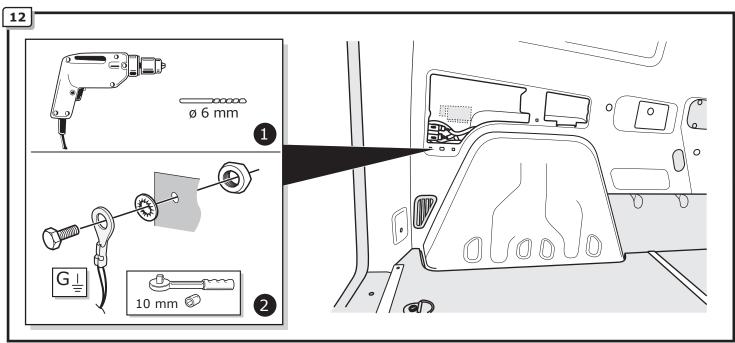

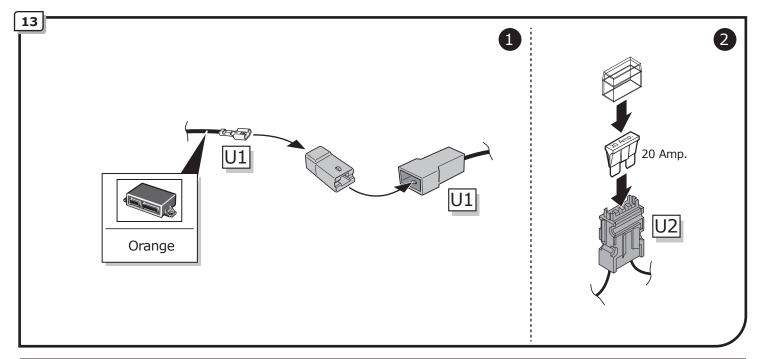

© ECS Electronics B.V. Pag. 7 OP-061-BHU / 290416TT



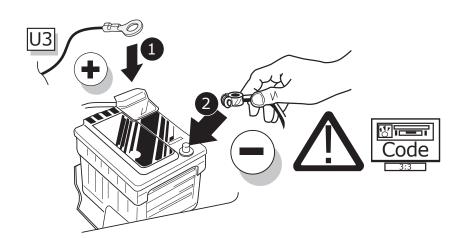


15

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.


INFO

REINSTALL TRIM.

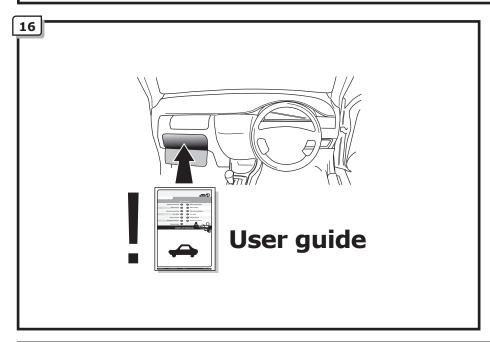



AUTO PARK-SENSOR SWITCH-OFF FUNCTION WITH THE 5D033 ECU FOR AFTER MARKET / NON-OE PARK-SENSOR-SYSTEMS

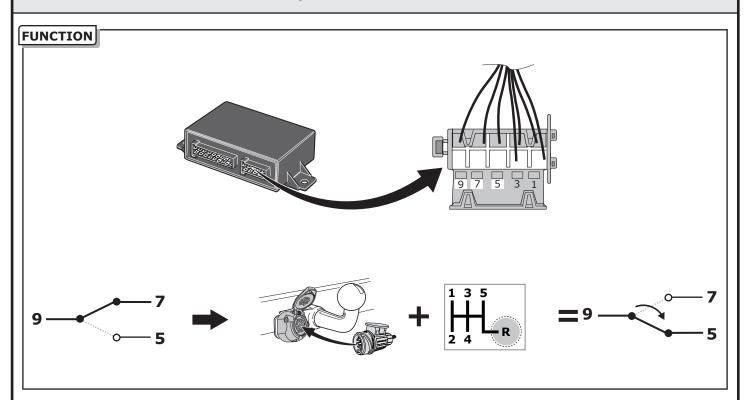

INFO





Locate the **PDC** (Parking Sensor) Module in the Vehicle.


OPTION 1 When the PDC-system has no specific MUTE wire: Locate and cut the wire at ONE of the locations A-G and connect to the ECS Towbar Wiring Kit as shown in Option 1. Always check if cutting the wire at the selected location does not create any errors in the PDC-system or the vehicle, if so, then select another location. In this case the cut wire is connected and the system operates normally. When the trailer is connected. This wire becomes disconnected by the Trailer Module. If the same module also controls the Front Sensors then use only locations F or G to prevent the front sensors switching off.


OPTION 2 When the PDC-system has a specific **MUTE** wire: Check in the manual of the PDC-sysctem which input the PDC module requires to switch off the system (+12v **or** Earth trigger). Then connect the Trigger wire of the PDC system to pin 9 of the ECS connector, and connect the required feed (+12v **or** Earth) to pin 7 and 5.


Be careful as connecting the wrong feed can cause damage to the PDC-system. Always check Before and After installation the PDC System is working correctly, and where possible any error codes.

© ECS Electronics B.V. Pag. 9 OP-061-BHU / 290416TT

AUTO PARK-SENSOR SWITCH-OFF FUNCTION WITH THE 5D033 ECU FOR AFTER MARKET / NON-OE PARK-SENSOR-SYSTEMS

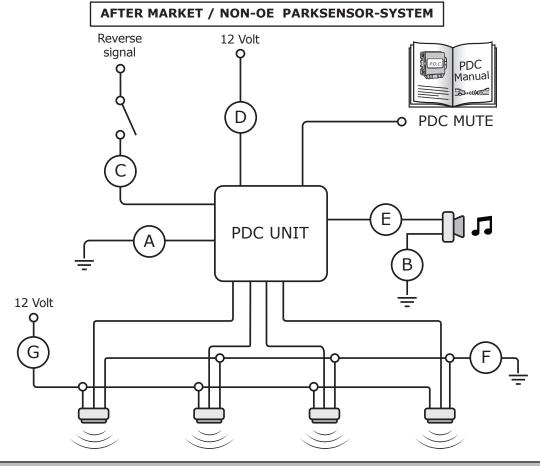

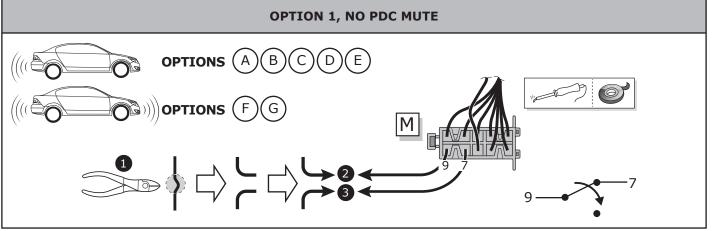

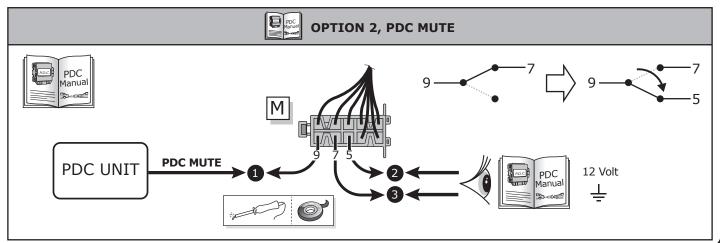

© ECS Electronics B.V. Pag. 10 OP-061-BHU / 290416TT


INFO

SOCKET CONNECTION

DIN/ISO	Ŷ	◆ ○≢	<u></u> 1-7	\Rightarrow	-¦Ç-	STOP	- <u>'</u> Ö-
1724	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	2x21W		21W	52W	3x21W	52W
Colour	Yellow	Blue	White	Green	Brown	Red	Black

© ECS Electronics B.V. Pag. 11 OP-061-BHU / 290416TT

UN-243-YZ Reverse lamp pre-wire extension

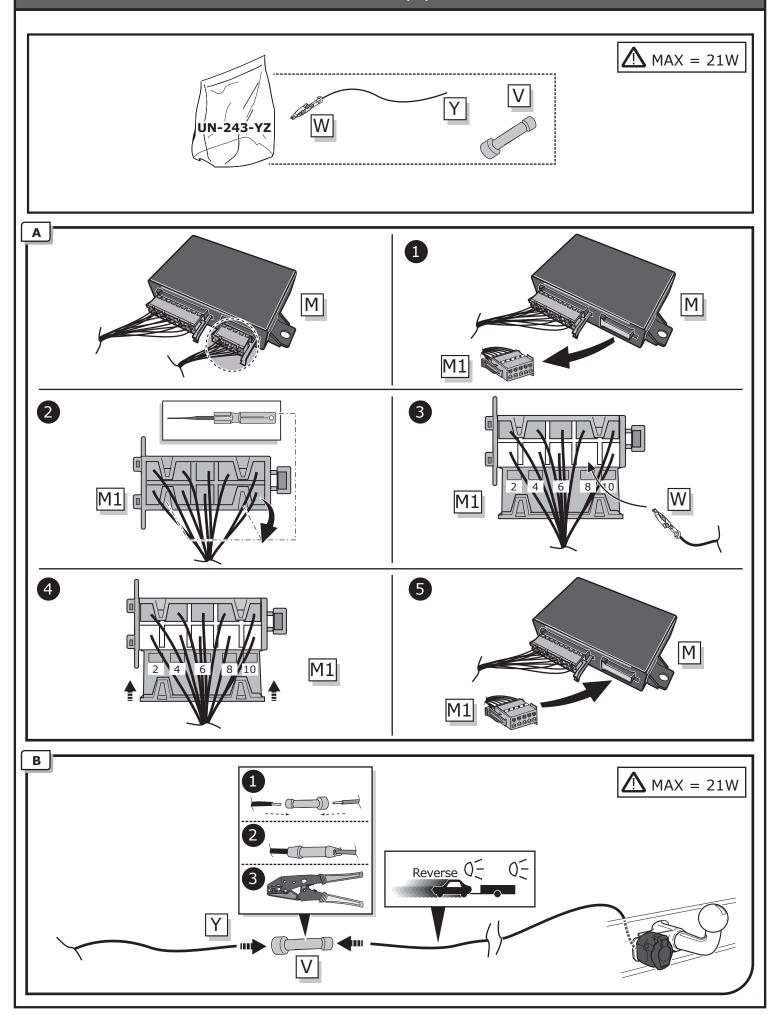

© ECS Electronics B.V. Pag. 12 OP-061-BHU / 290416TT