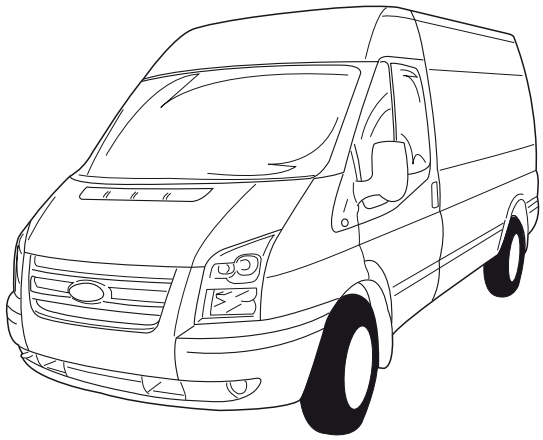

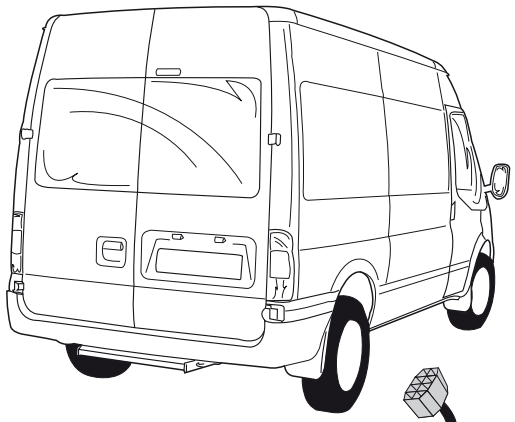

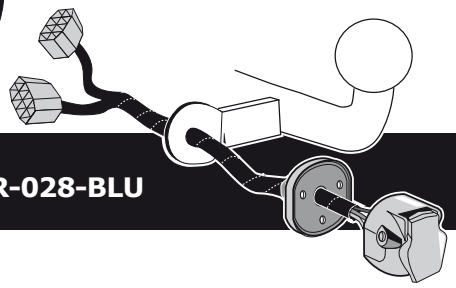

Ford Transit 01/2000 - 06/2006
Ford Transit 07/2006-

Partnr.: FR-028-BLU

• Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.

• We would expressly point out that assembly not carried out properly by a competent installer will resultin cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.

• Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.

• Do not overload circuits; the maximum loads per connection are detailed in this manual.

• Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.

• In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support: ukts@ecs-electronics.com / 07440 202 052.

Part list

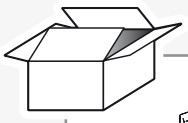

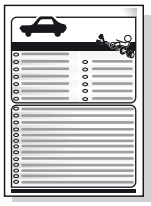

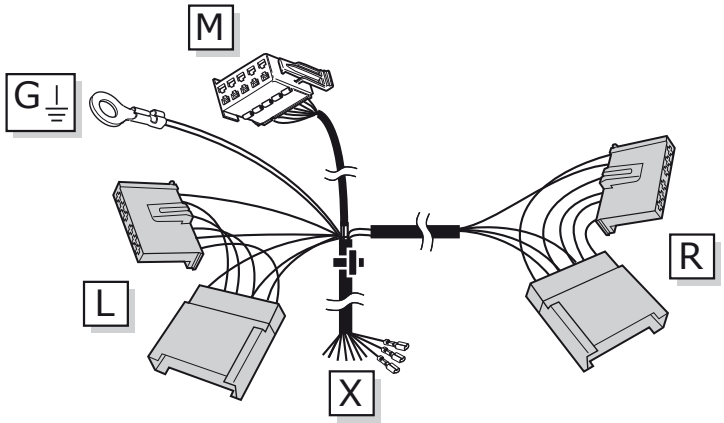

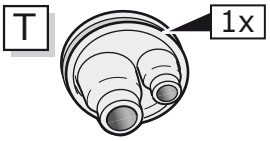

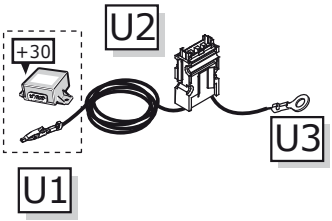

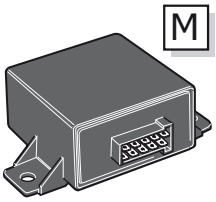

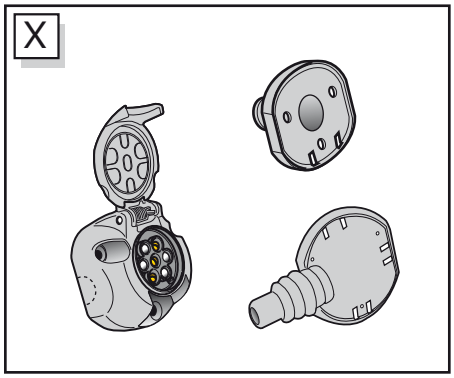

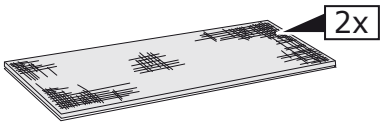

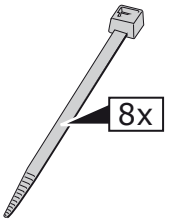

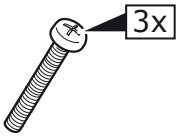



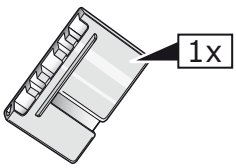

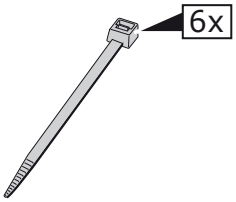

ROUTING

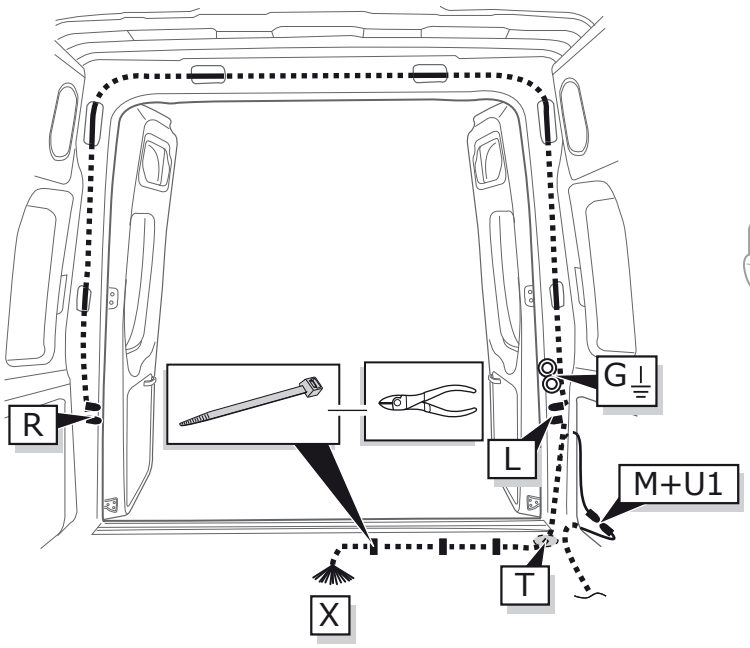

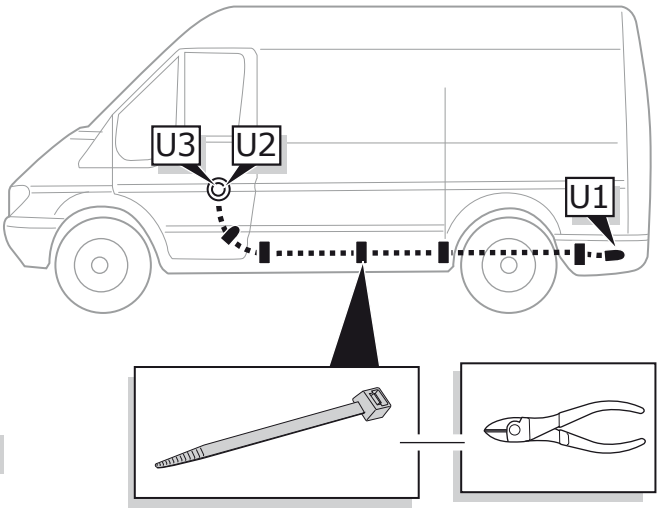

1

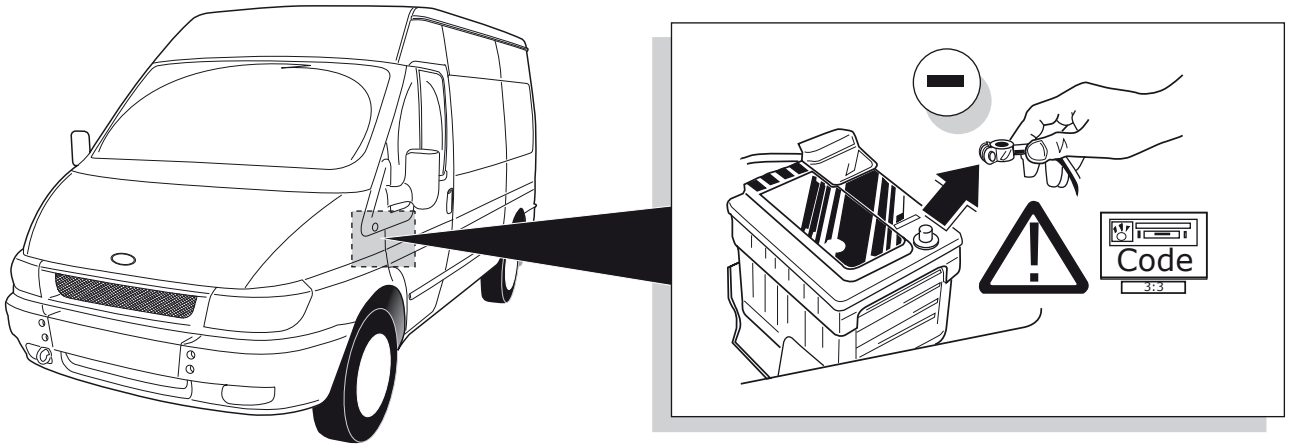

2

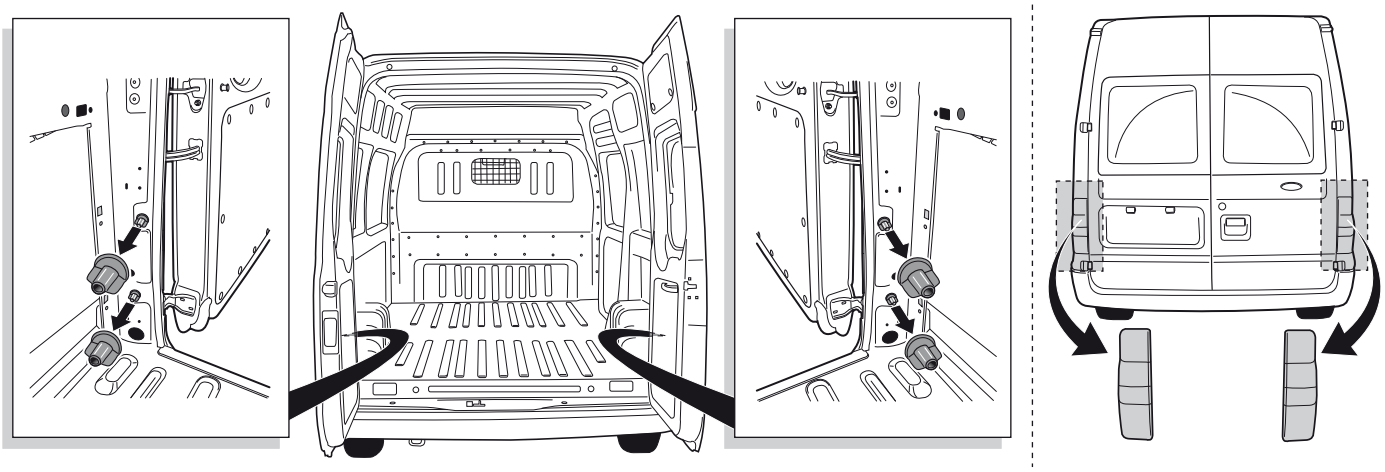

3

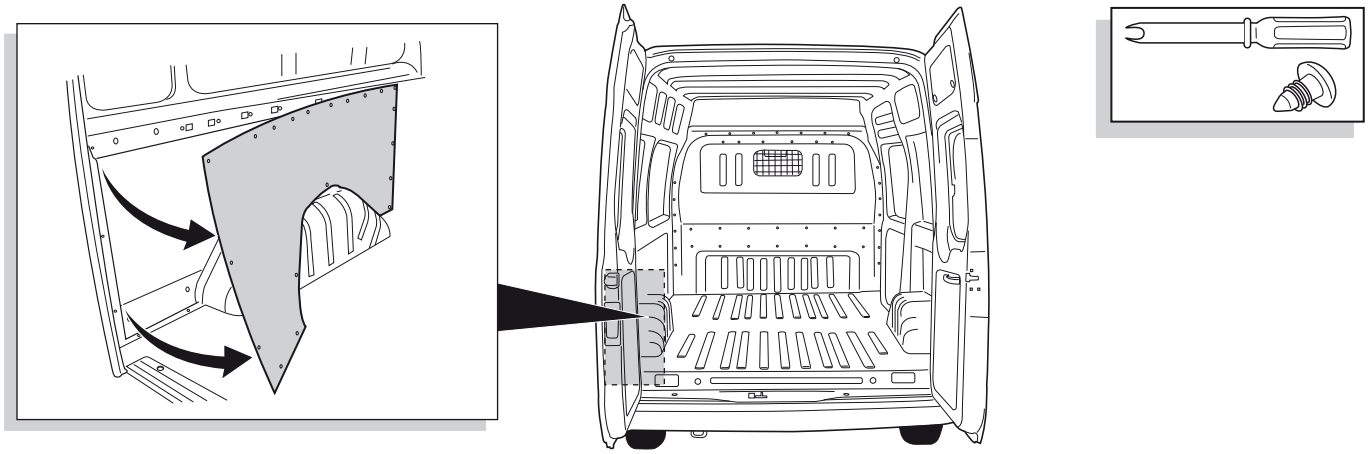

4

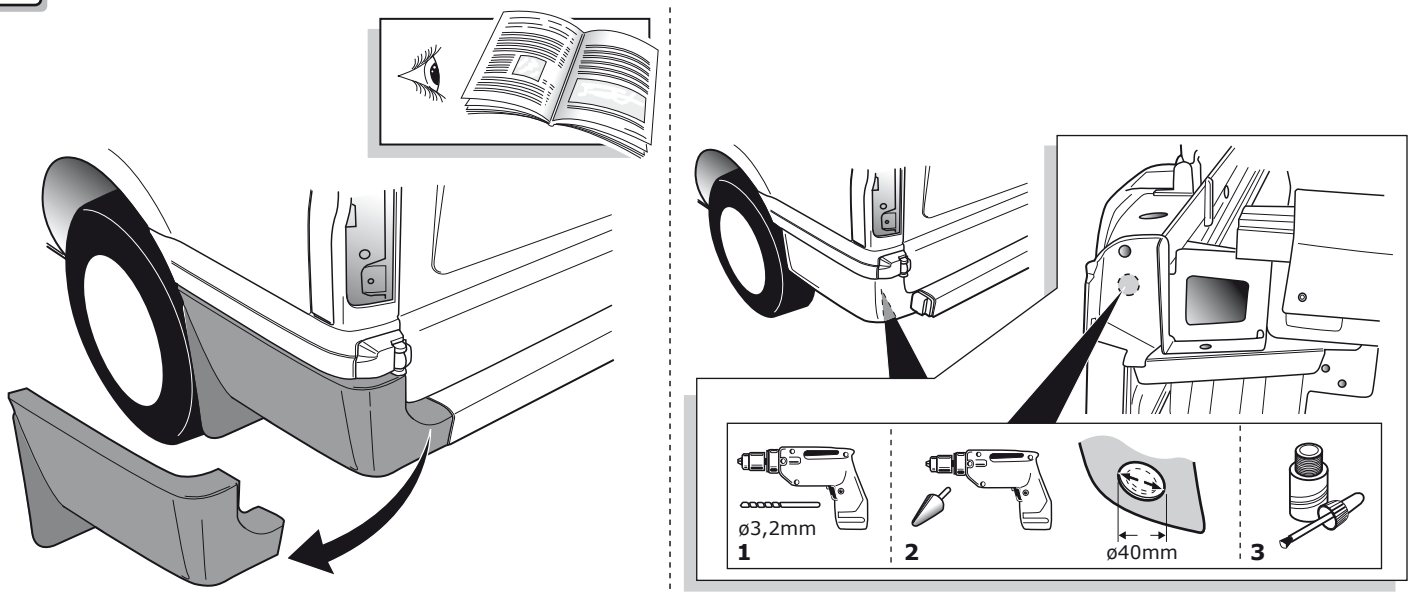

5

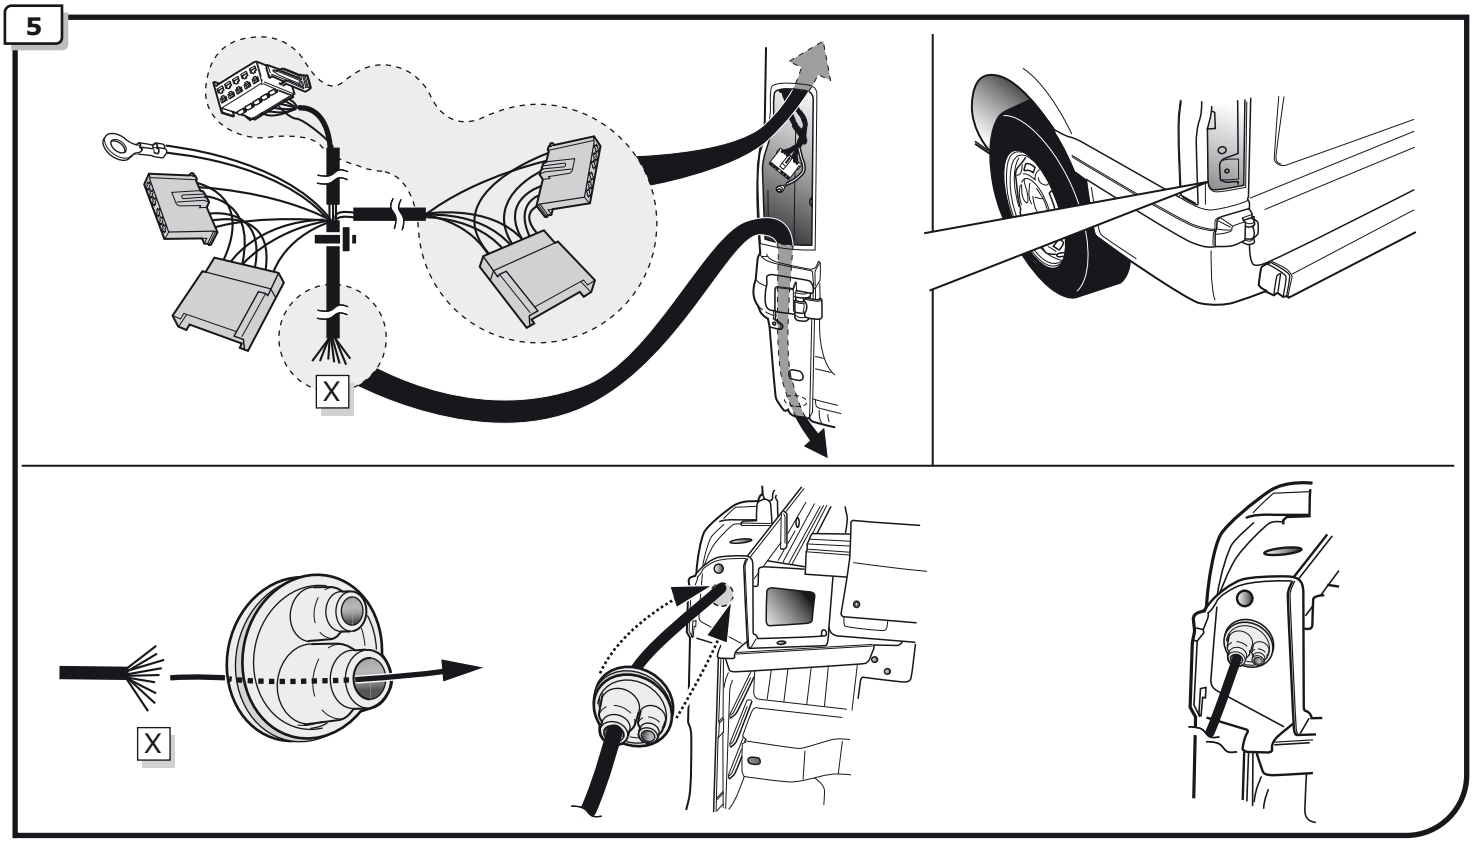

© ECS Electronics B.V.

A

Option 1

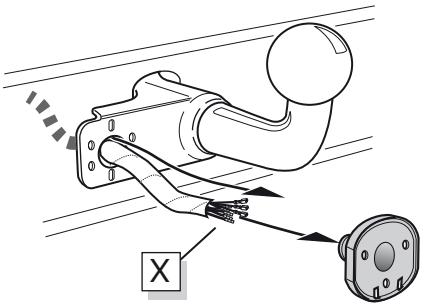

Option 2

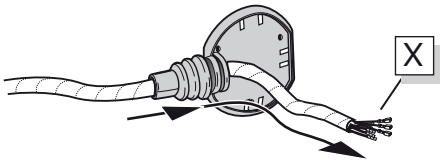

Option 3

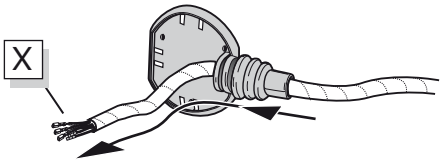

INFO

SOCKET CONNECTION

Pag. 9

B

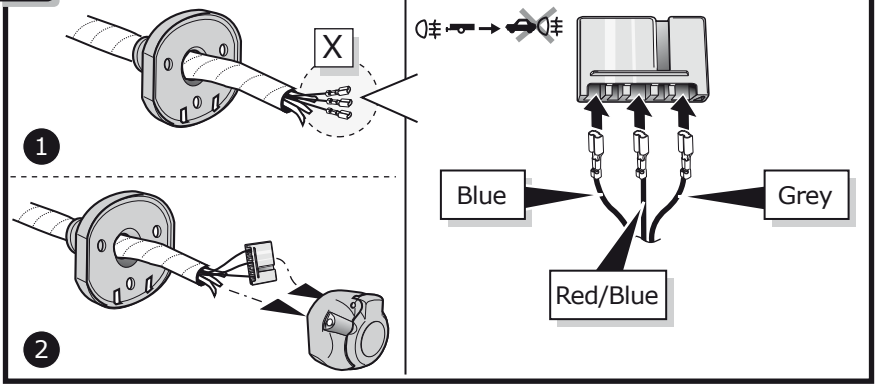

C

Option 1

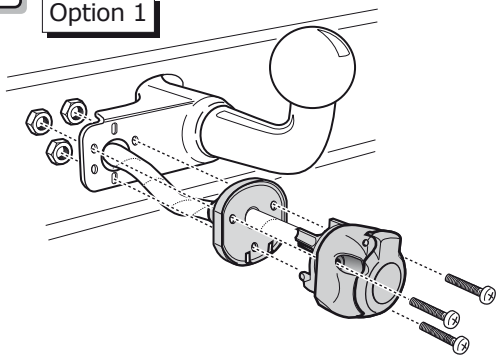

D

Option 2

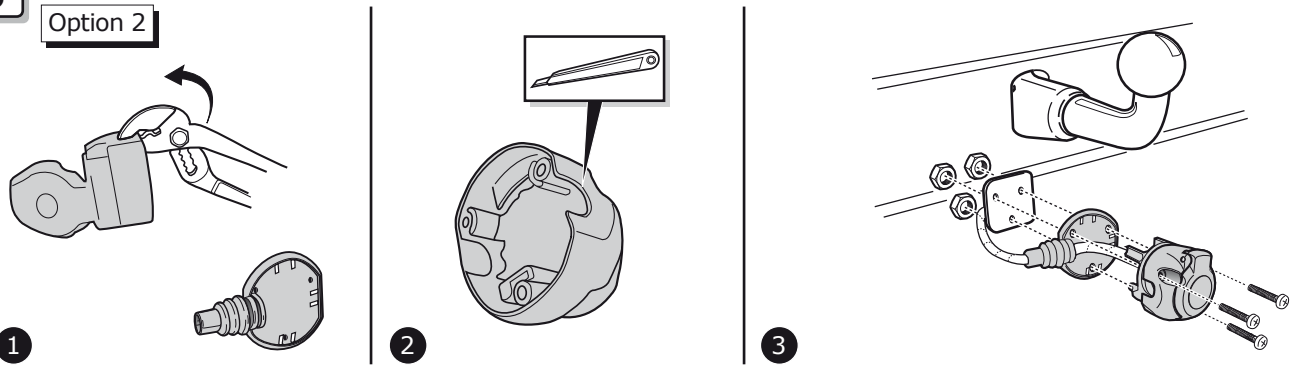

E

Option 3

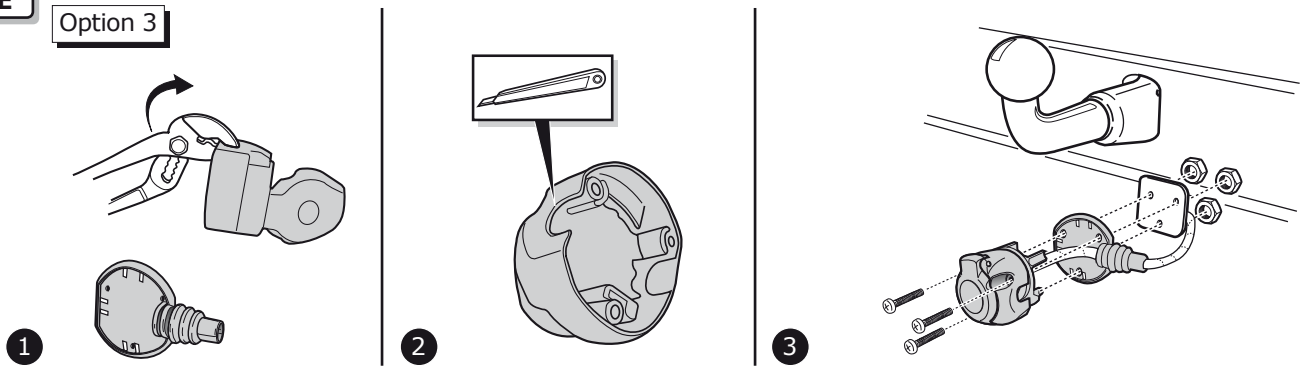

© ECS Electronics B.V.

6

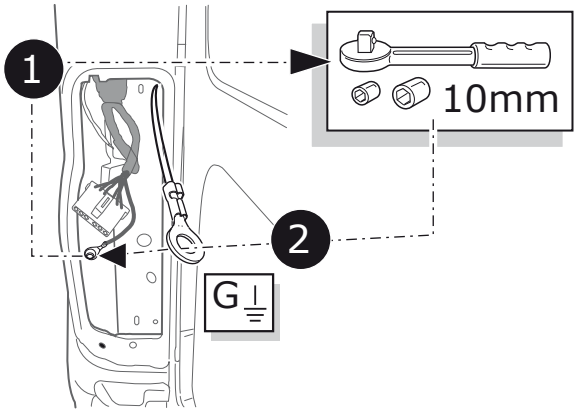

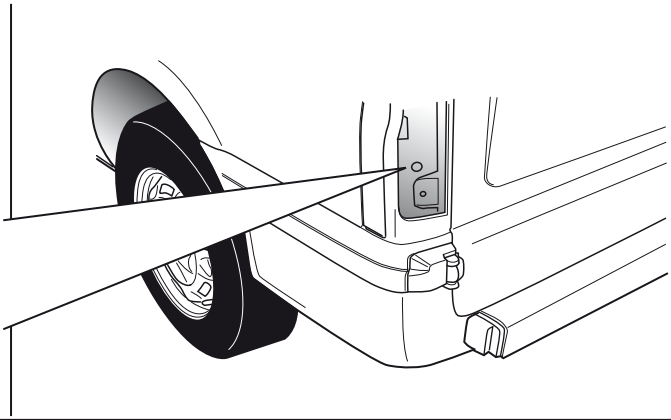

7

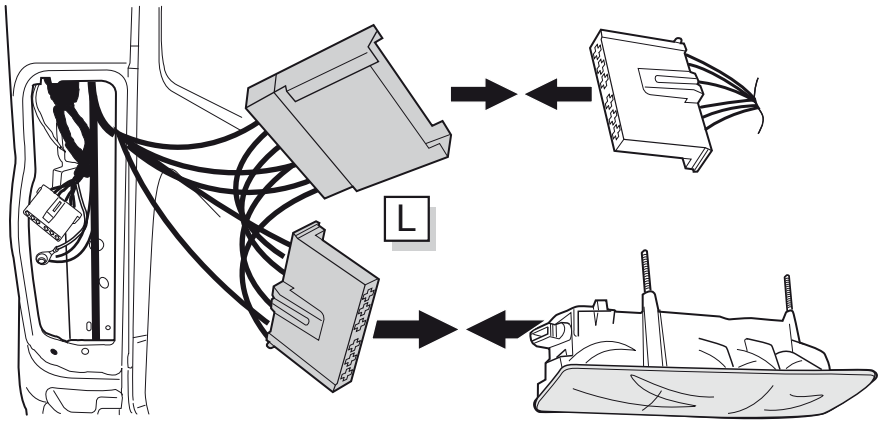

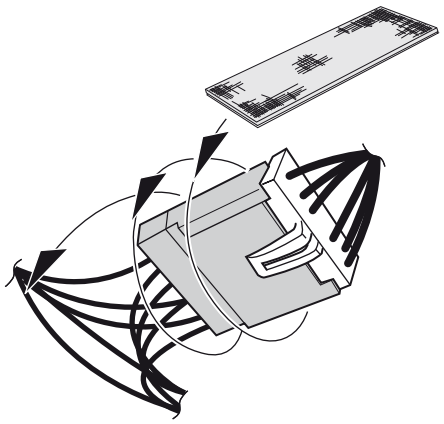

8

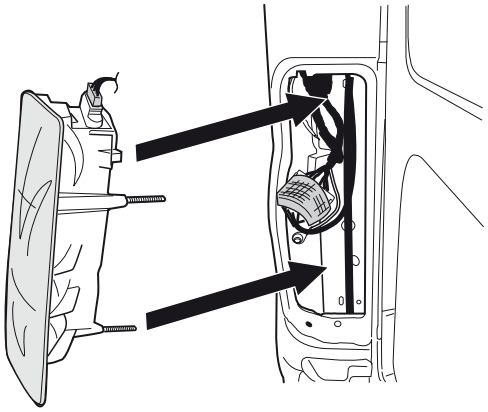

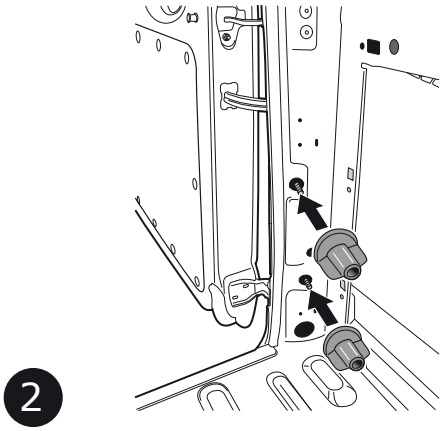

9

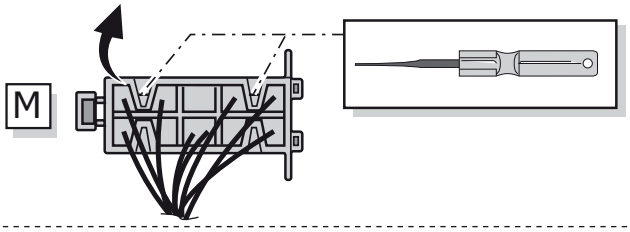

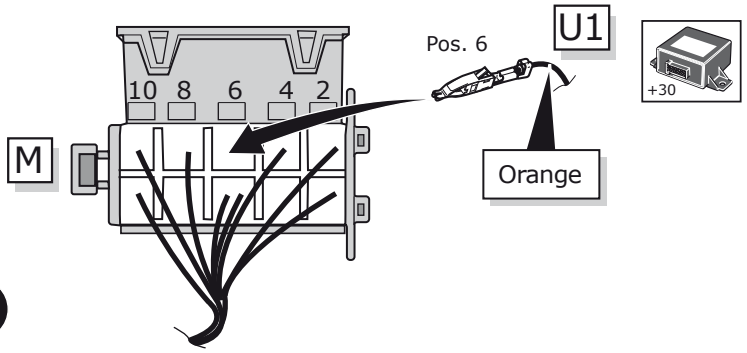

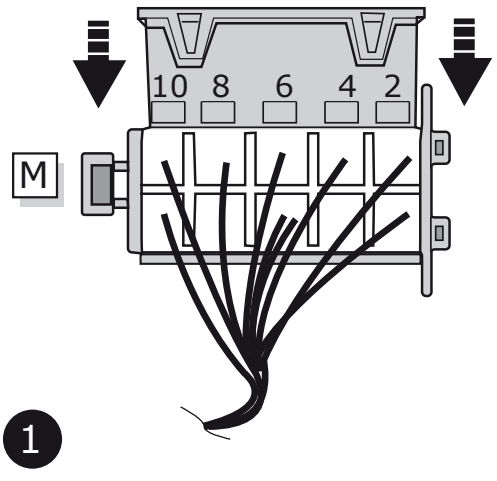

10

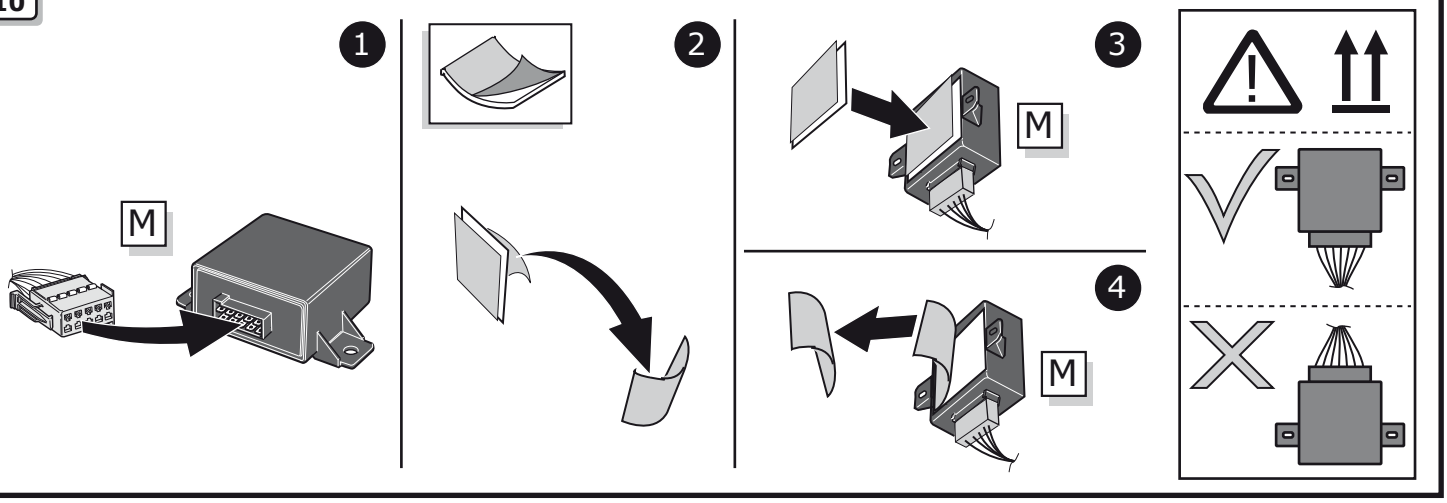

11

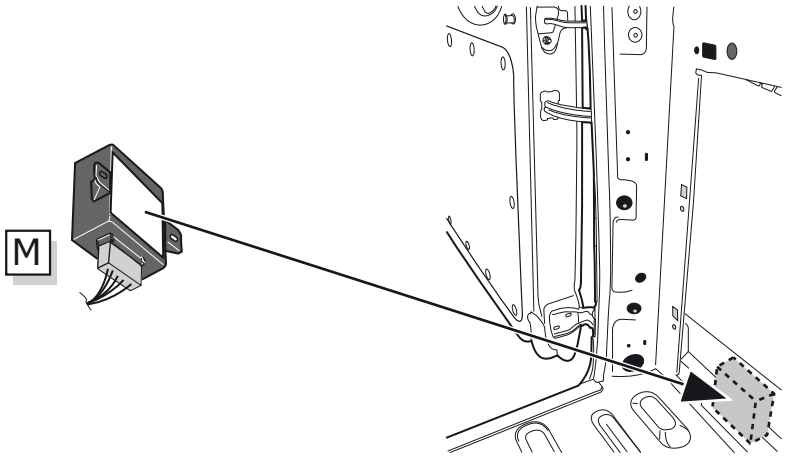

12

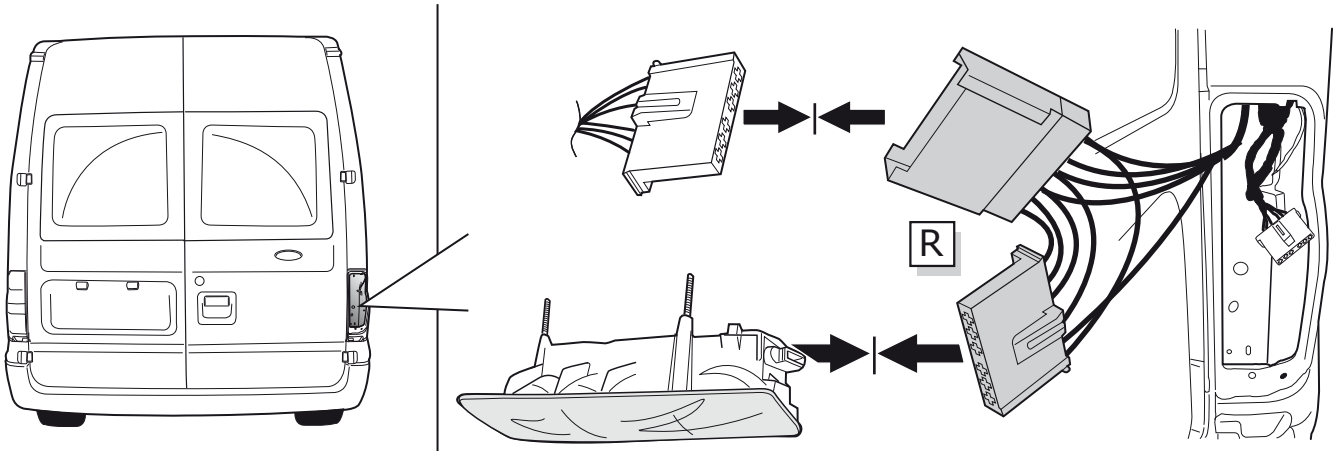

13

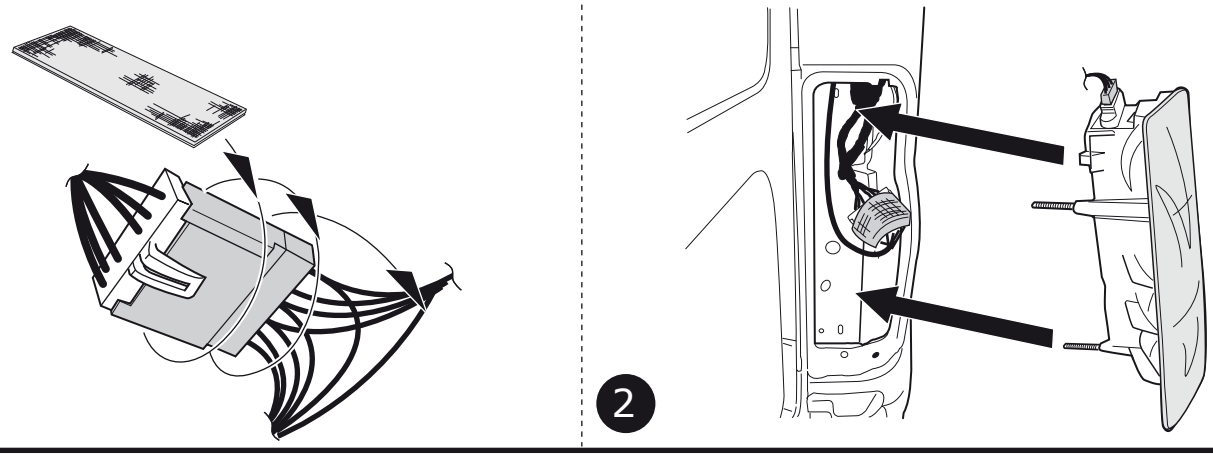

14

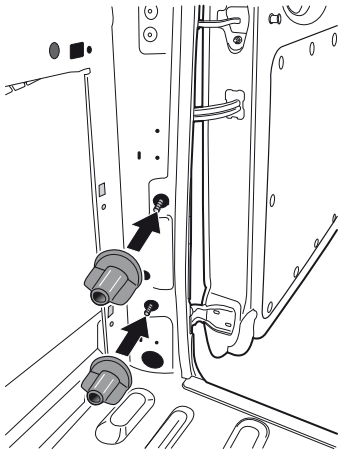

15

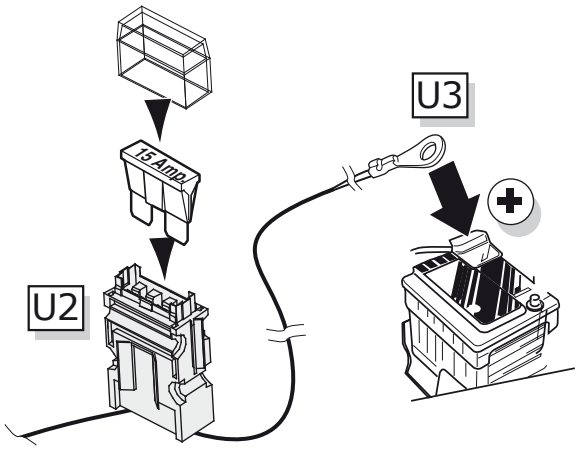

16

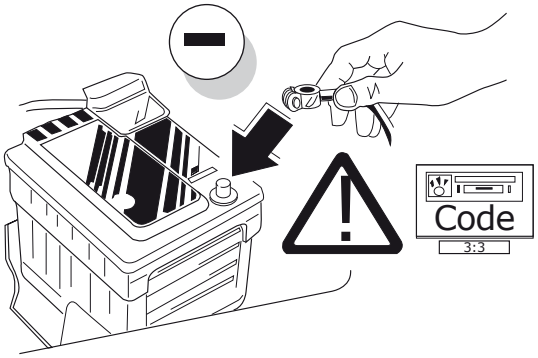

17

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

18

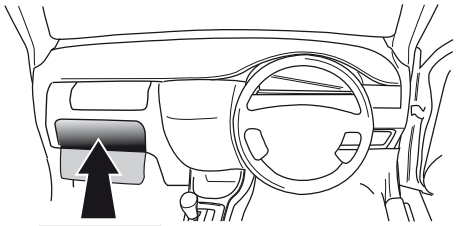

User guide

INFO

SOCKET CONNECTION

DIN/ISO 1724	⇦		⏚ 1-7	⇨		STOP	
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	2x21W		21W	52W	3x21W	52W
Colour	Yellow	Blue	White	Green	Brown	Red	Black