



! INFO !

Do not charge the battery of the towing vehicle and/or towed vehicle directly via the socket.

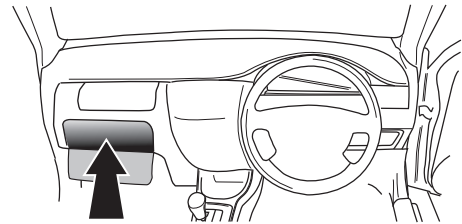

User guide

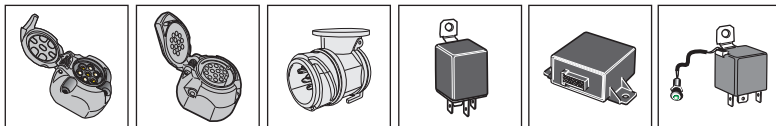


SPARE PARTS

www.ecs-electronicsuk.co.uk










Partnr.: RN-136-BHU

User Guide

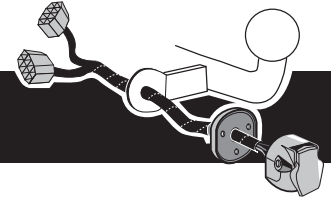


**Renault Scénic 11/2016-
Renault Grand Scénic 12/2016-**

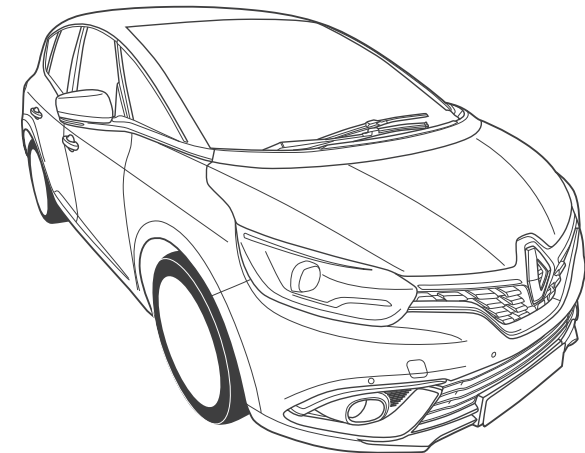

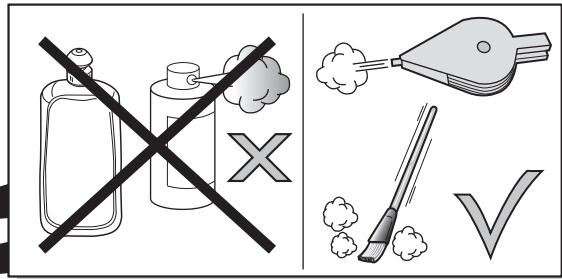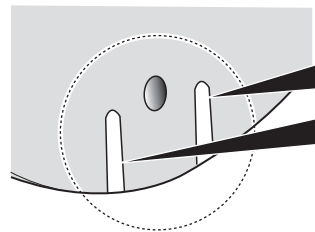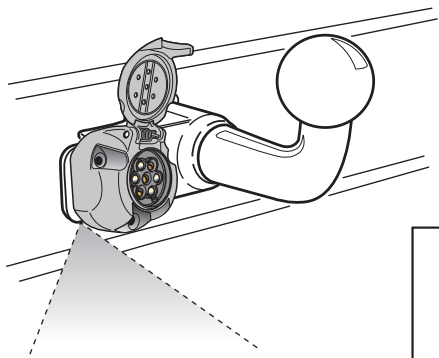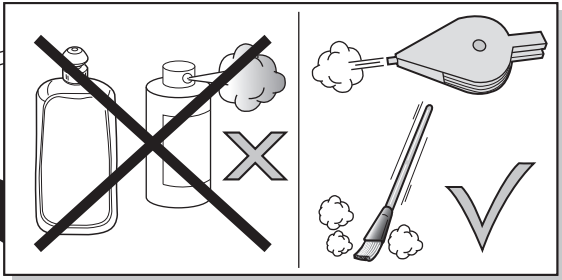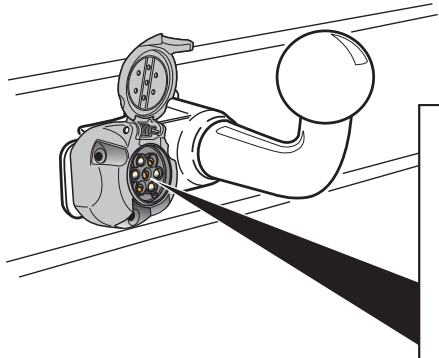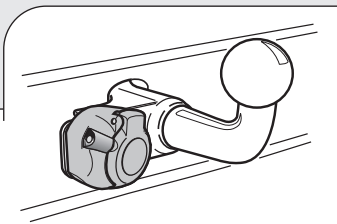







Changing the fuse

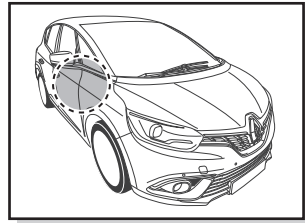






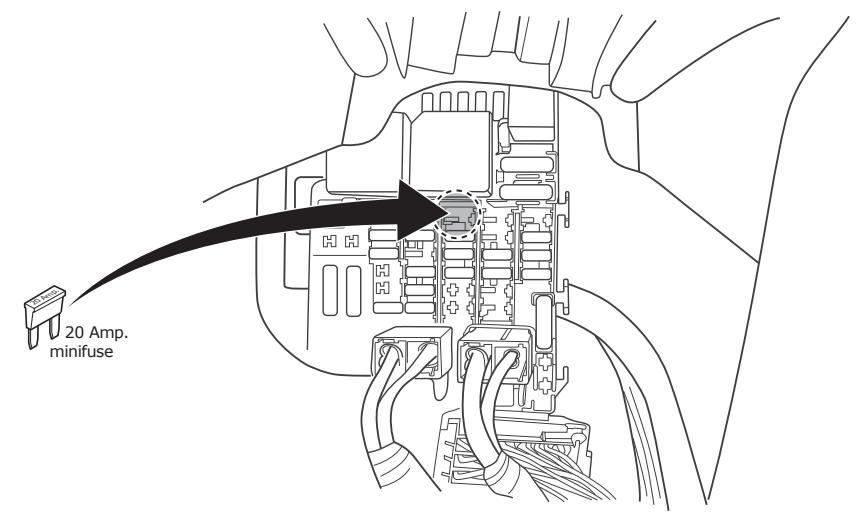

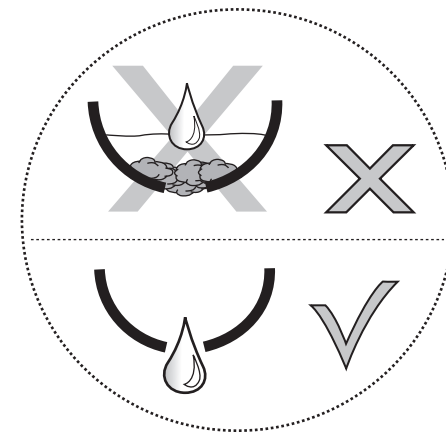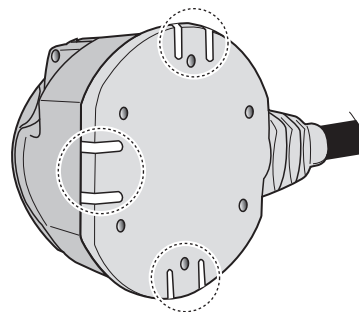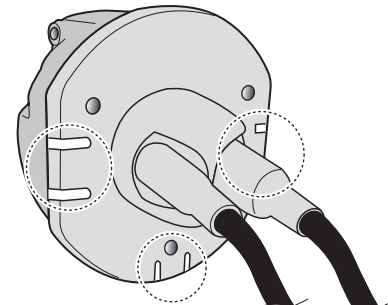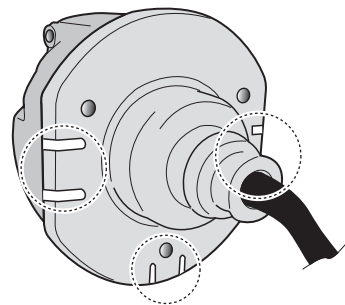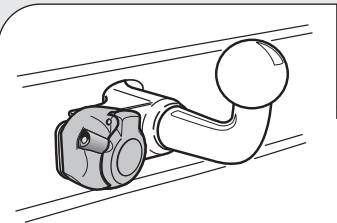Scénic

Grand Scénic



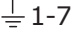


SOCKET CONNECTION

DIN/ISO 1724			 1-7				
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	2x21W		21W	52W	3x21W	52W
Colour	Yellow	Blue	White	Green	Brown	Red	Black



In a coupled trailer with working fog lamp, the fog lamp of the vehicle will be switched off, if applicable.

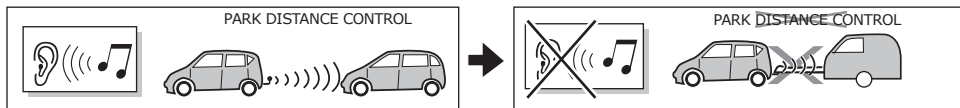

The wiring kit has a possibility to switch off any Park Distance Control in the case of a coupled trailer.