


Mitsubishi ASX
Citroën Aircross
Peugeot 4008



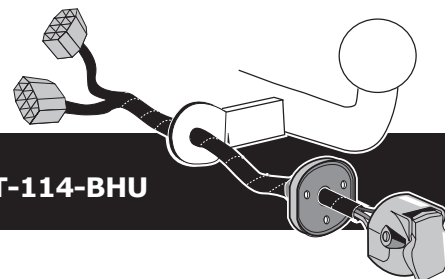


Partnr.: MT-114-BHU

- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.



Part list

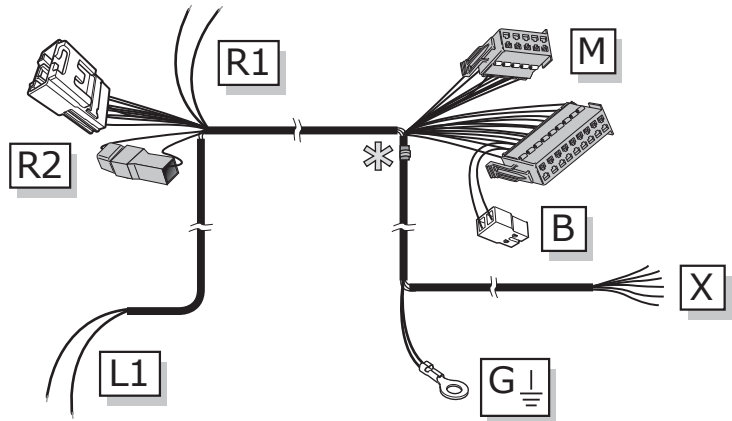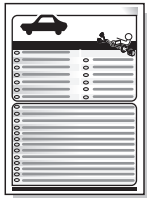



UN-243-YZ


Optional reverse lamp pre-wire extension included



Pag. 13

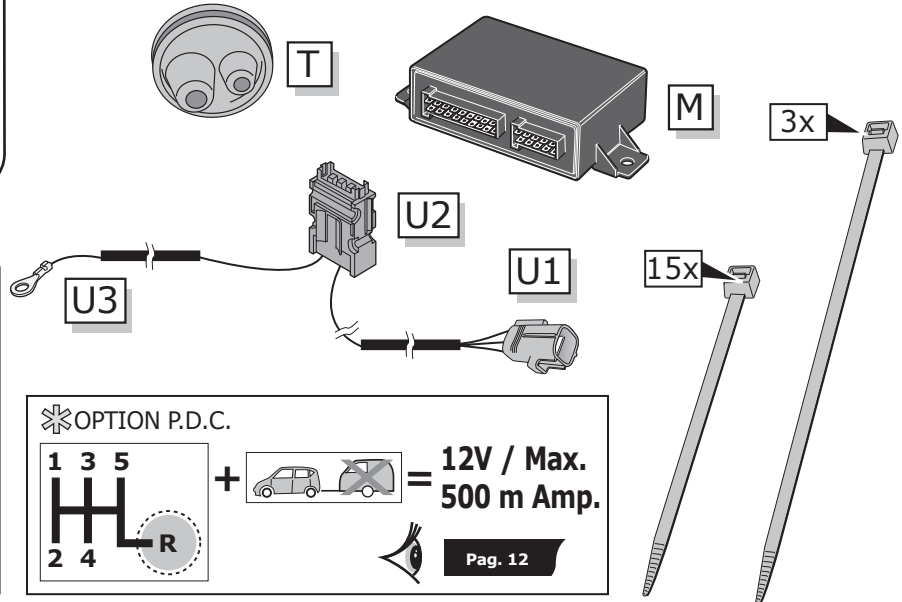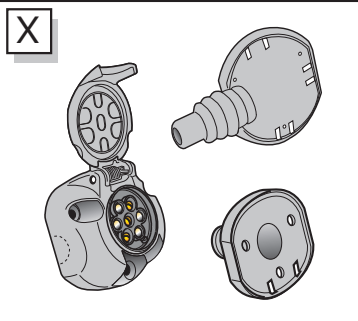








*OPTION P.D.C.


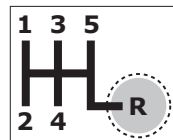


+ = 12V / Max. 500 m Amp.




Pag. 12

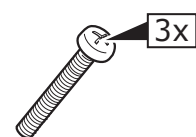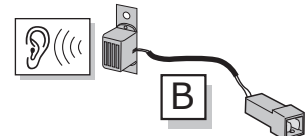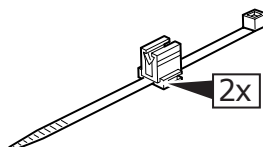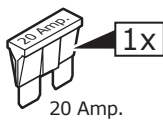


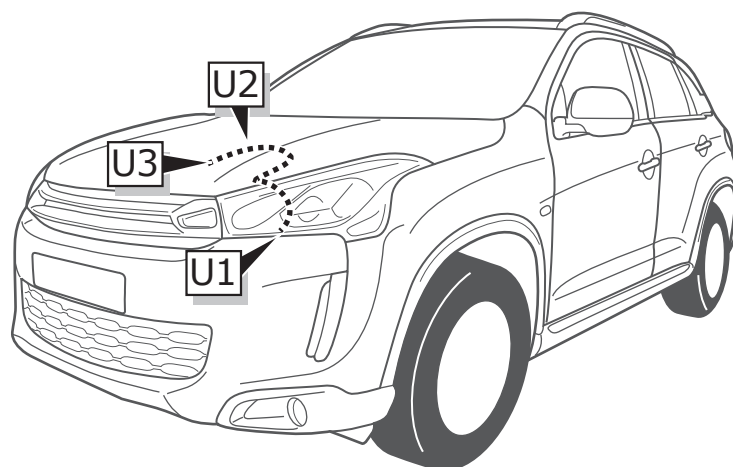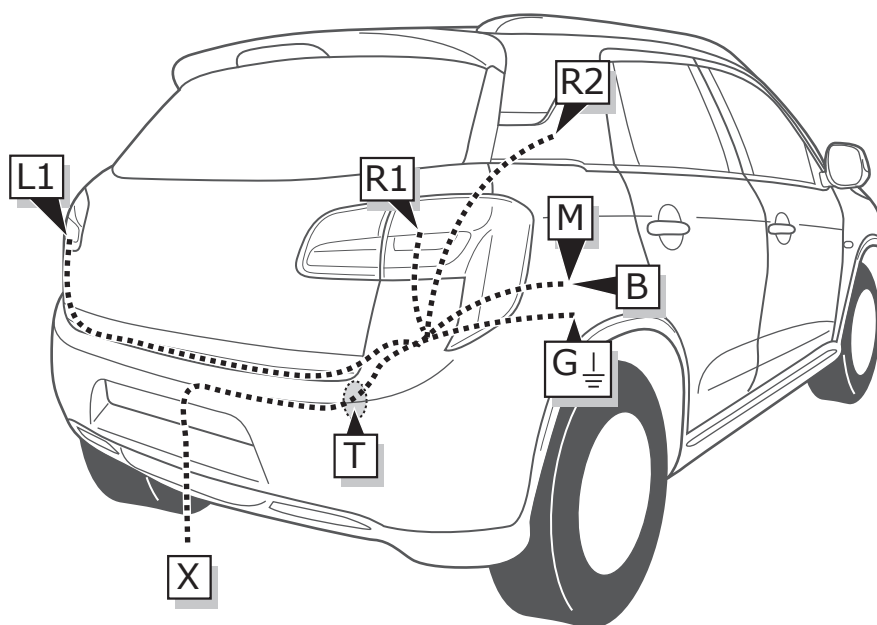


1

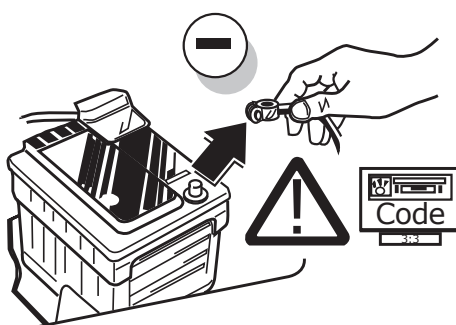


2

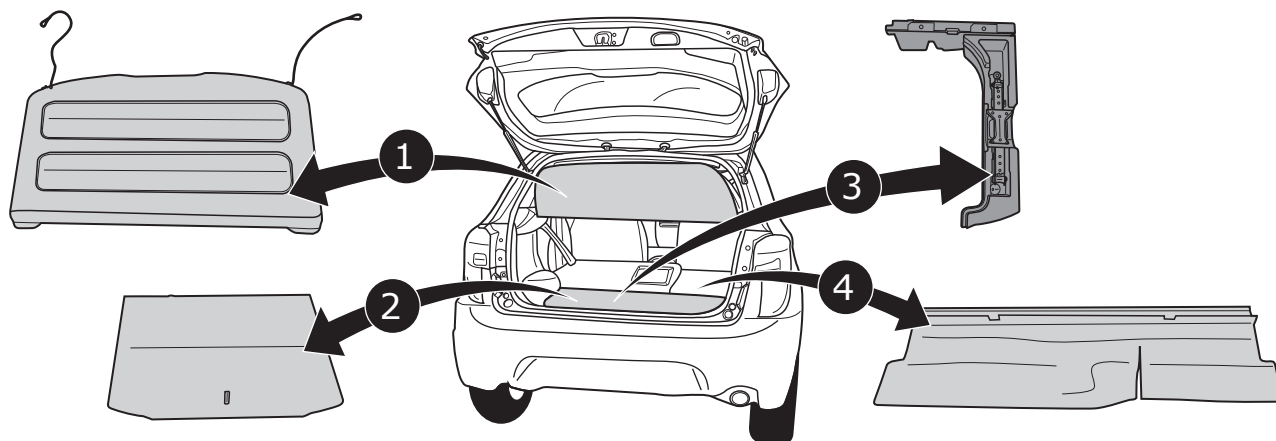



3

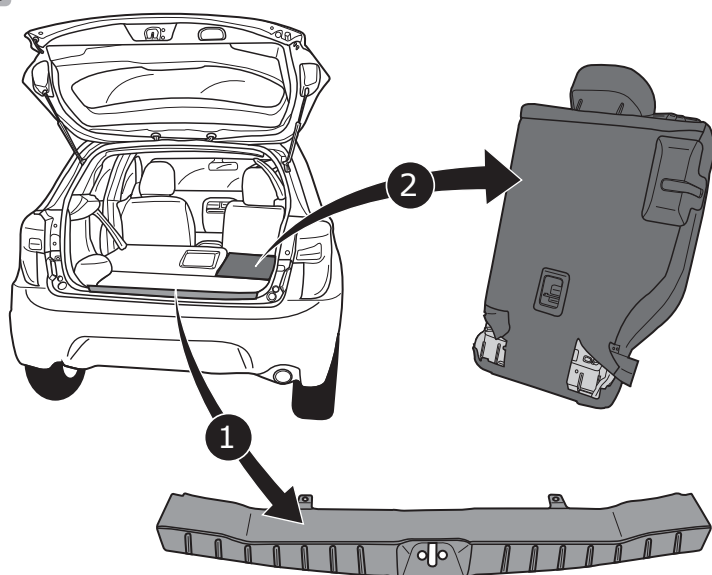



4

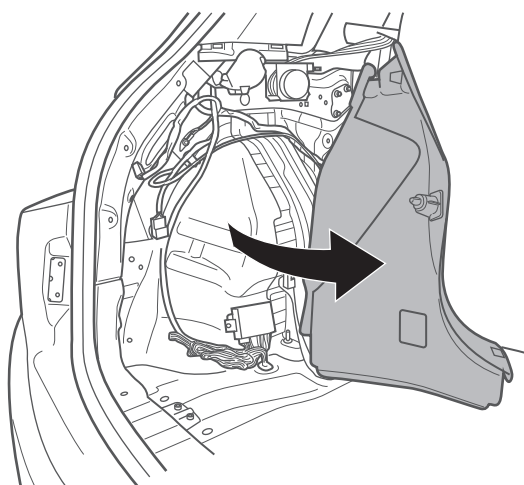


5

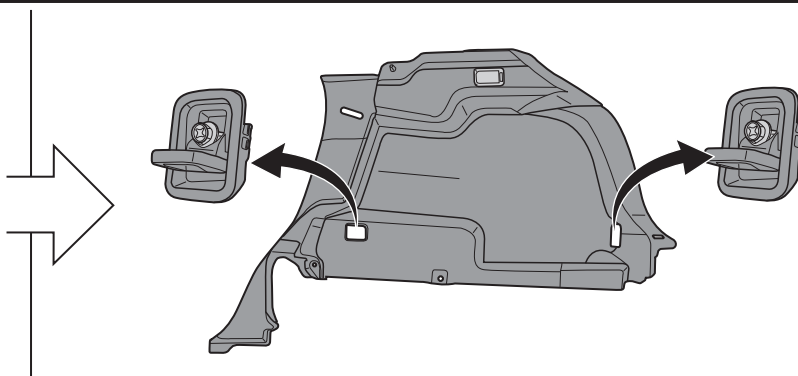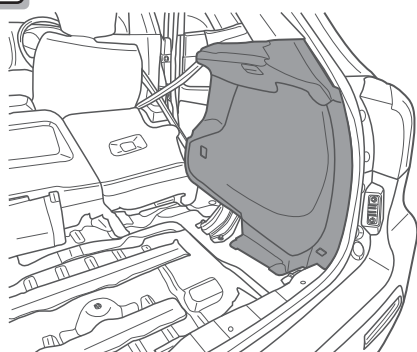


OPTION

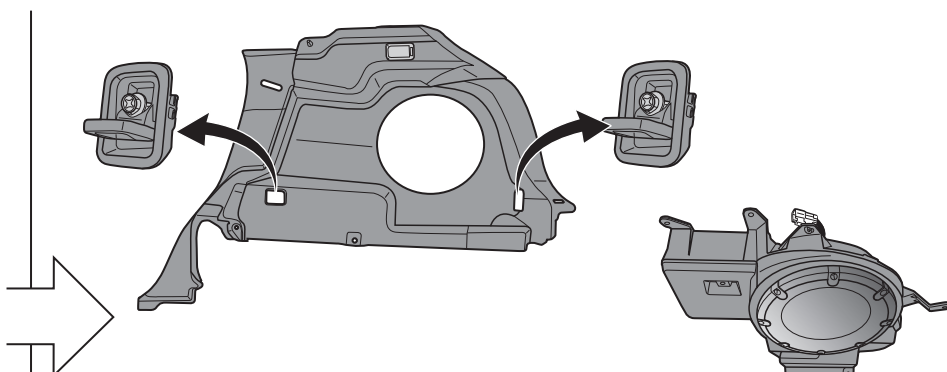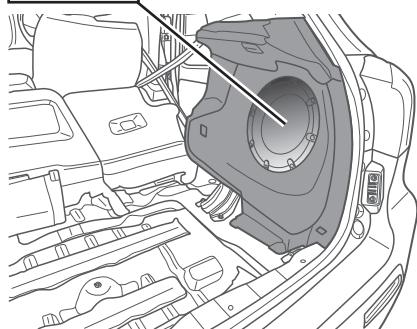


6

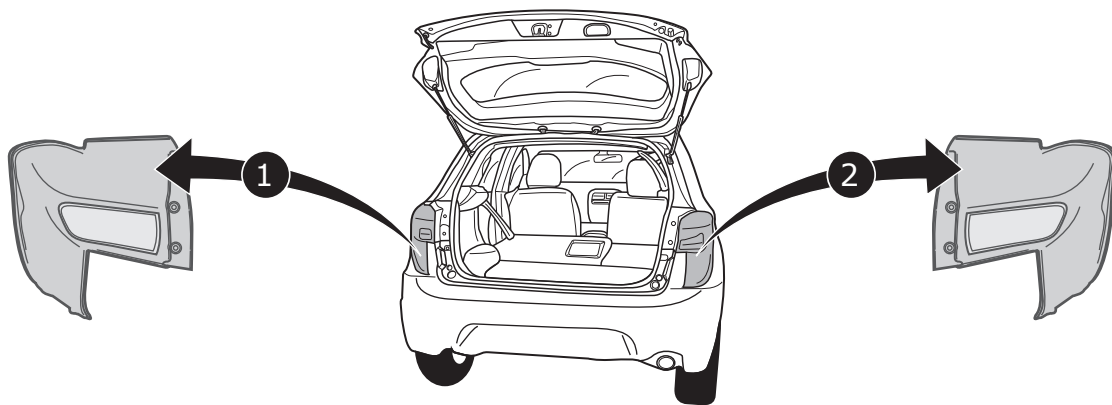

7

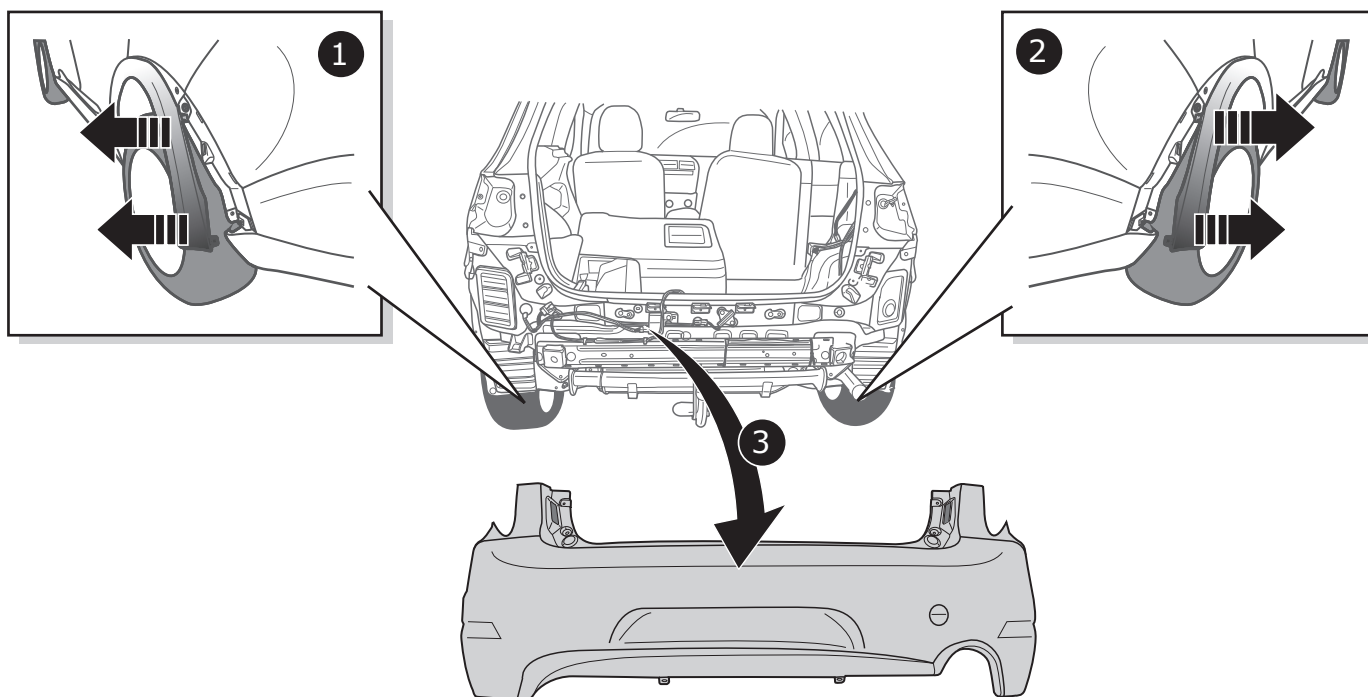


8

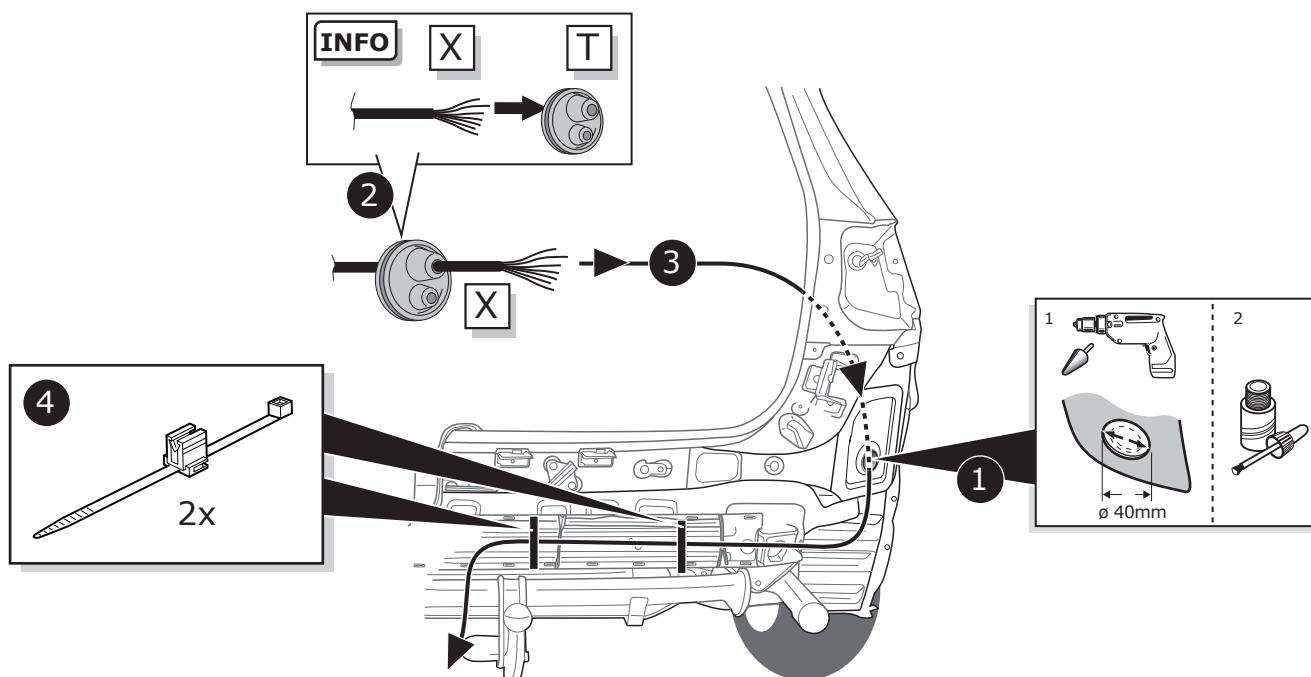


A

Option 1

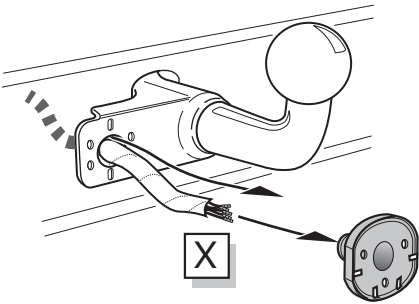


Option 2

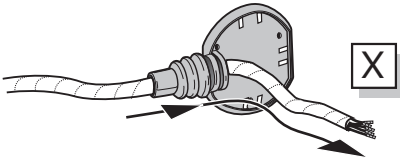


INFO

SOCKET CONNECTION




Pag. 11


Option 3

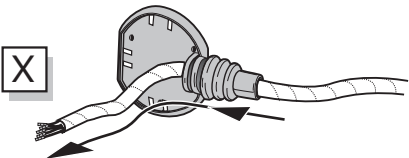

B

Option 1

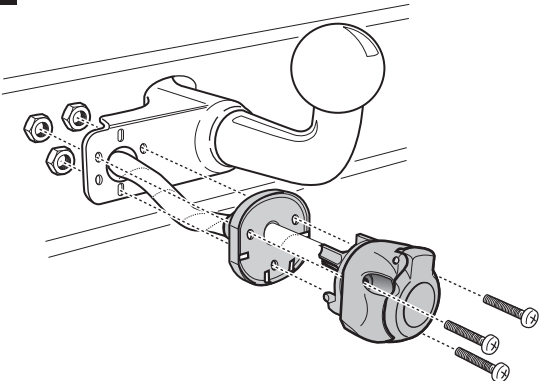


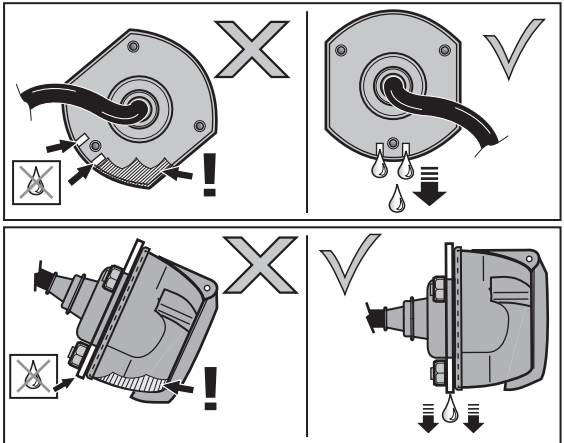


C

Option 2


1

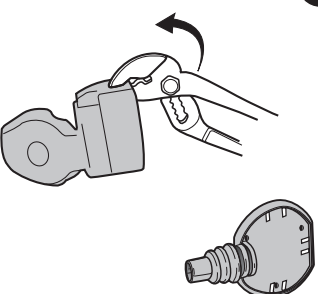

2

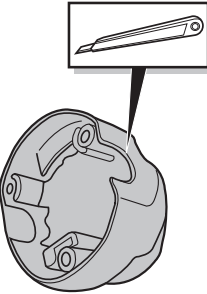


3

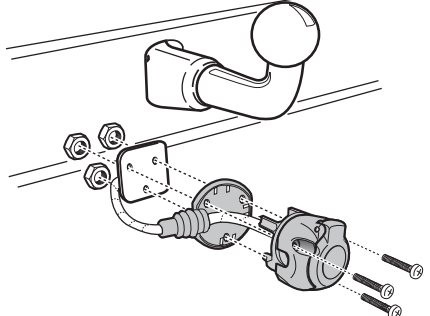


D

Option 3


1

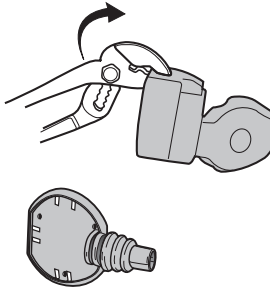


2

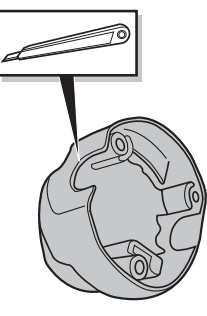


3

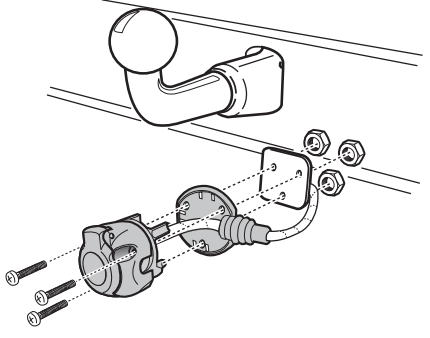




9

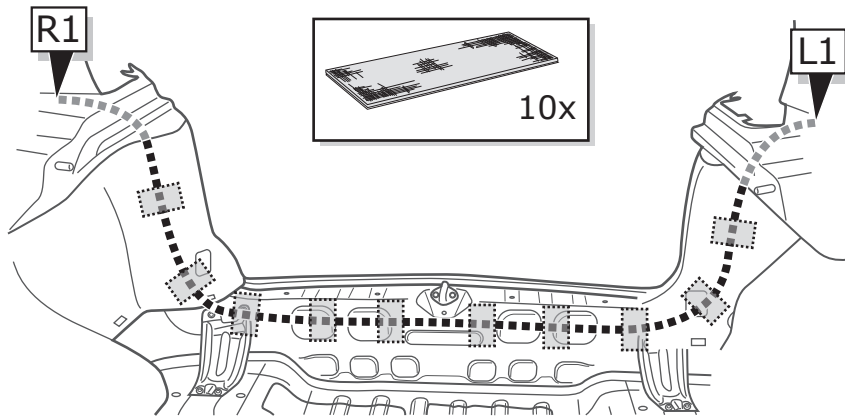


10

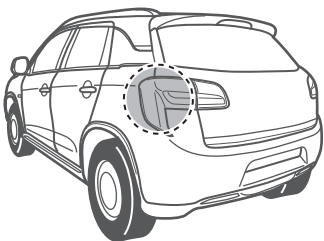


Citroën Aircross

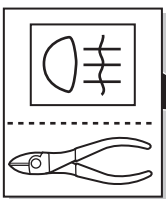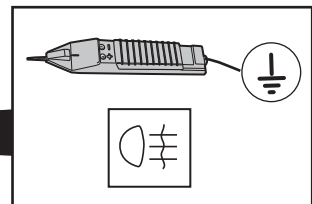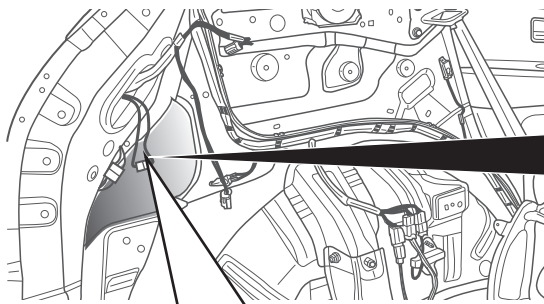

2

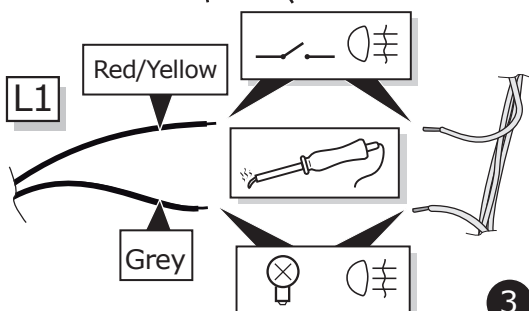


3



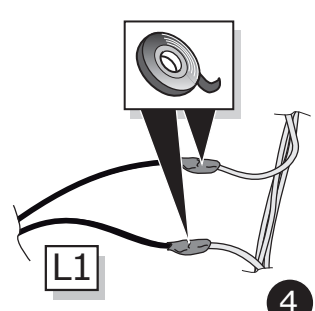


4


11

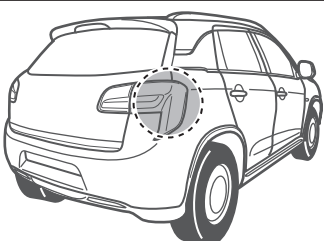


Citroën Aircross

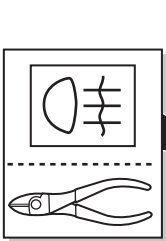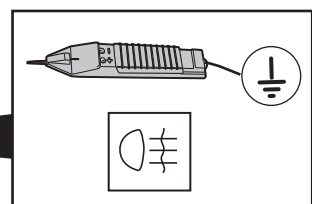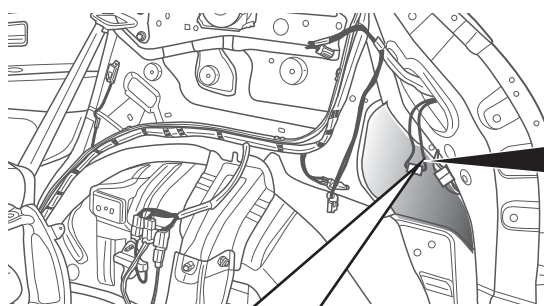

2

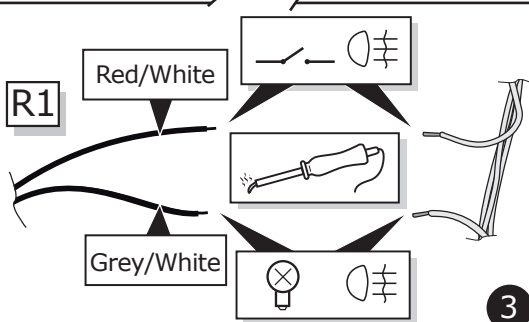


3



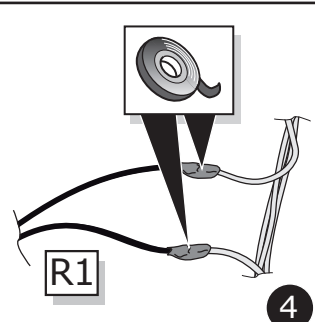


4


12

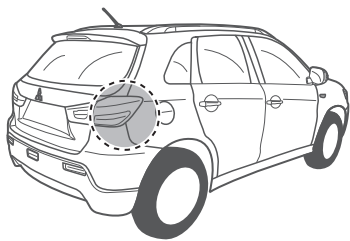


**Mitsubishi ASX
Peugeot 4008**

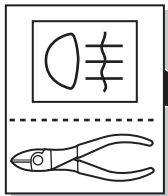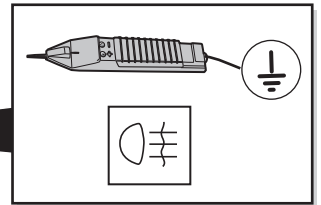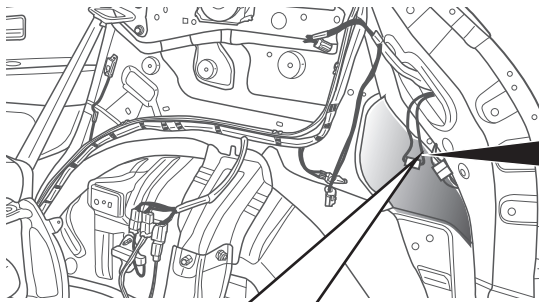

2

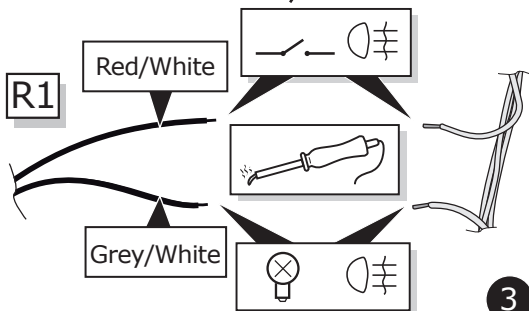


3





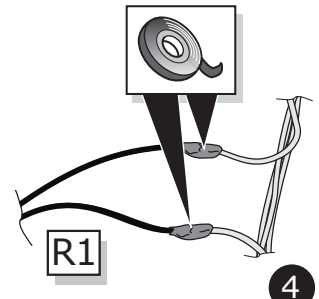


4


5

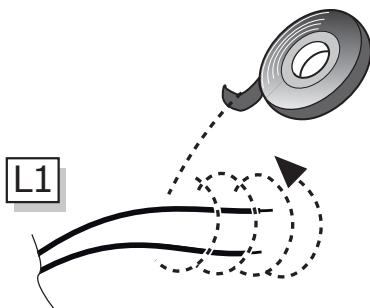


13

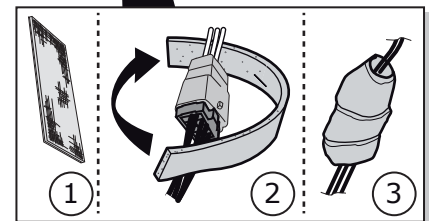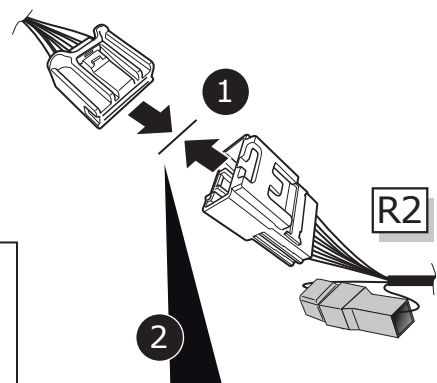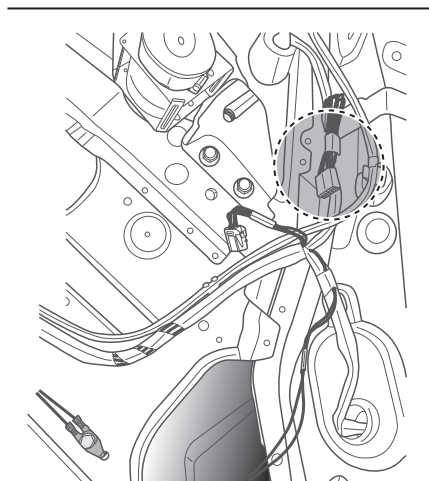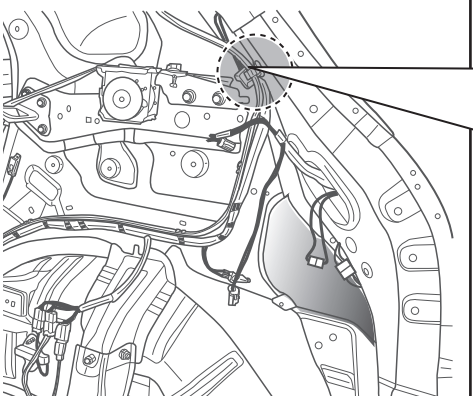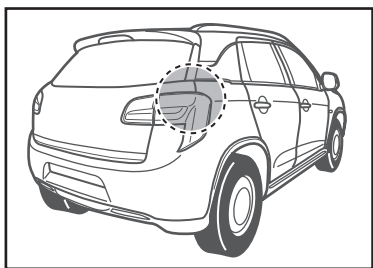



14

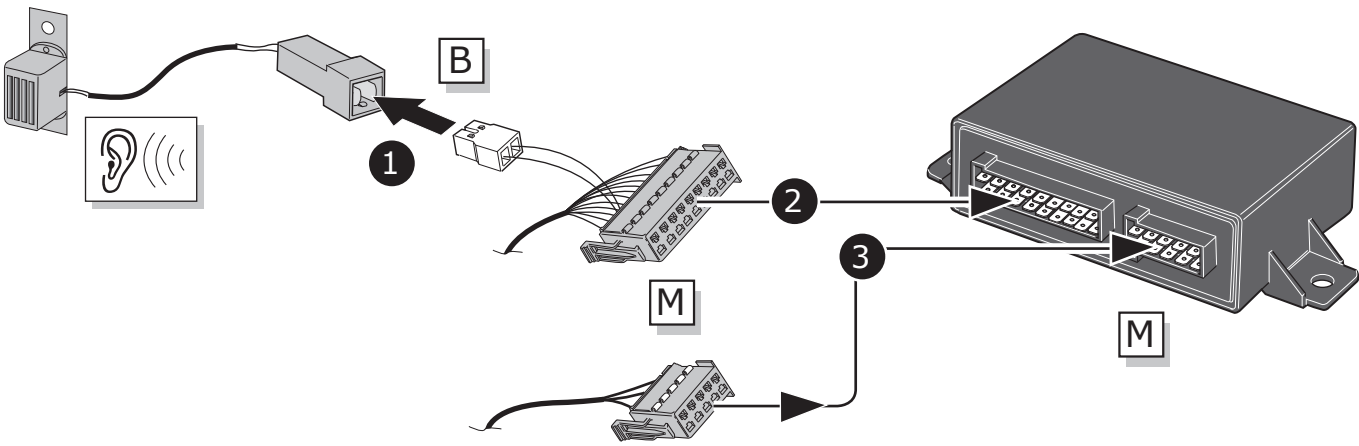




15

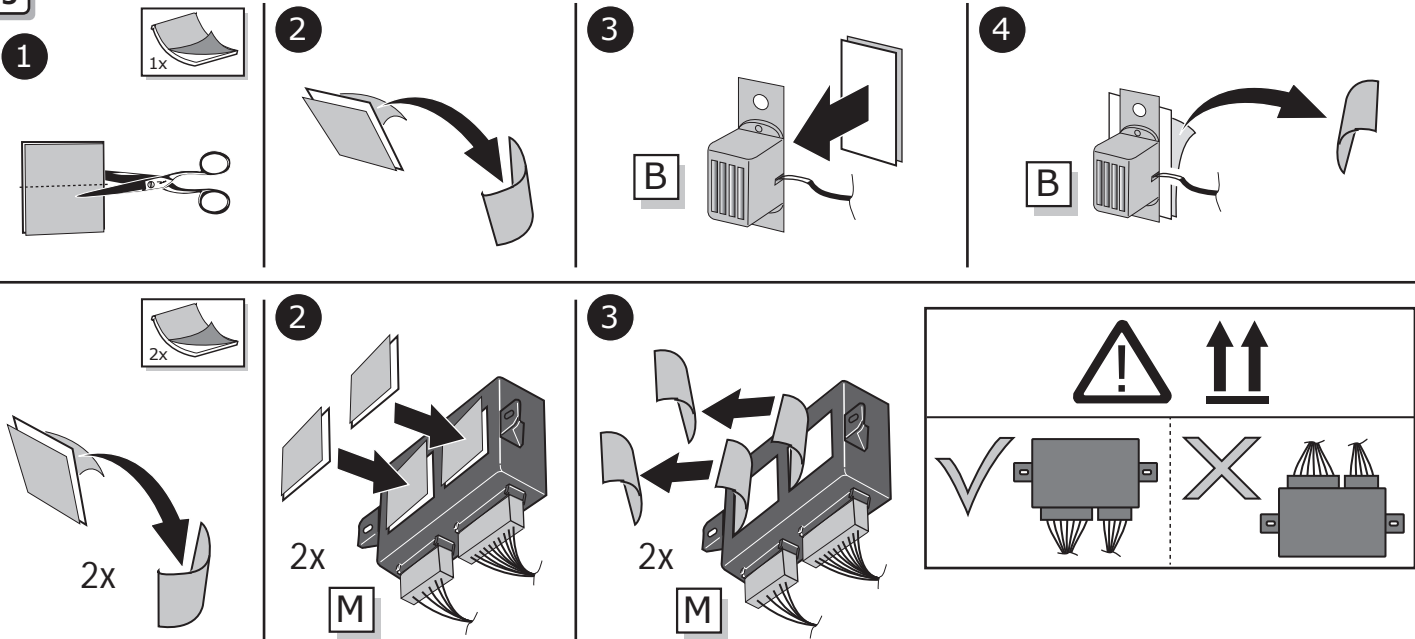



16

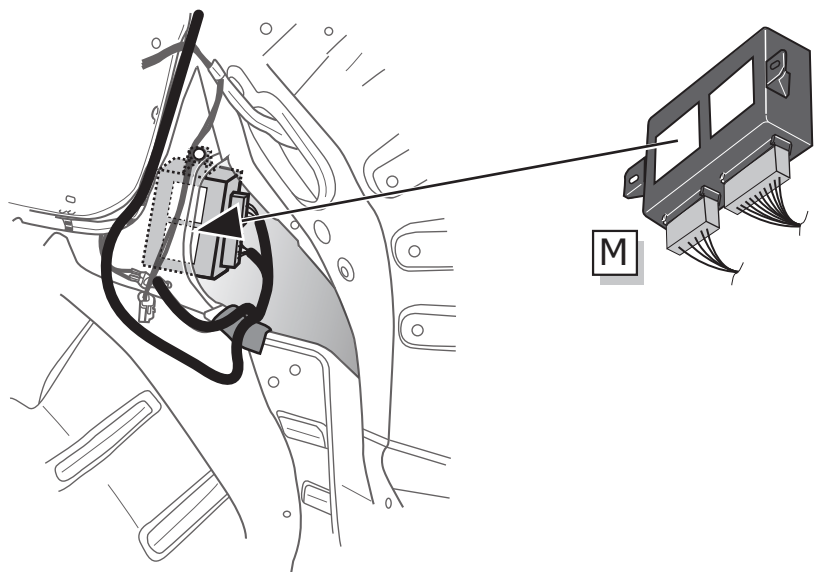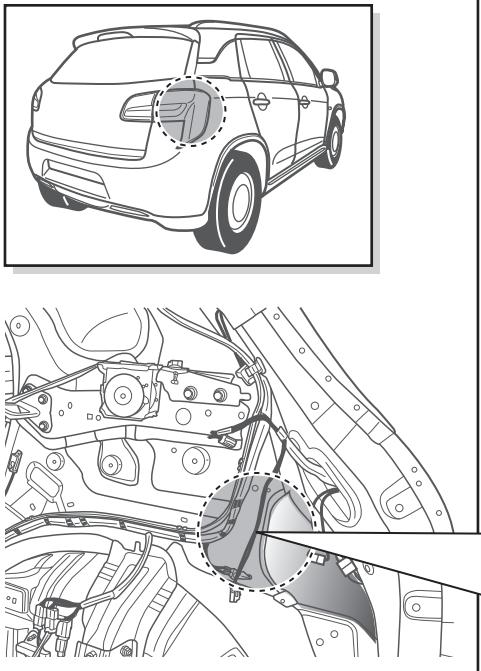


17

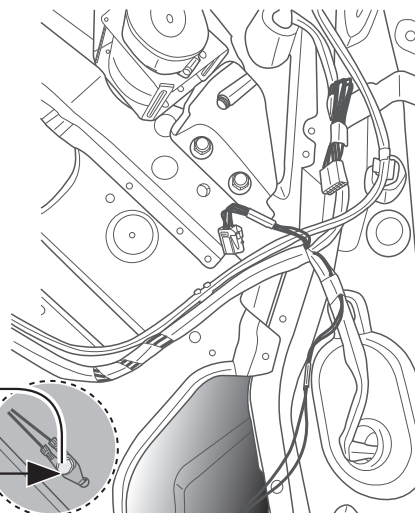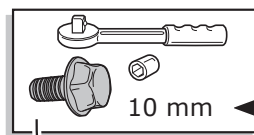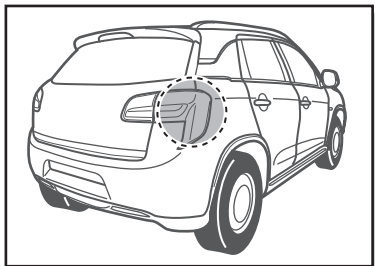


18

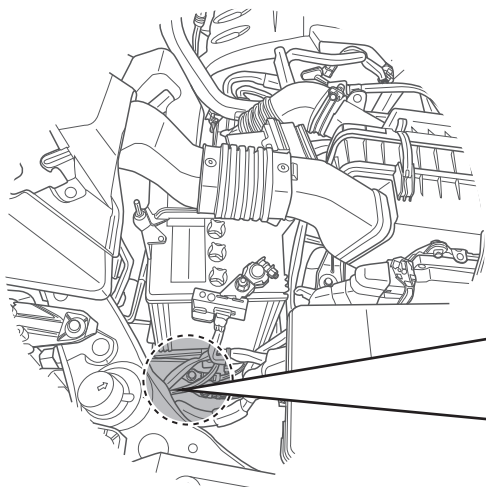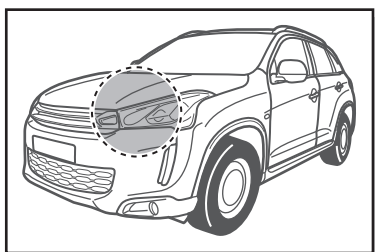

1


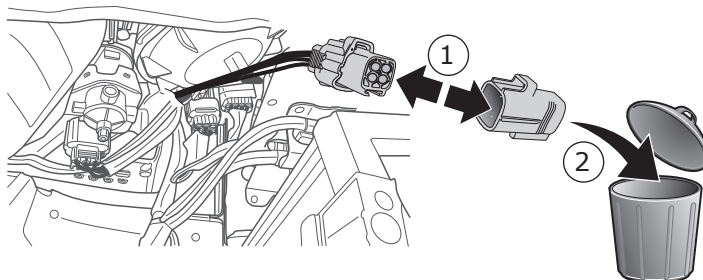


2

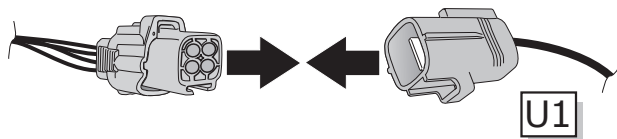

4


3

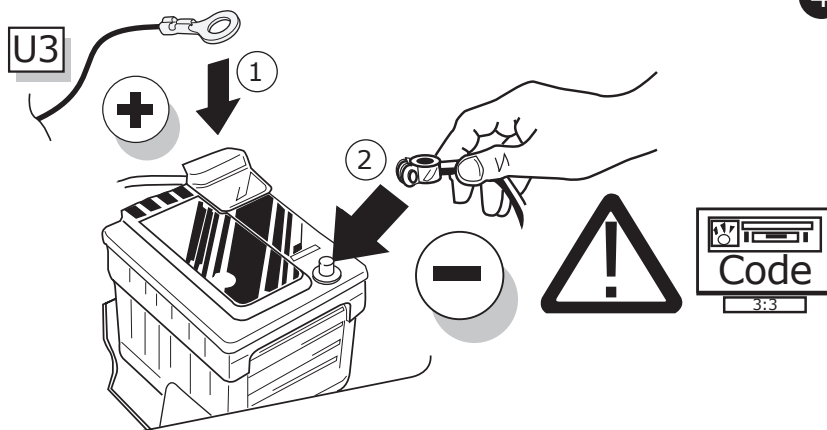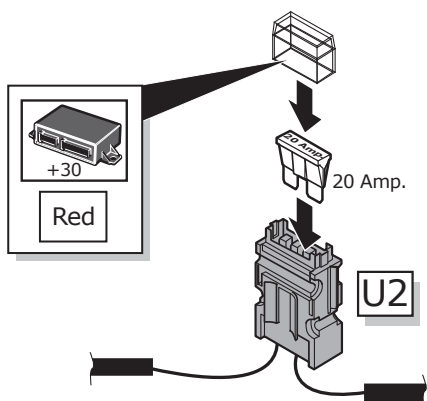

! TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

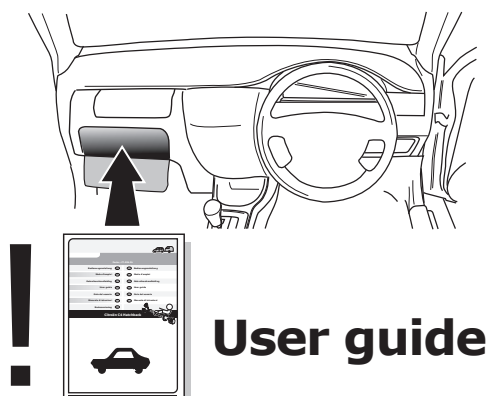

User guide







INFO






SOCKET CONNECTION

DIN/ISO 1724	↶	🚗	⚡ 1-7	↷	☀️	STOP	☀️
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	2x21W		21W	52W	3x21W	52W
Colour	Yellow	Blue	White	Green	Brown	Red	Black

* OPTION P.D.C.

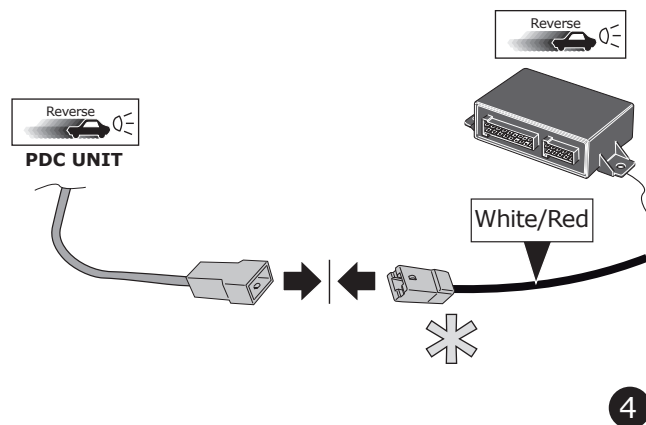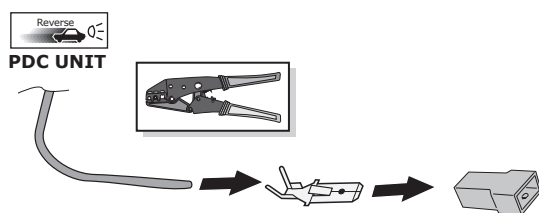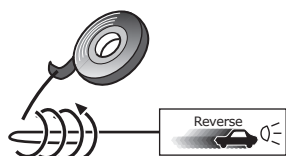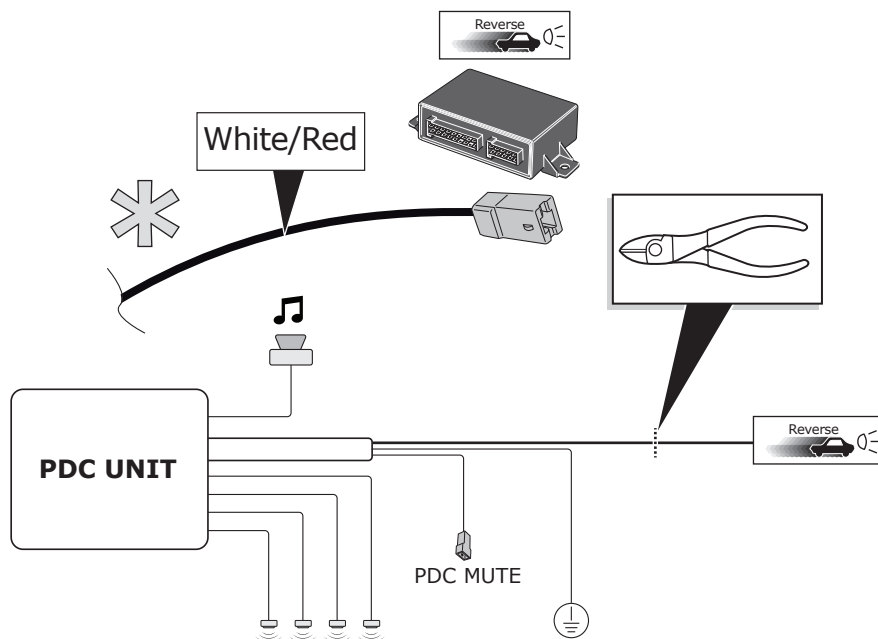


Info

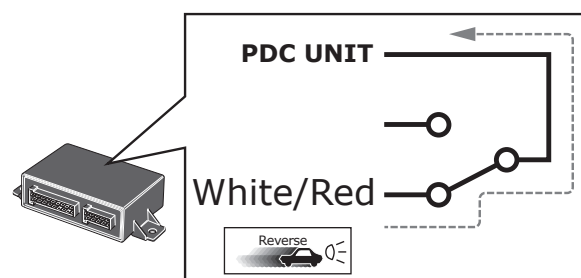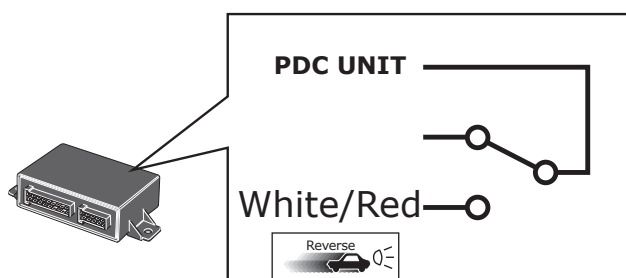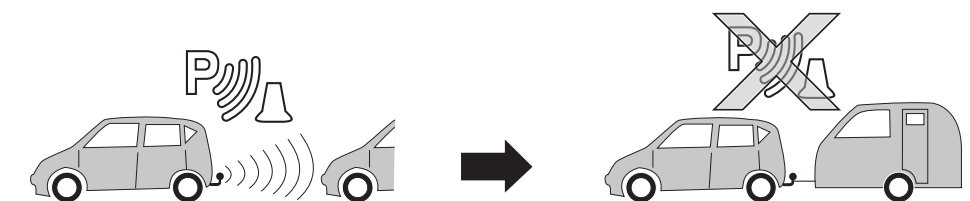


UN-243-YZ Reverse lamp pre-wire extension


⚠ MAX = 21W

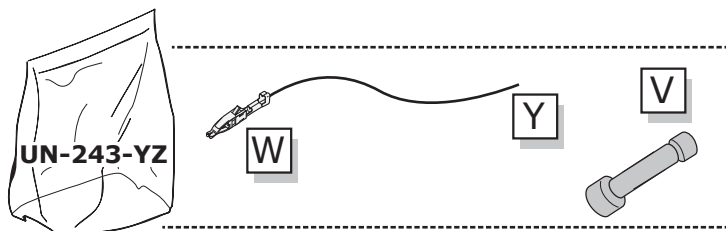


A

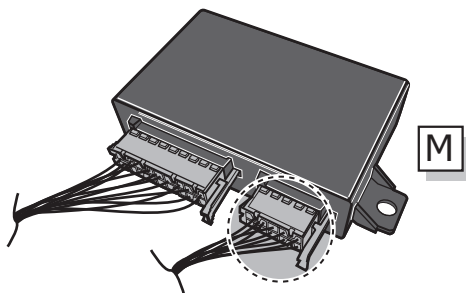


1

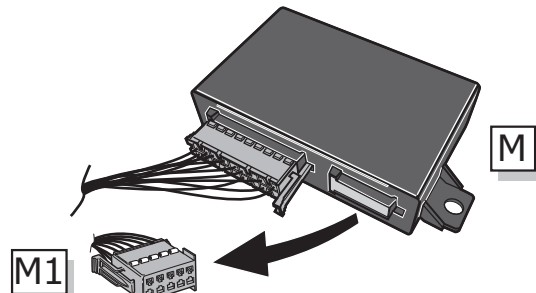


2

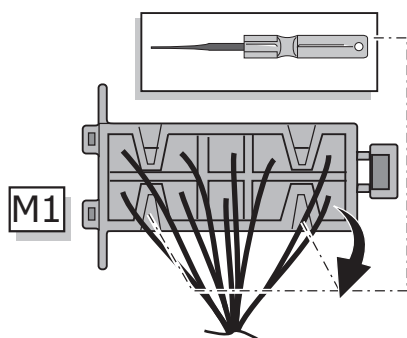


3

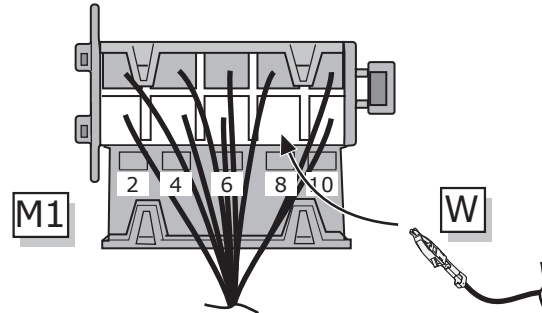

4

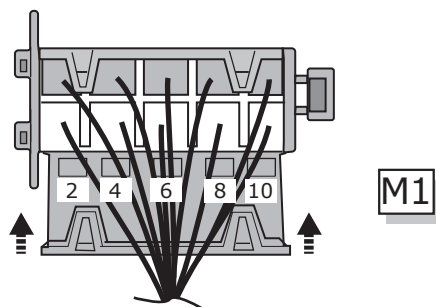

5

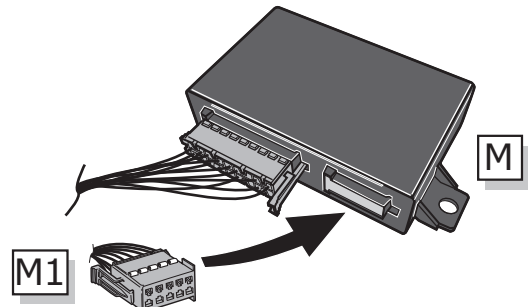

B

⚠ MAX = 21W

