
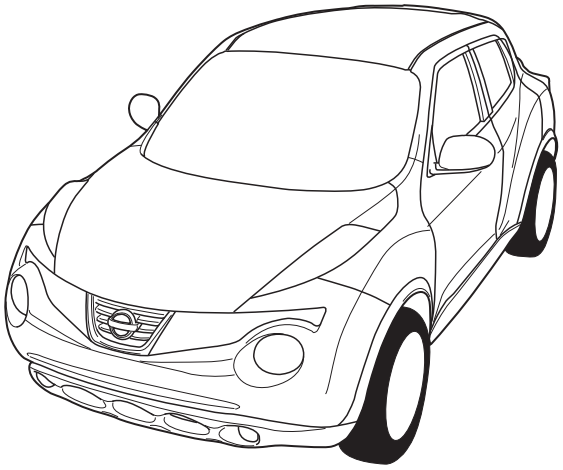


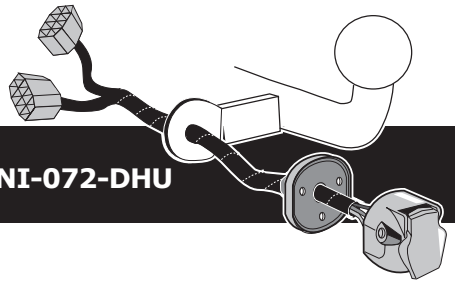

Nissan Juke (F15)

Partnr.: NI-072-DHU

• Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.

• We would expressly point out that assembly not carried out properly by a competent installer will resultin cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.

• Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.


• Do not overload circuits; the maximum loads per connection are detailed in this manual.


• Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.


• In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support: t.skinner@ecs-electronics.com / 07440 202 052.





Part list

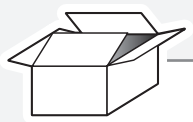


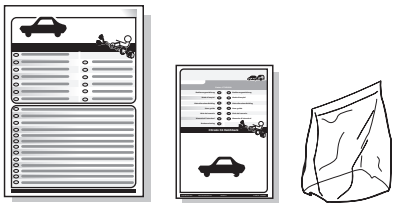

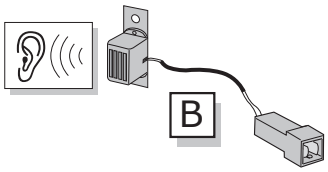


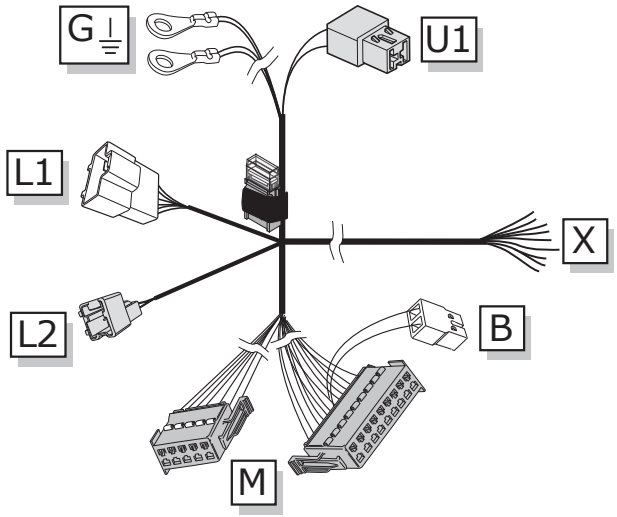


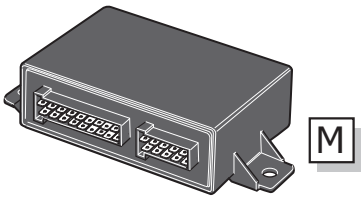

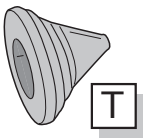




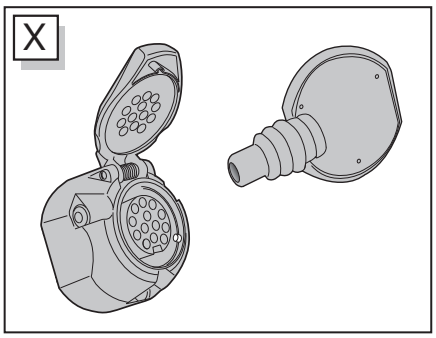

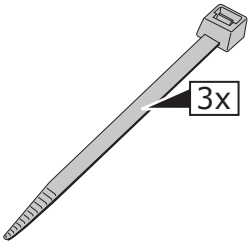


Optional




extension harness







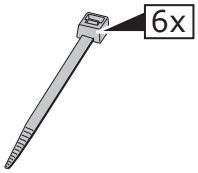

Option!


ONLY FOR AFTER MARKET PDC




Pag. 10

© ECS Electronics B.V.


ROUTING

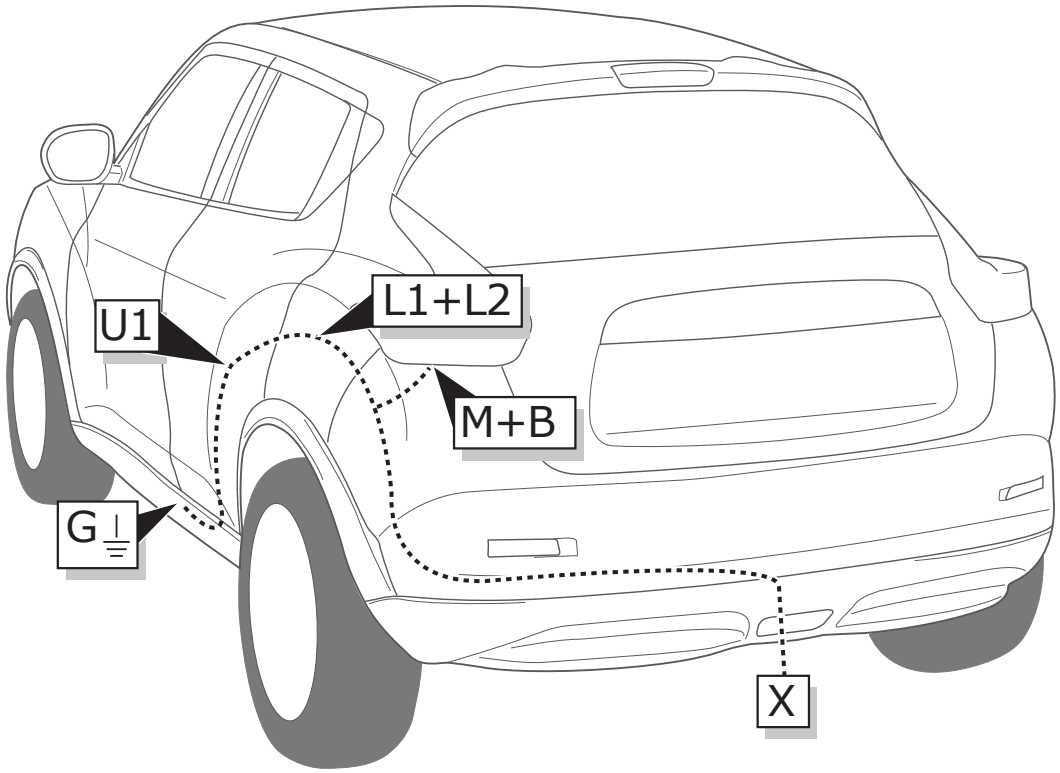


1

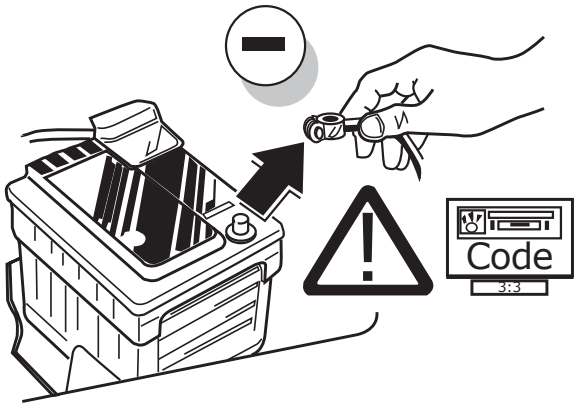


2

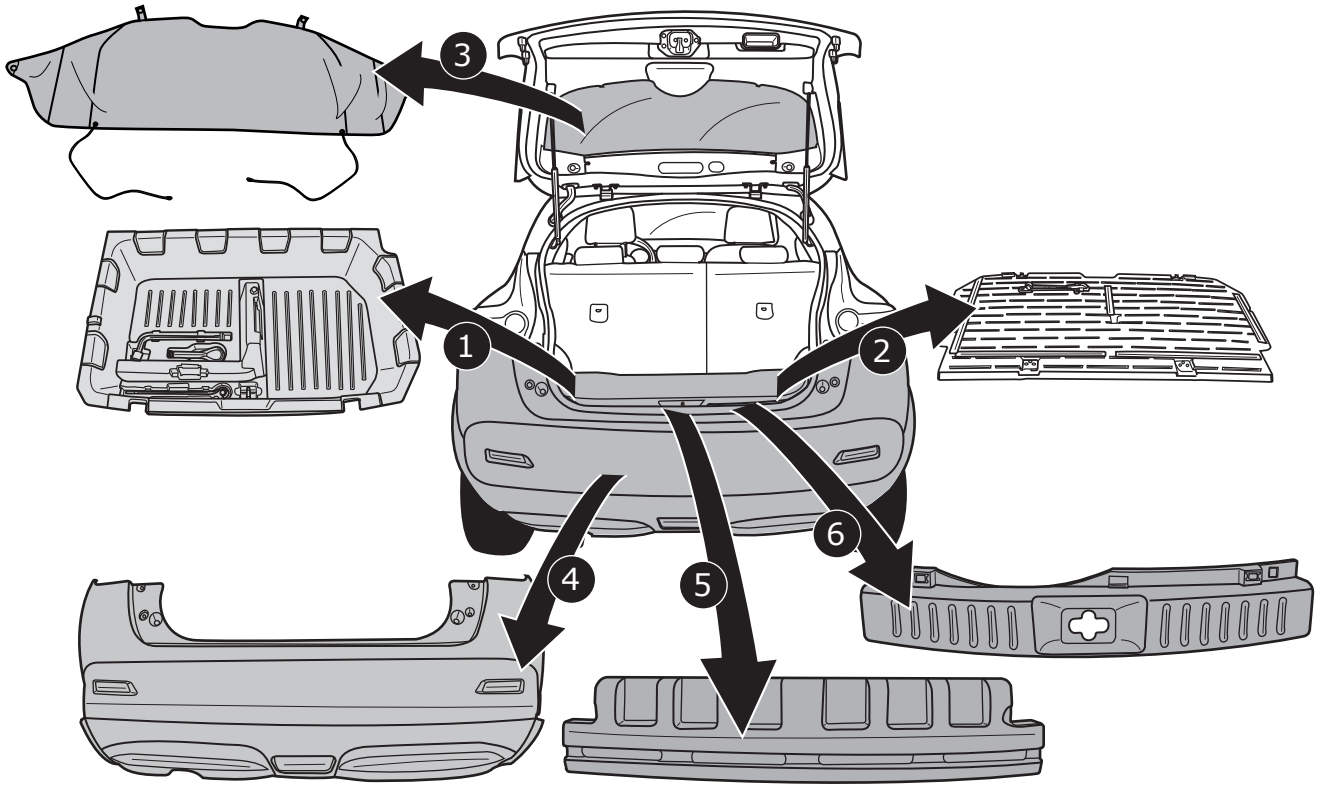


3

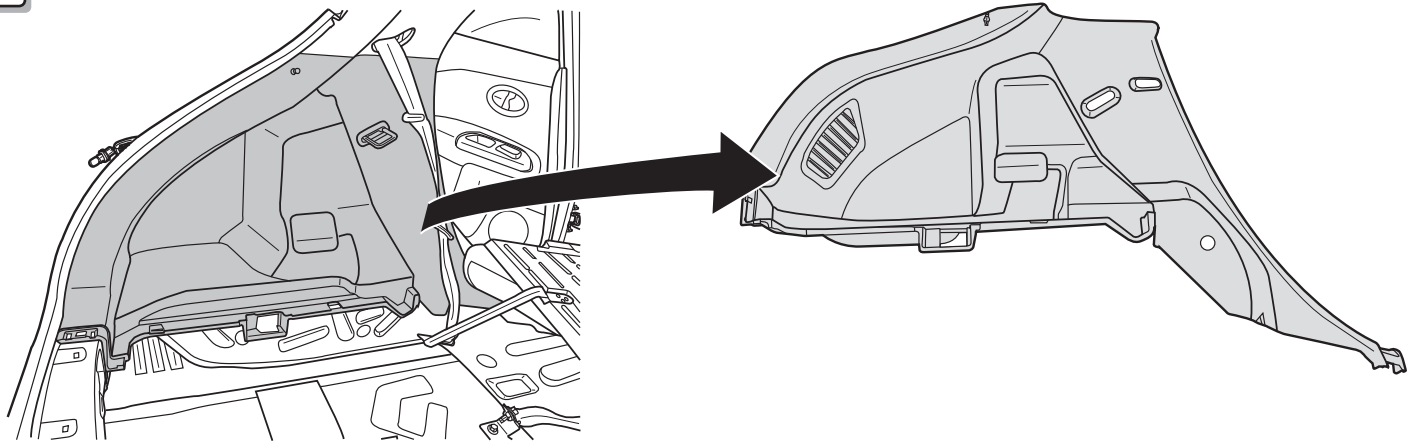

4

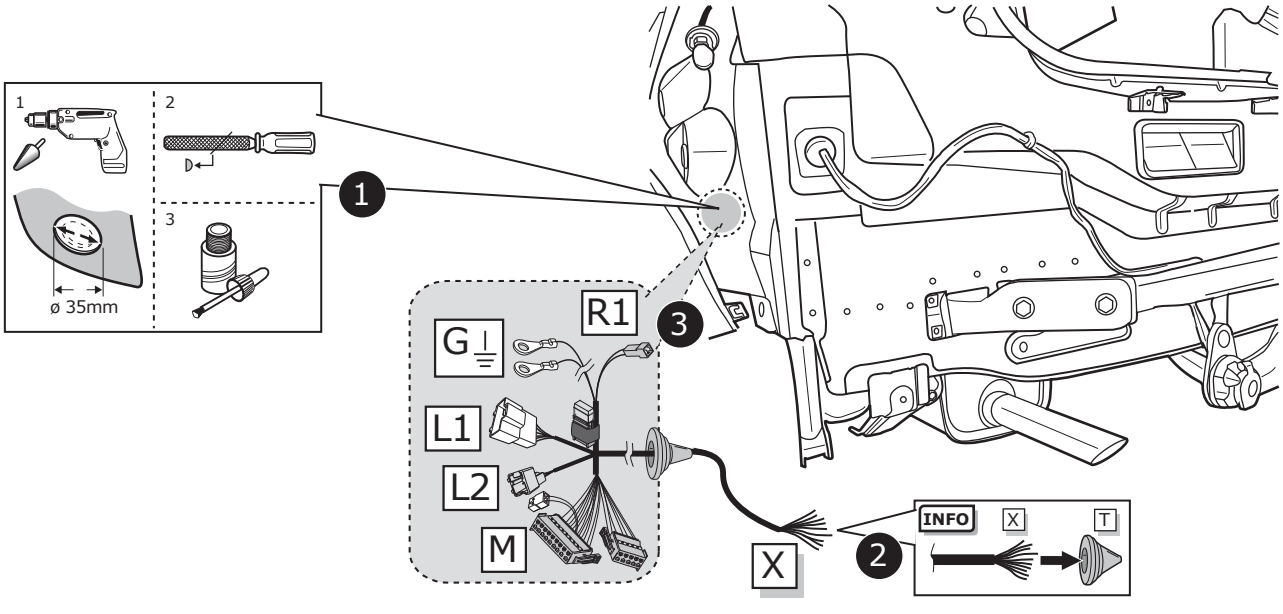

A

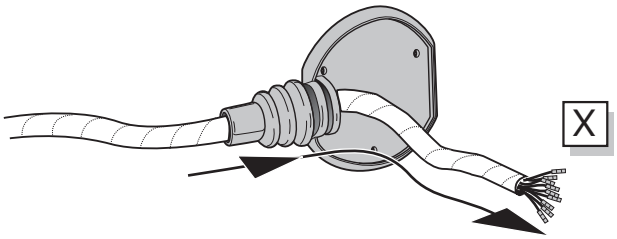



INFO


SOCKET CONNECTION


Pag. 9

B

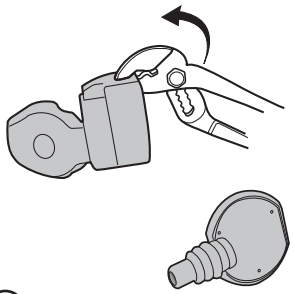


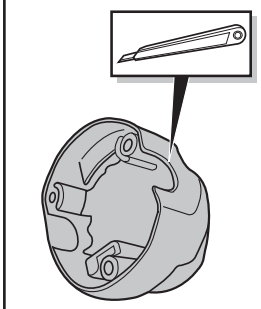


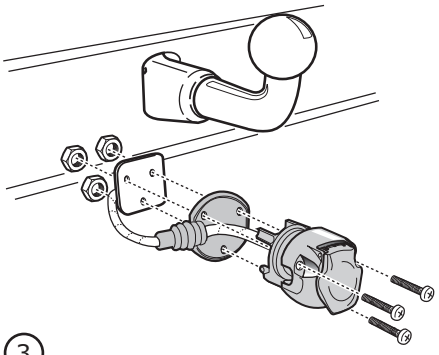


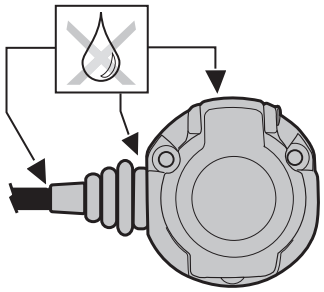


5

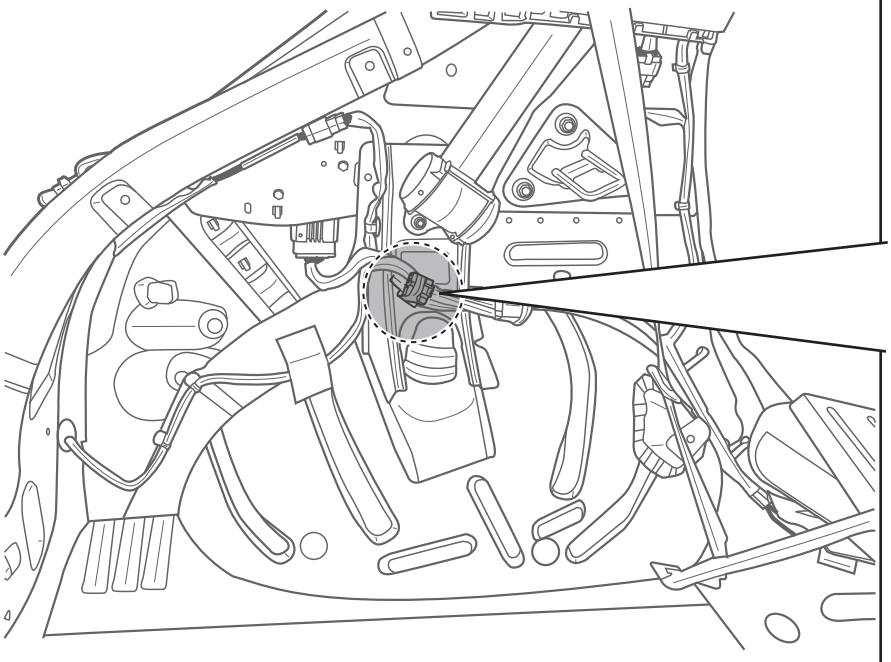

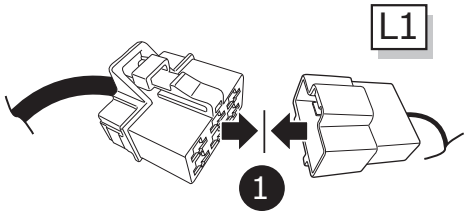


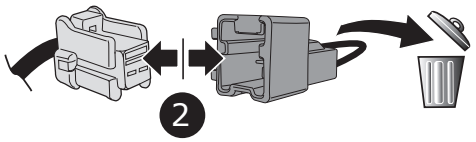

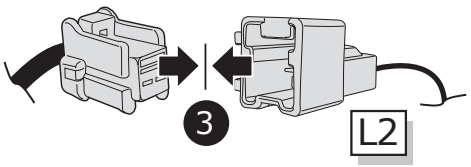


© ECS Electronics B.V.


6

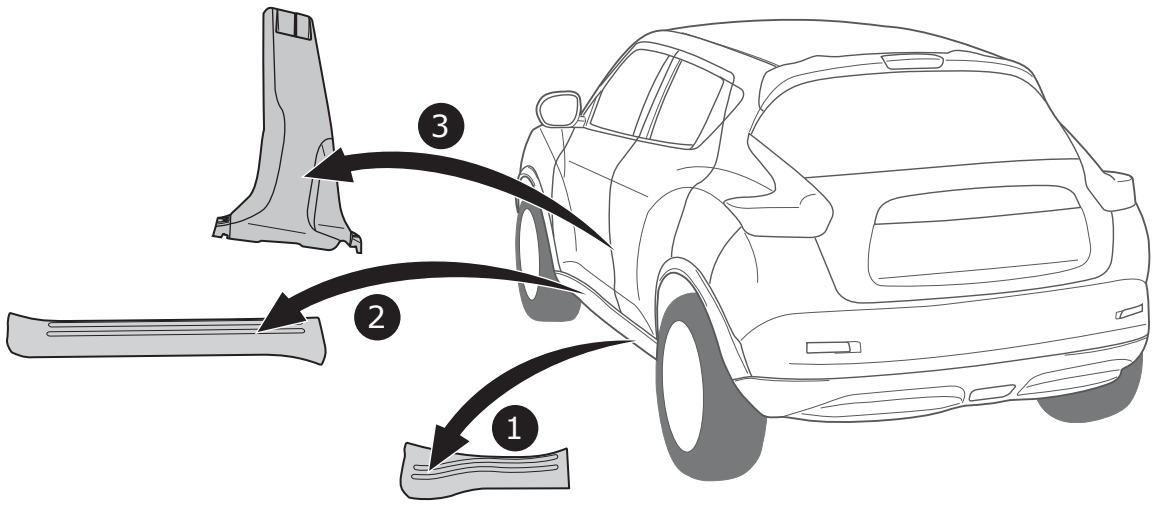


7

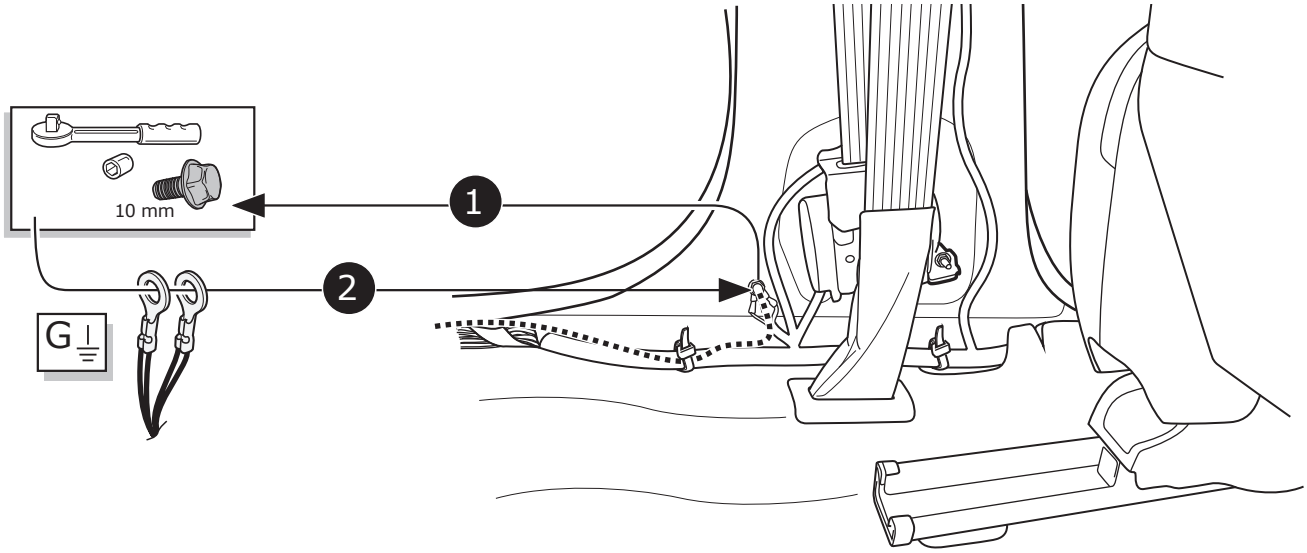


8

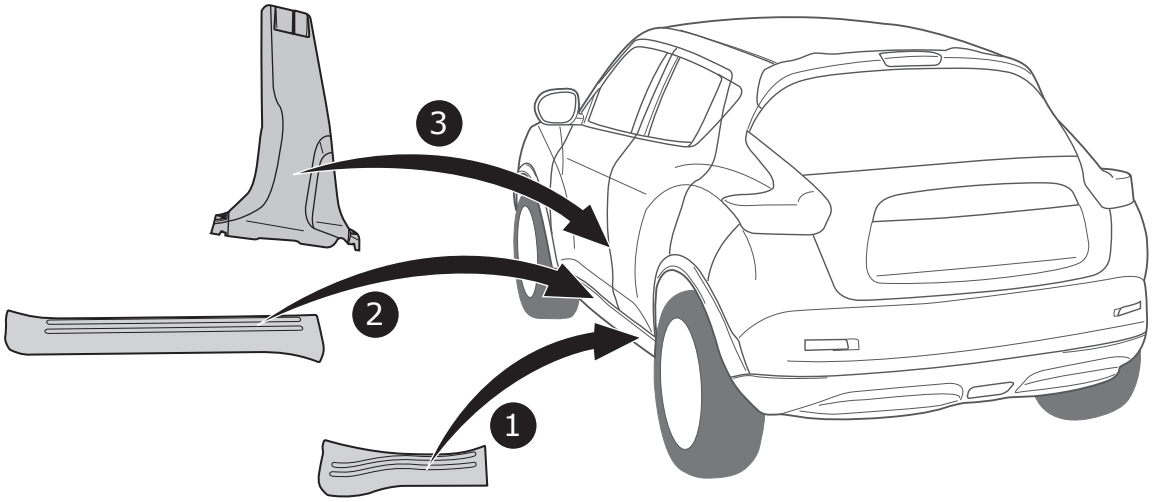


9

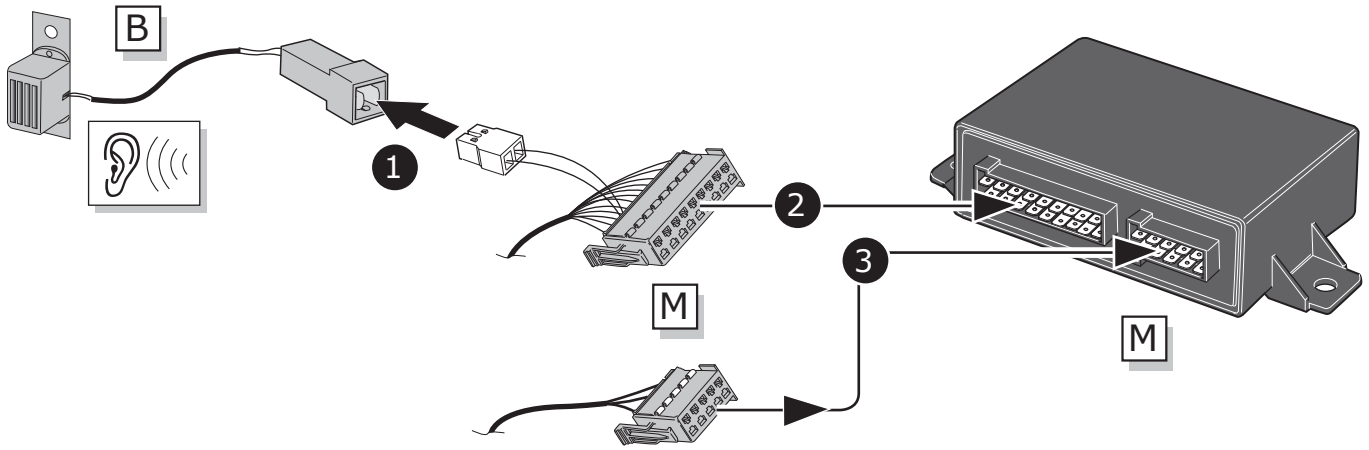


10

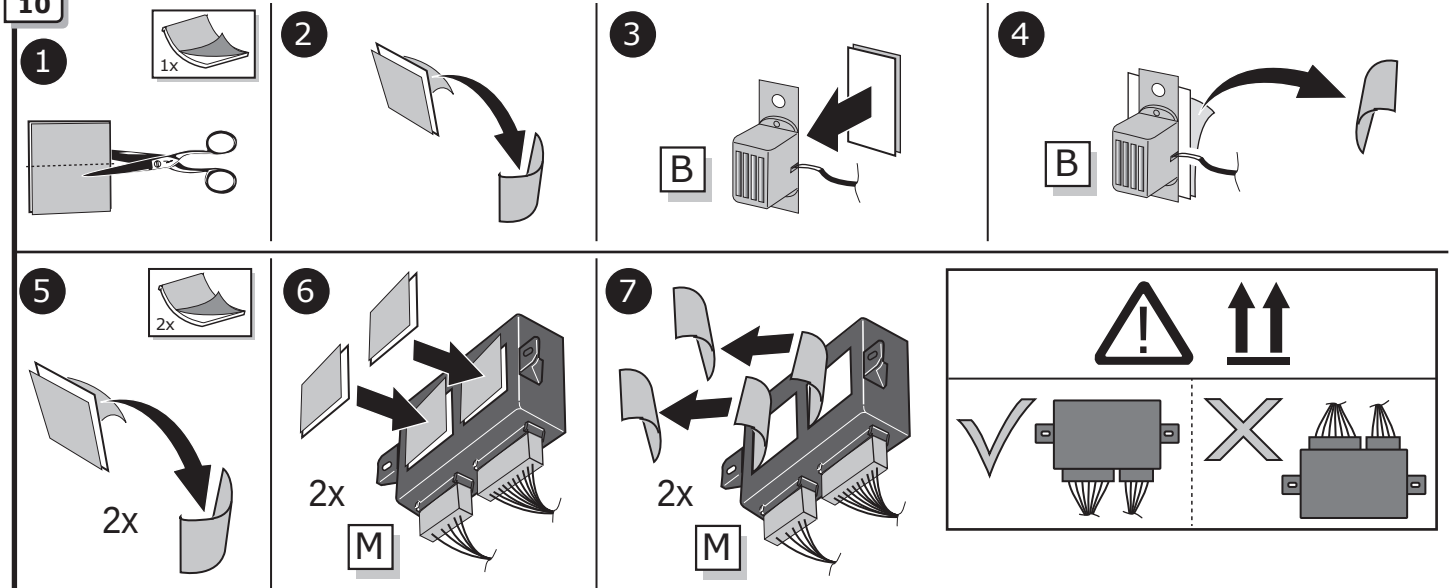

11

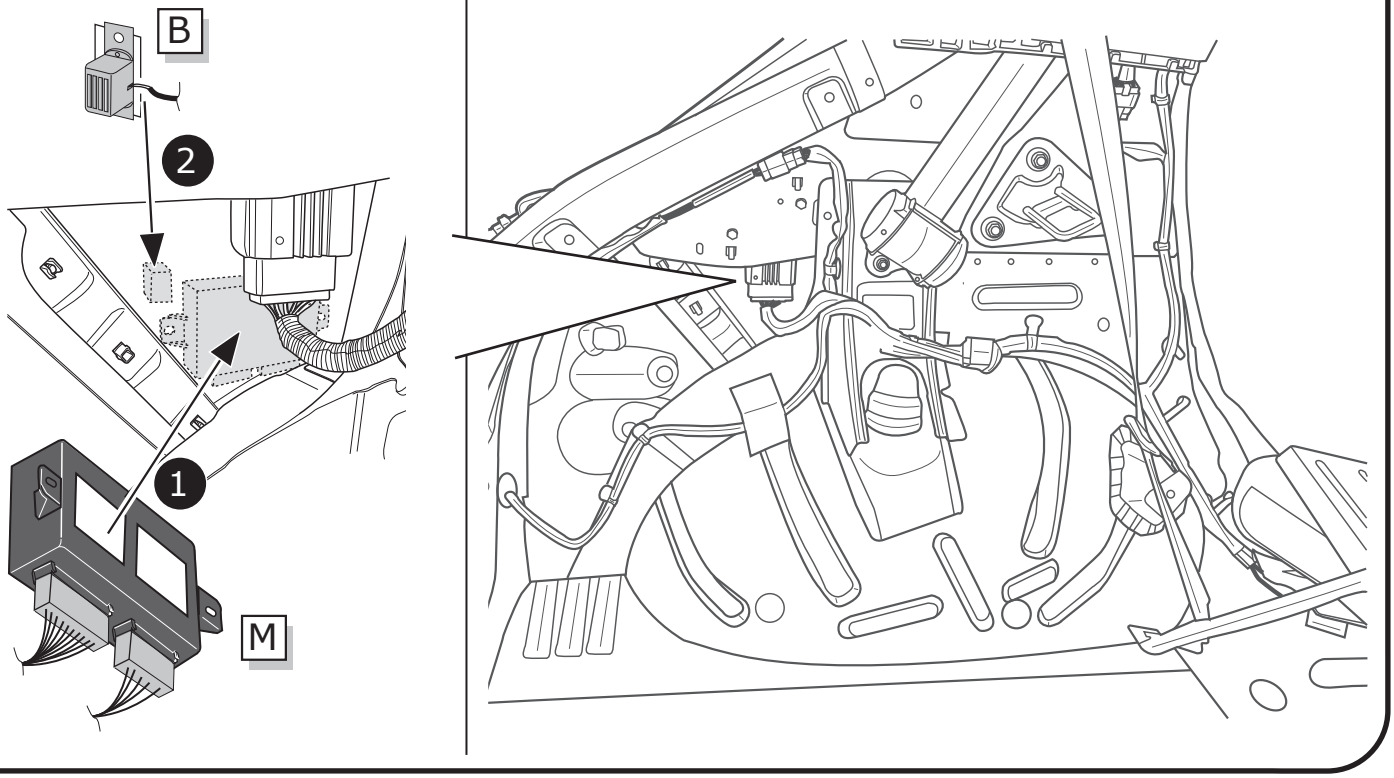

12

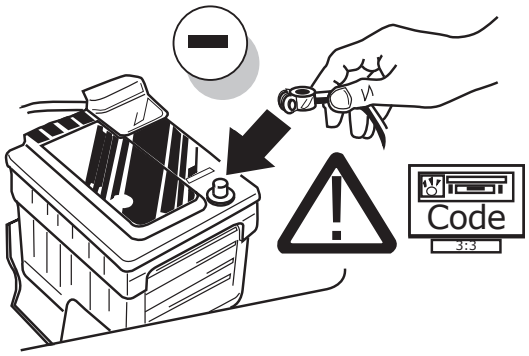


13

! TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

14

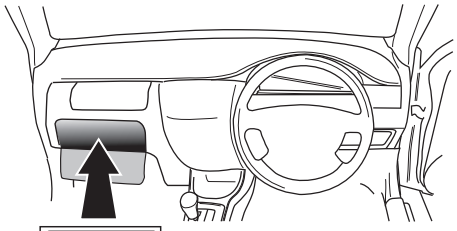

! 


User guide




INFO

SOCKET CONNECTION


DIN/ISO 11446	⇦		⏚1-8	⇨		STOP		Reverse	30+	15+	⏚10	—	⏚ 9
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	2x21W		21W	52W	3x21W	52W	2x21W	180W/15Amp	180W/15Amp			
Colour	Yellow	Blue	White	Green	Brown	Red 1,00 mm²	Black	Black/ Red	Brown/ White	Red 2,50 mm²	White	-	White

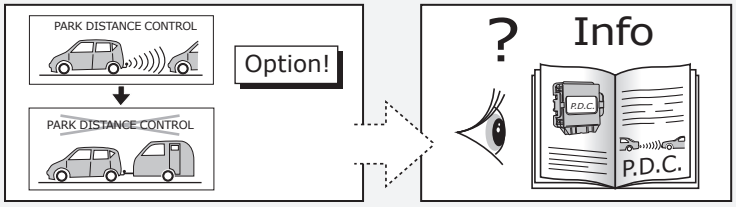


ONLY FOR AFTER MARKET PDC

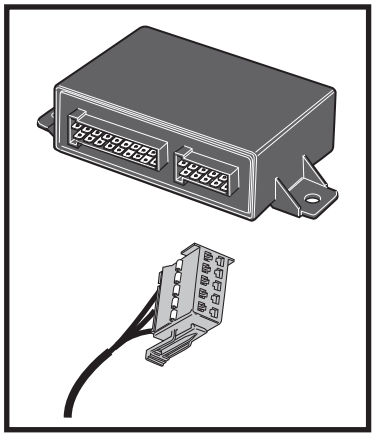


Option

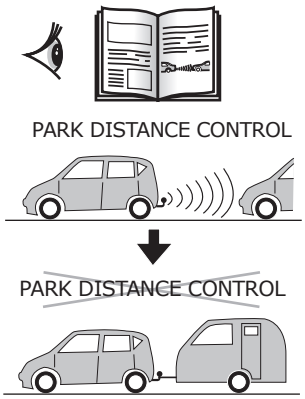


1

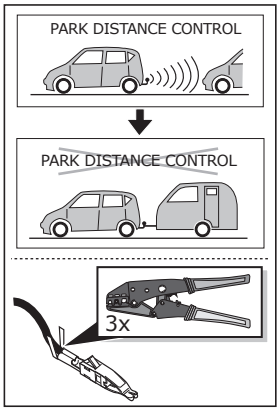



2

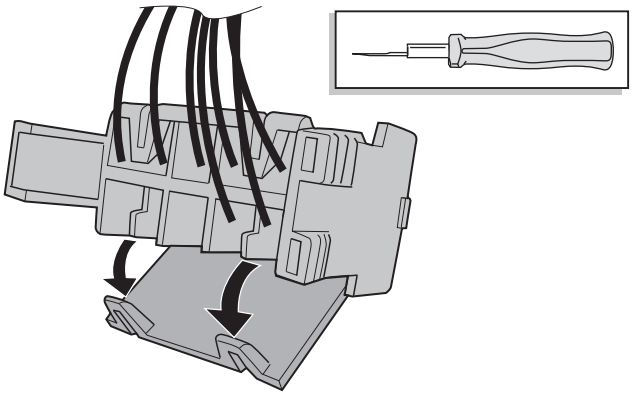

3

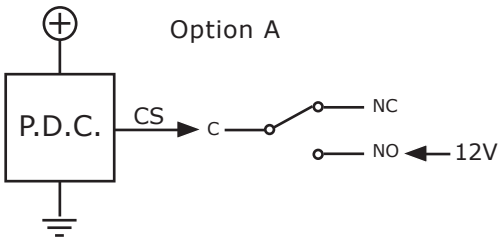

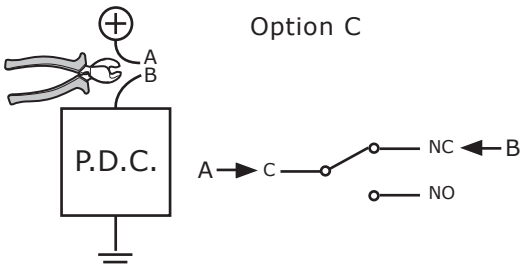

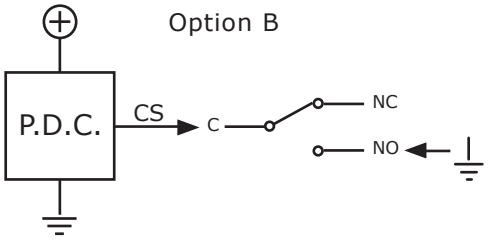

9 = C
5 = NO
7 = NC

