



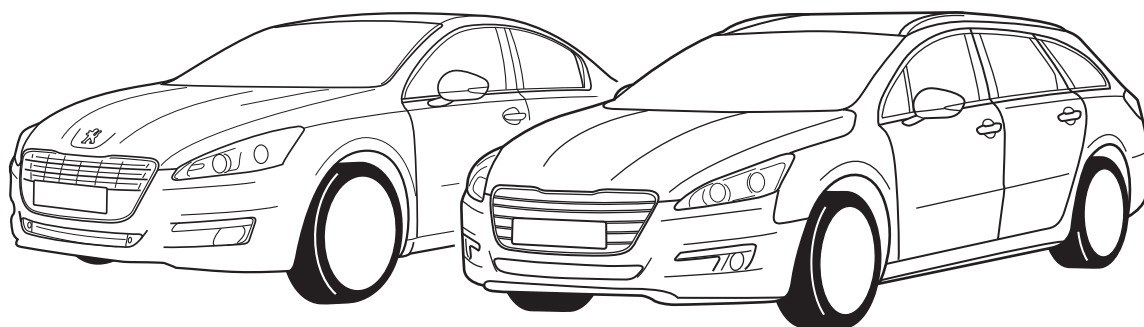

**Peugeot 508 Sedan (W2) 01/2011-
Peugeot 508 SW (W2) 01/2011-
Peugeot 508 RXH (W2) 04/2012-**


Partnr.: PE-061-B1U

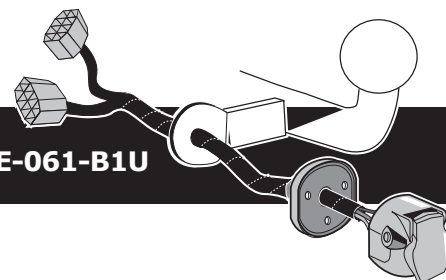

- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.




Part list

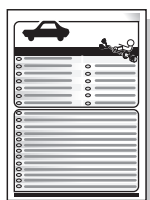


M

L2

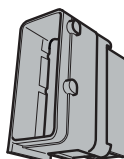


T



1x




L1

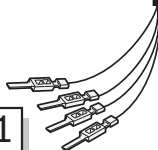



G I



M




X

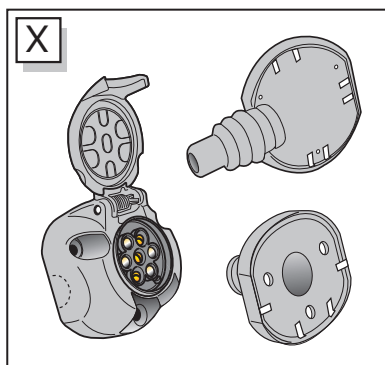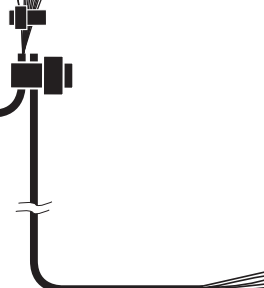


X

3x

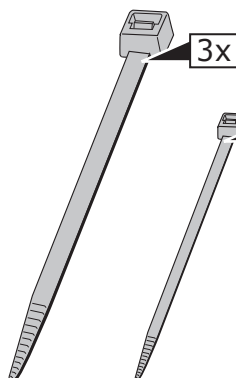

5x

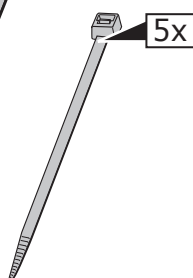

UN-243-YZ


Optional reverse lamp
pre-wire extension included



Pag. 12




3x

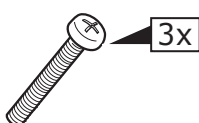

3x




1x





20 Amp.
minifuse

ROUTING


508 Sedan

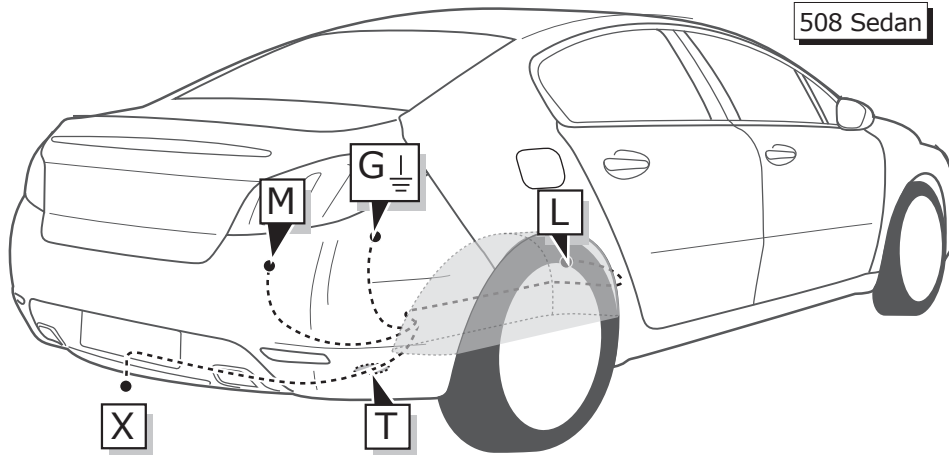


508 SW
508 RXH

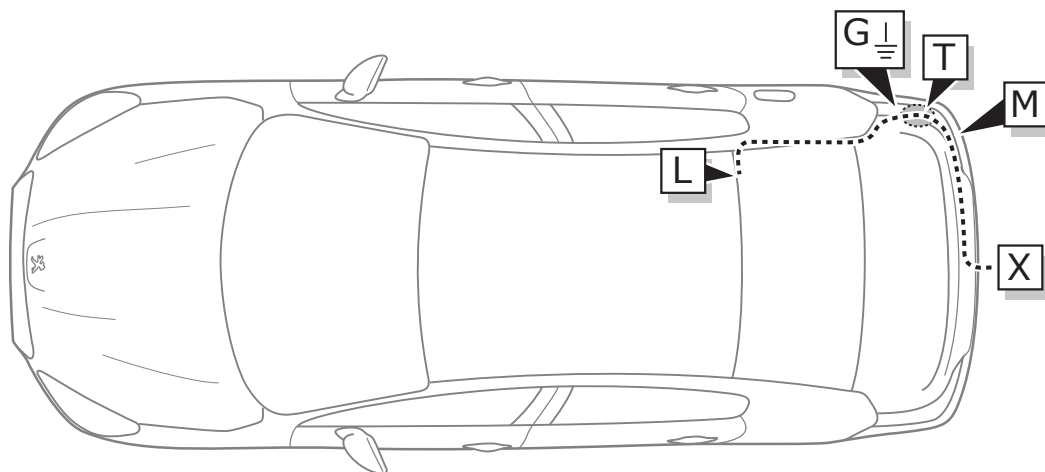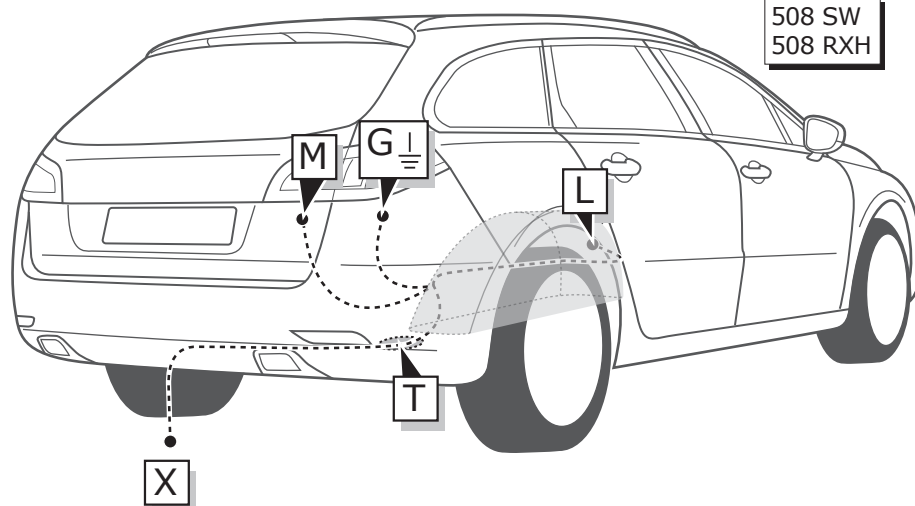


1

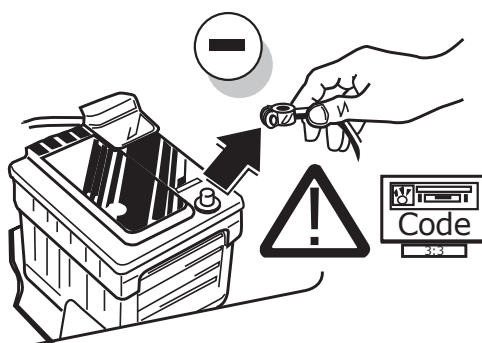


2

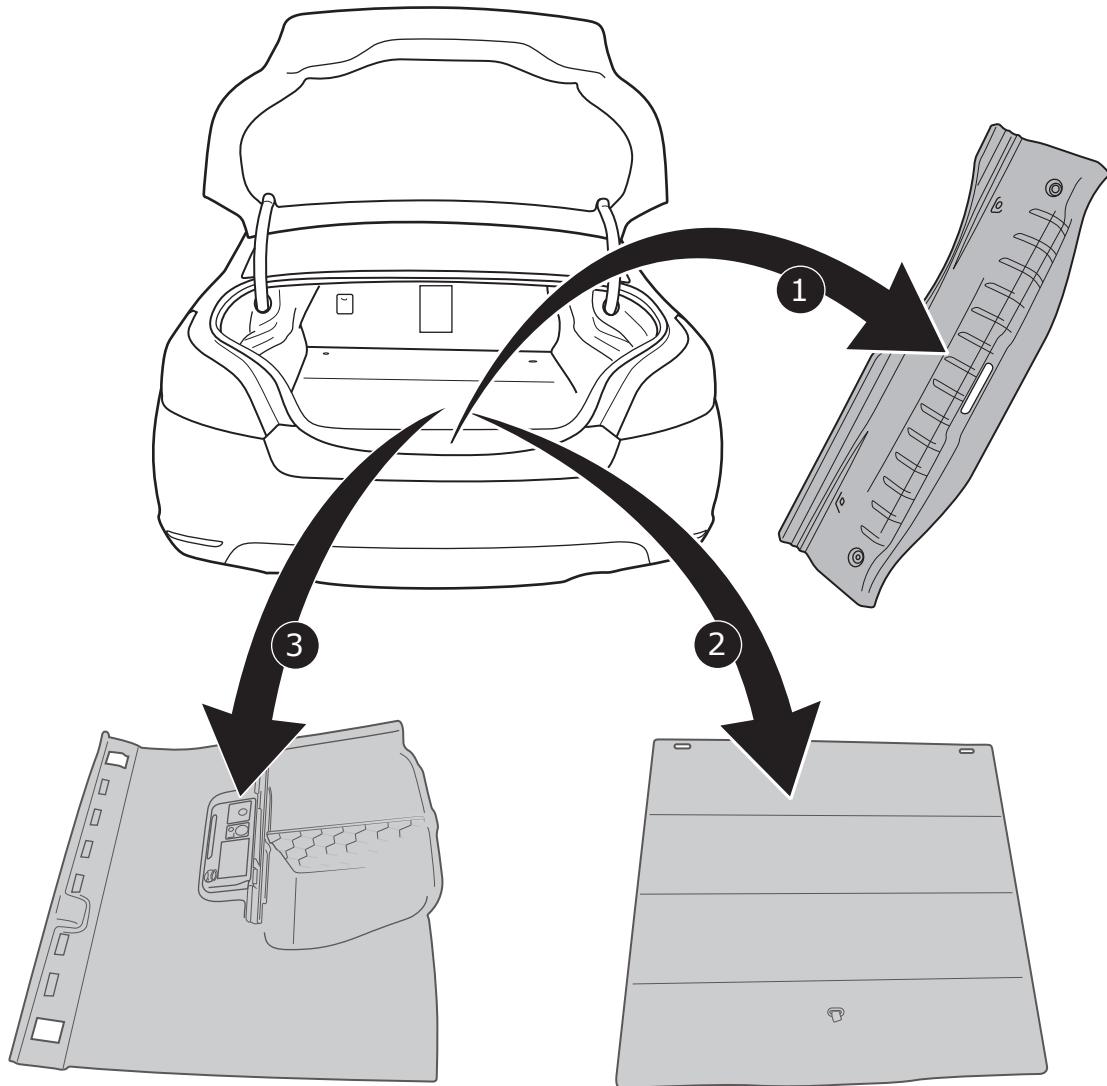


3

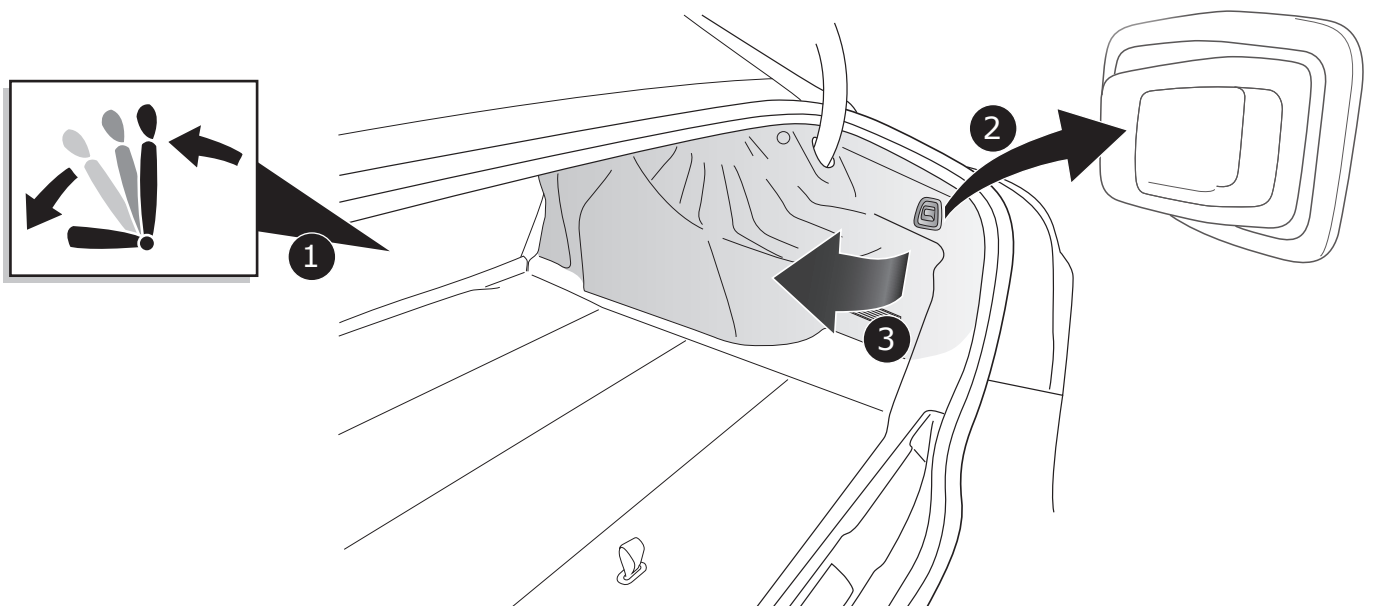


4

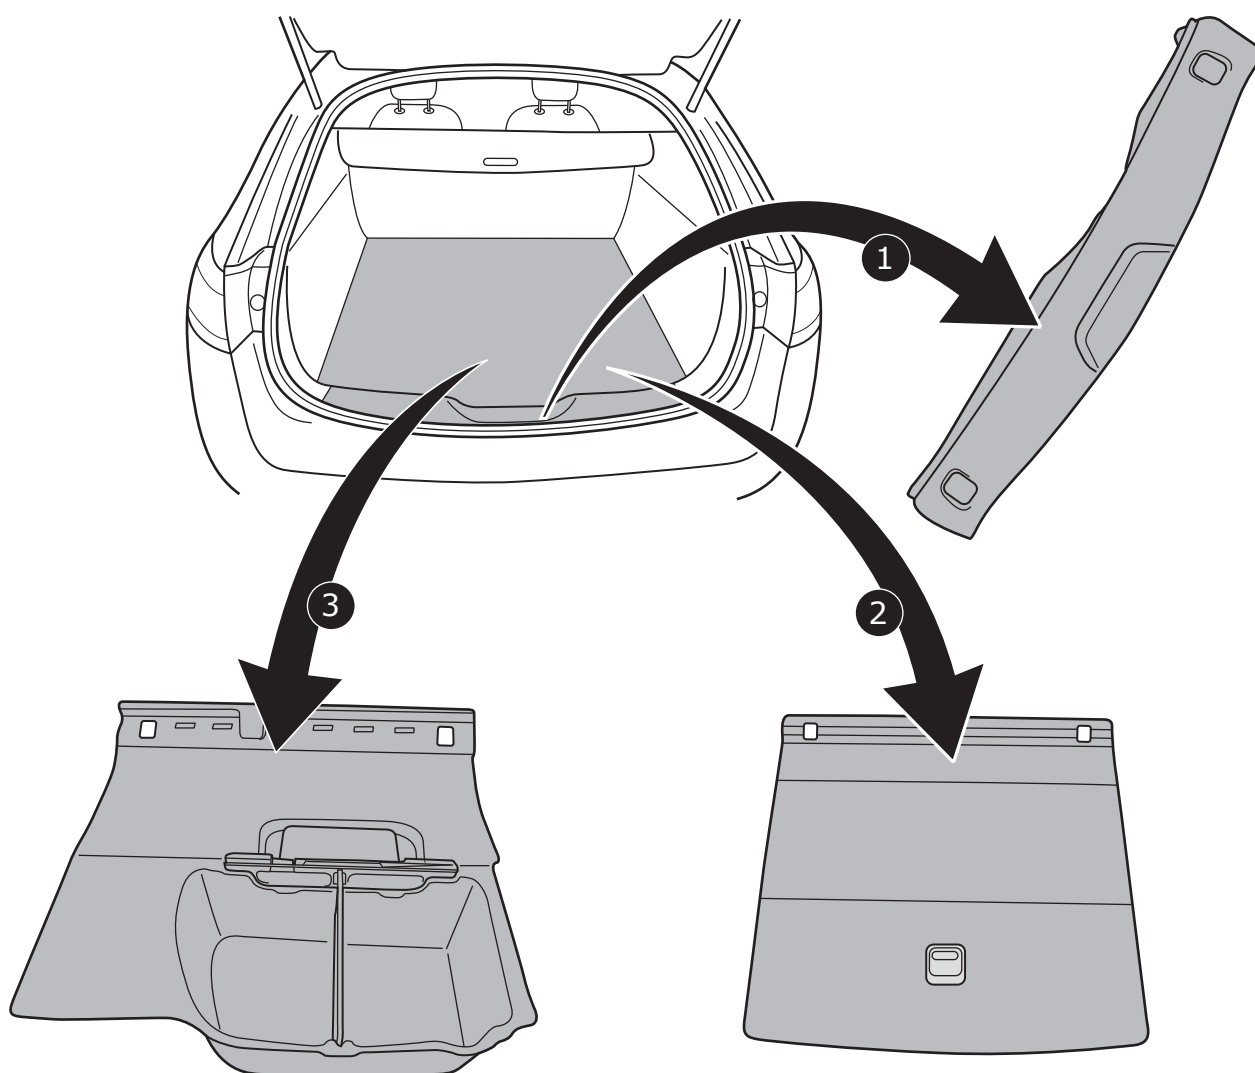


5

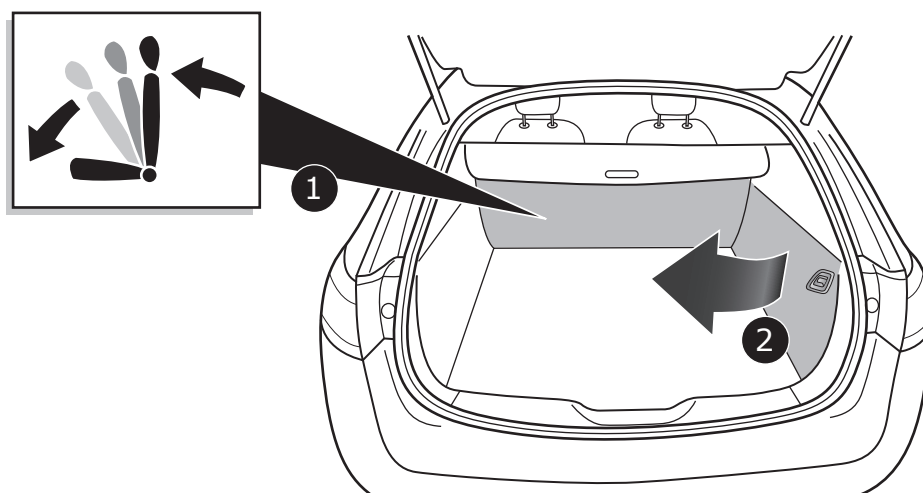

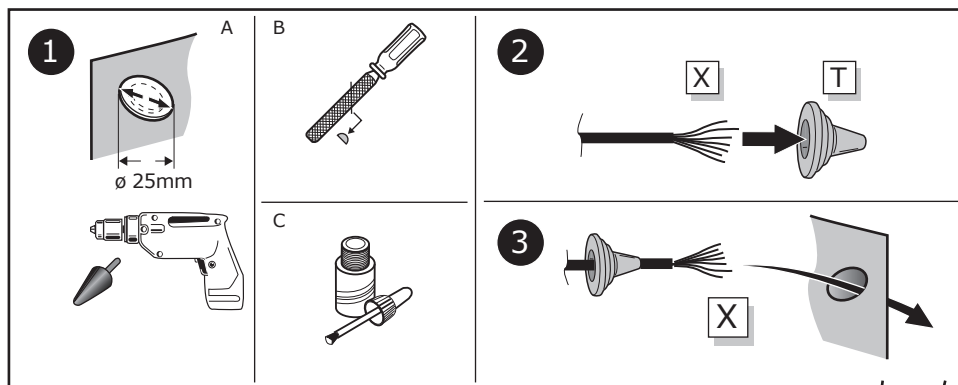


A


Option 1

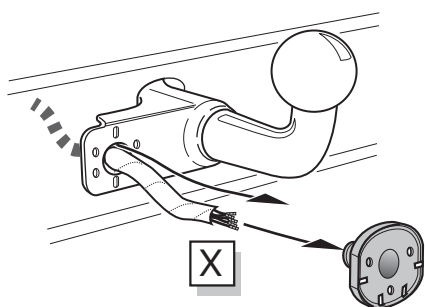

Option 2

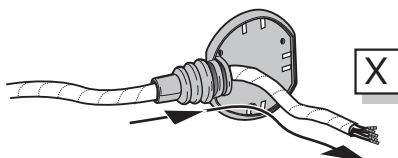

Option 3













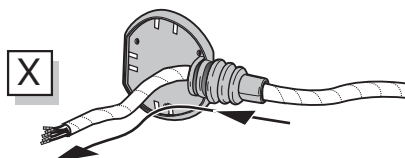


INFO


SOCKET CONNECTION




Pag. 11

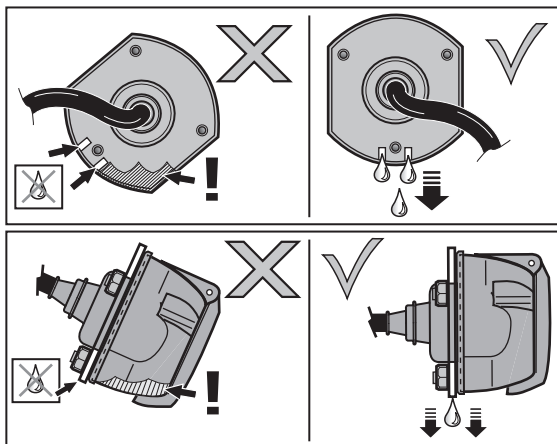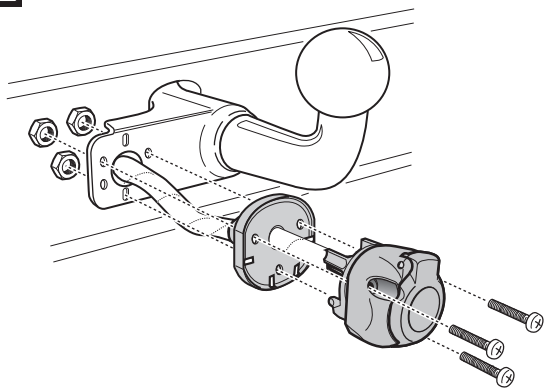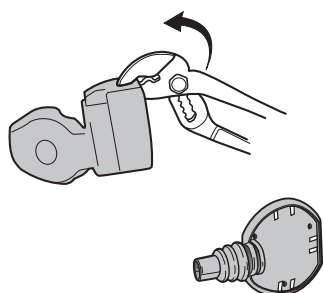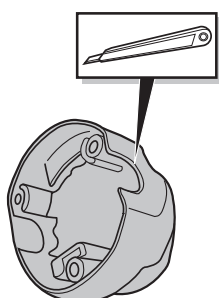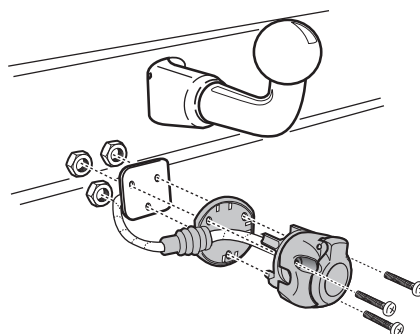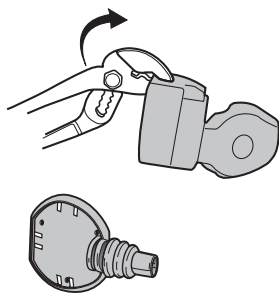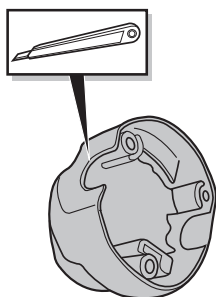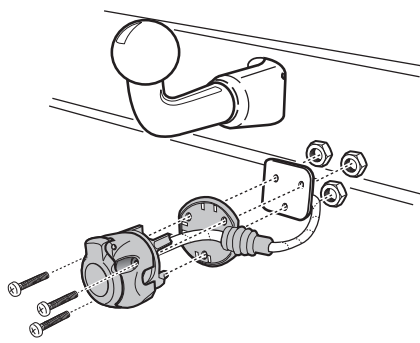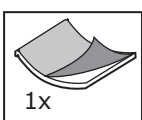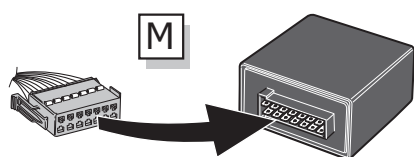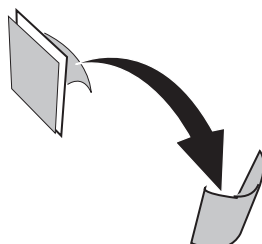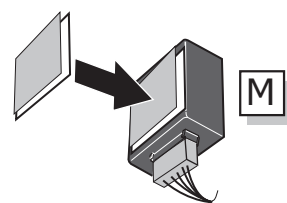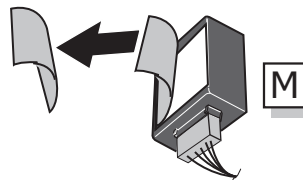B**Option 1****C****Option 2****1****2****3****D****Option 3****1****2****3****7****1****2****3****4**



8

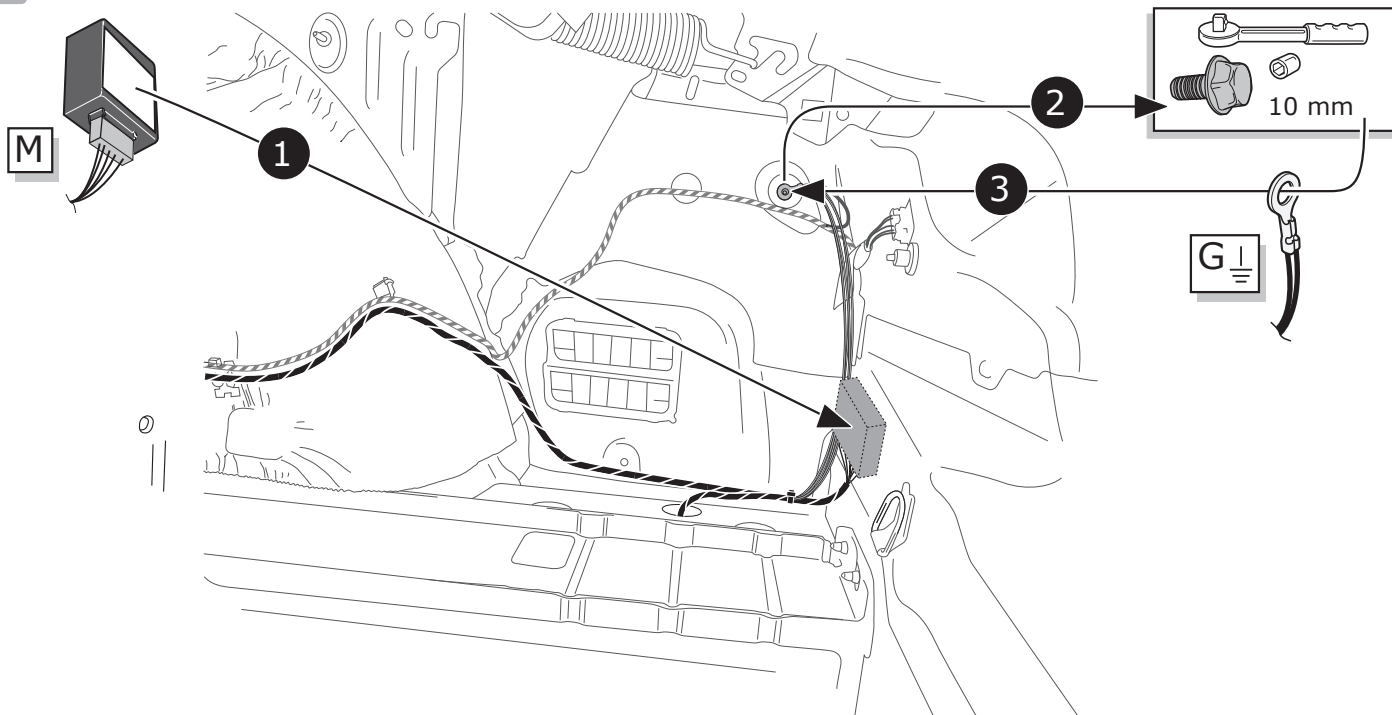



9

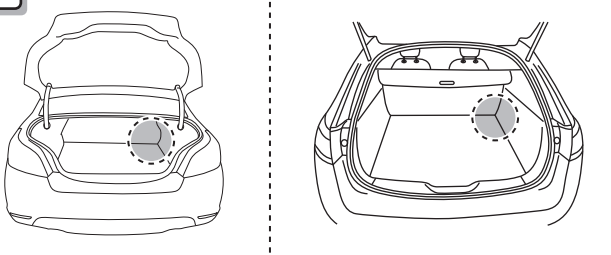

Option 1

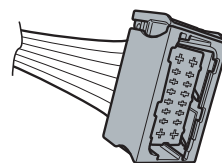


Option 2

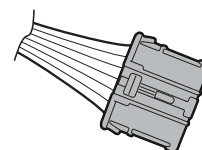

Option 1

16	8
15	7
14	6
13	5
12	4
11	3
10	2
9	1


L2

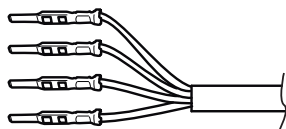


L1

Pin 1	12 V 	Orange + Orange
Pin 3	CAN H	Yellow/Black
Pin 5	CAN L	Green/Black
Pin 13	54 	Blue/Red

1

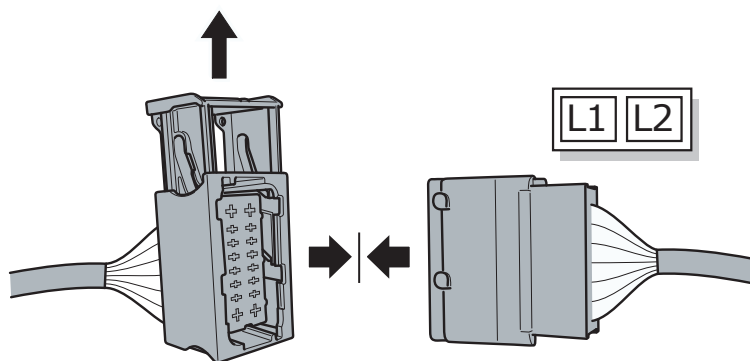


2

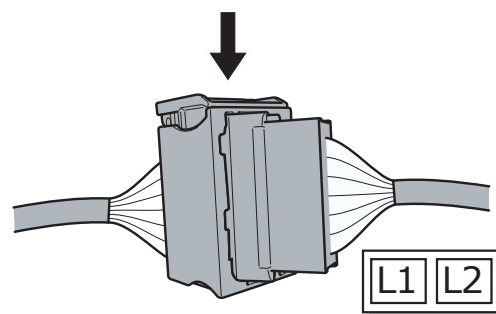


3

Option 2

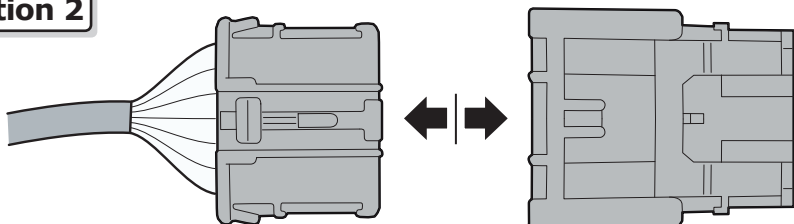


1

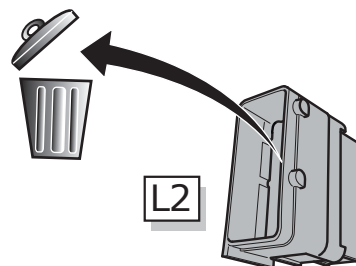

2


6
5
4
3
2
1

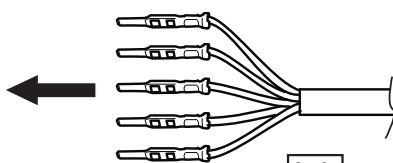

L1






Pin 1	CAN H	Yellow/Black
Pin 2	54 	Blue/Red
Pin 4	12 V 	Orange + Orange
Pin 5	CAN L	Green/Black

3

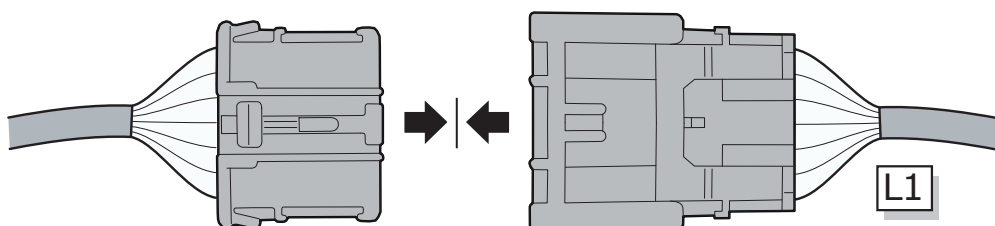

L1

4

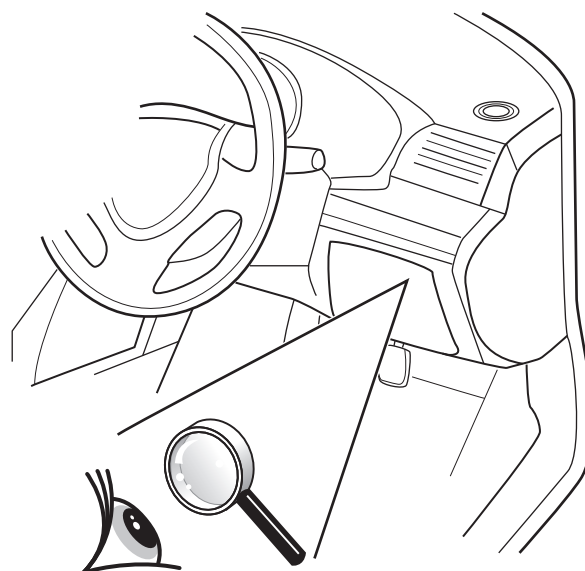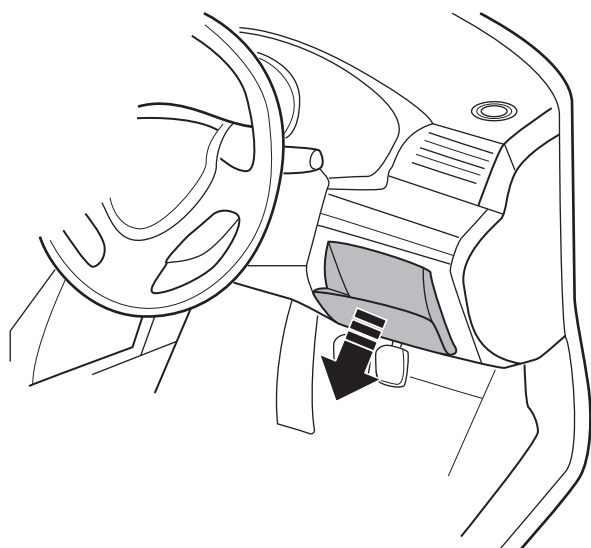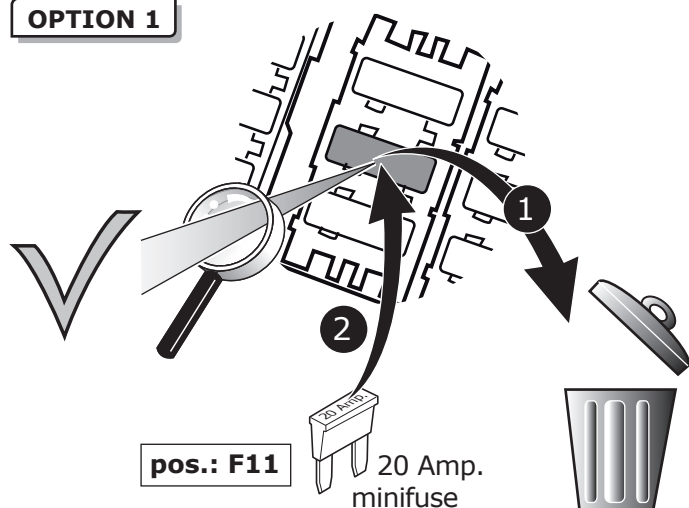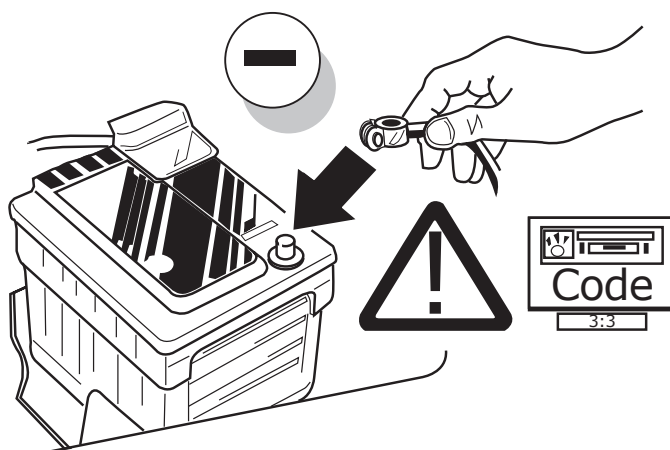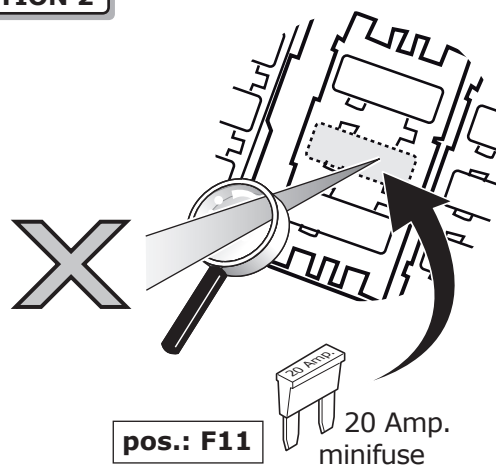
OPTION 1

OPTION 2


INFO



Register for lighting functions


14

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

15

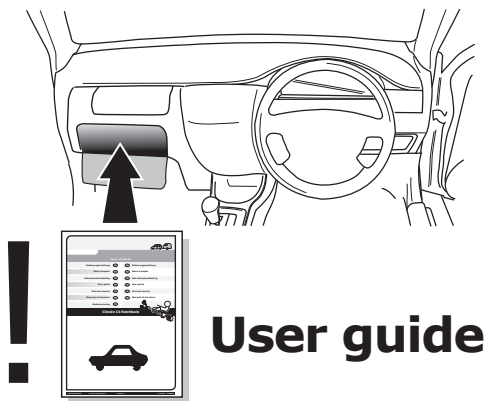


INFO


SOCKET CONNECTION

DIN/ISO 1724	←	🚗	⚡ 1-7	→	☀️	STOP	☀️
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	42W	3x21W	42W
Colour	Yellow	Blue	White	Green	Brown	Red	Black


⚠ MAX = 21W

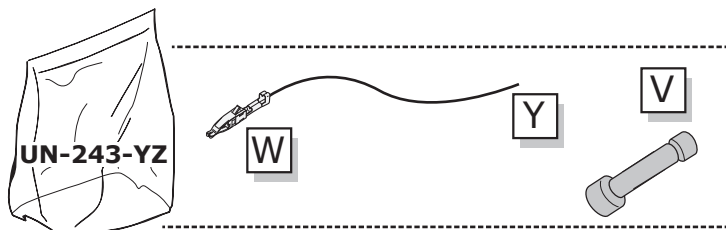


A

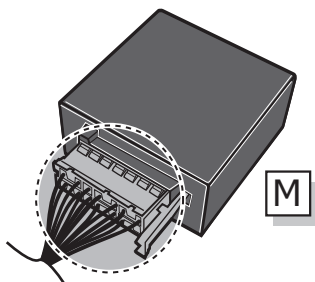


1

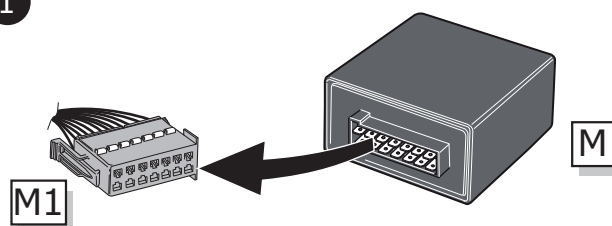


2

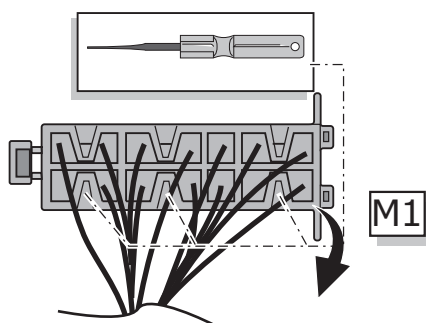


3

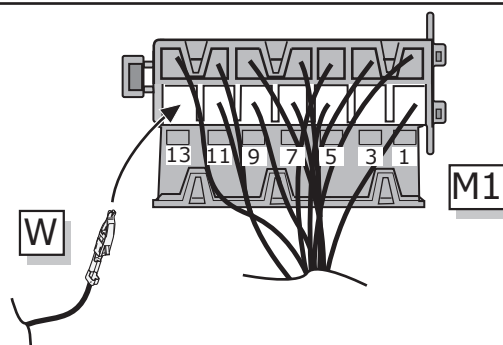

4

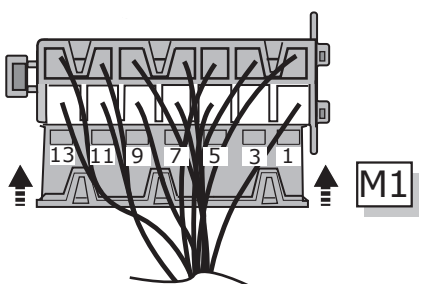

5

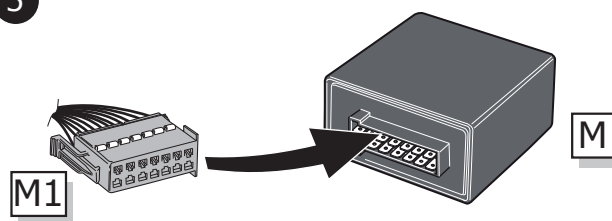

B

⚠ MAX = 21W

