

Citroën C3 12/2016 >> 08/2024



Citroën C3 Aircross 10/2017 >> 09/2024

Partnr.: PE-065-D1U


- Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
ukts@ecs-electronics.com / 07440 202 052.



Part list

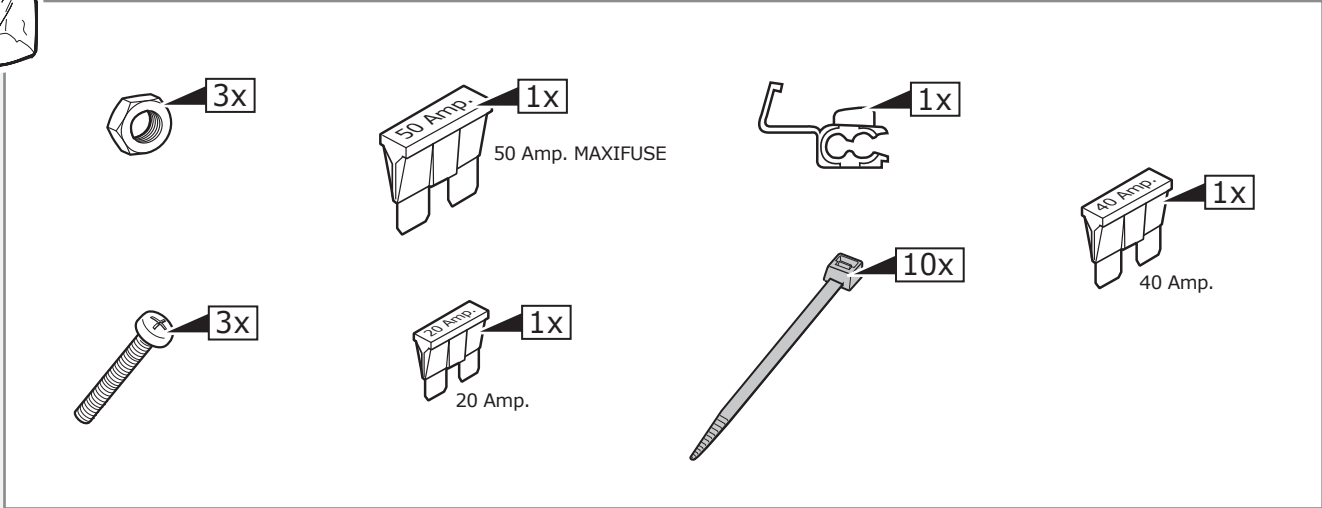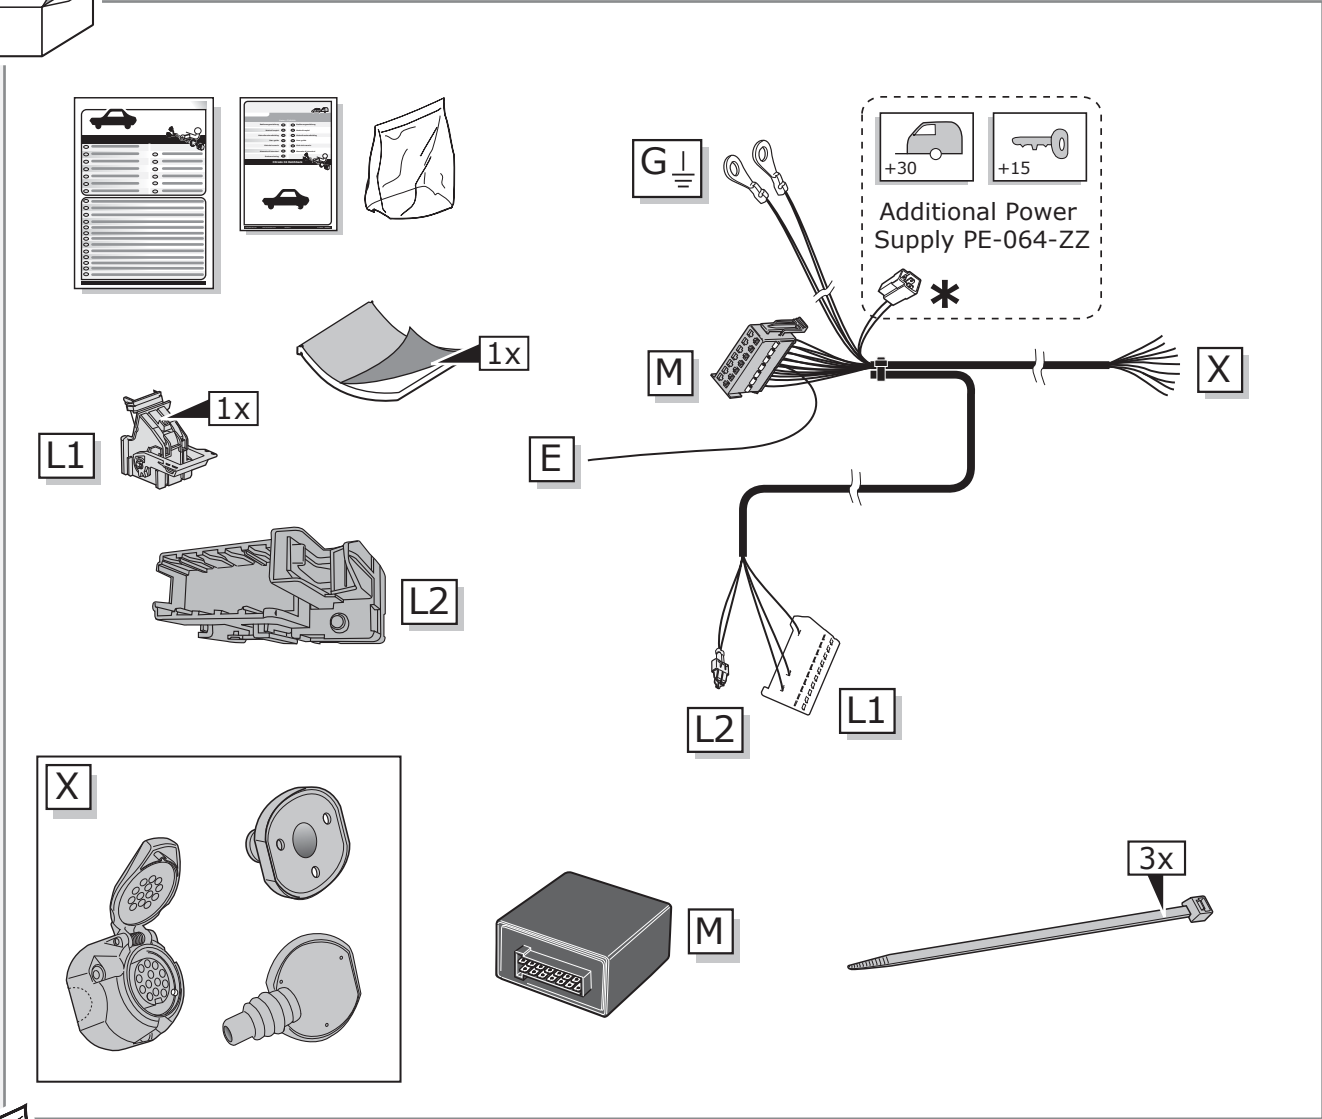


INFO

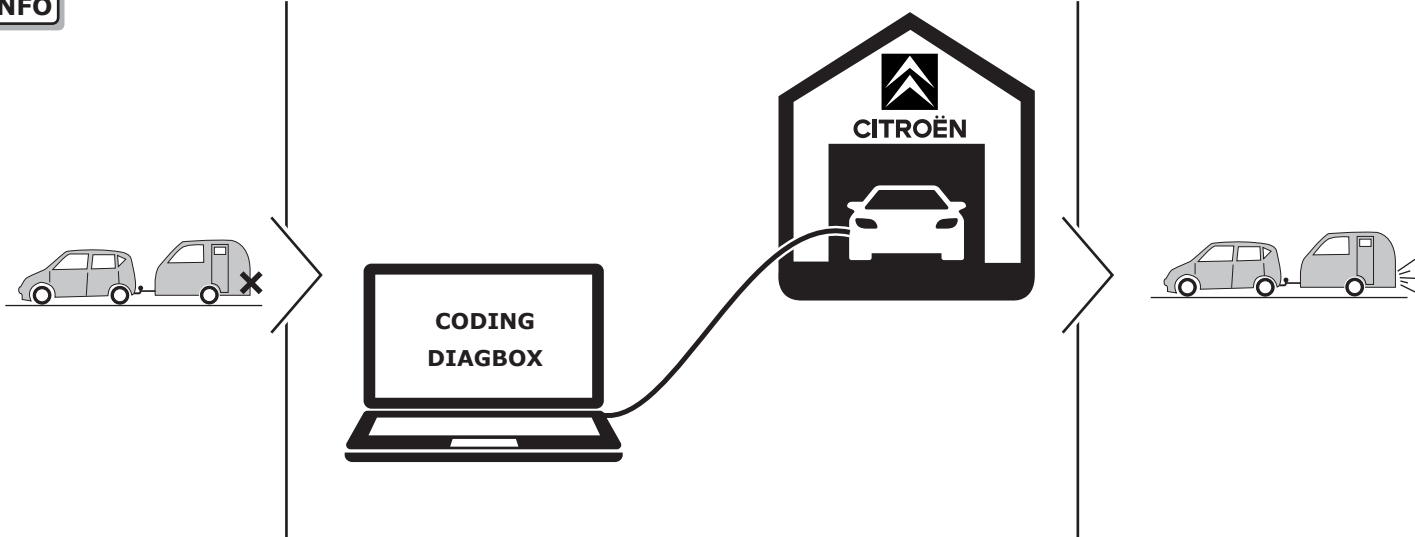


Code vehicle for lighting functions


ROUTING

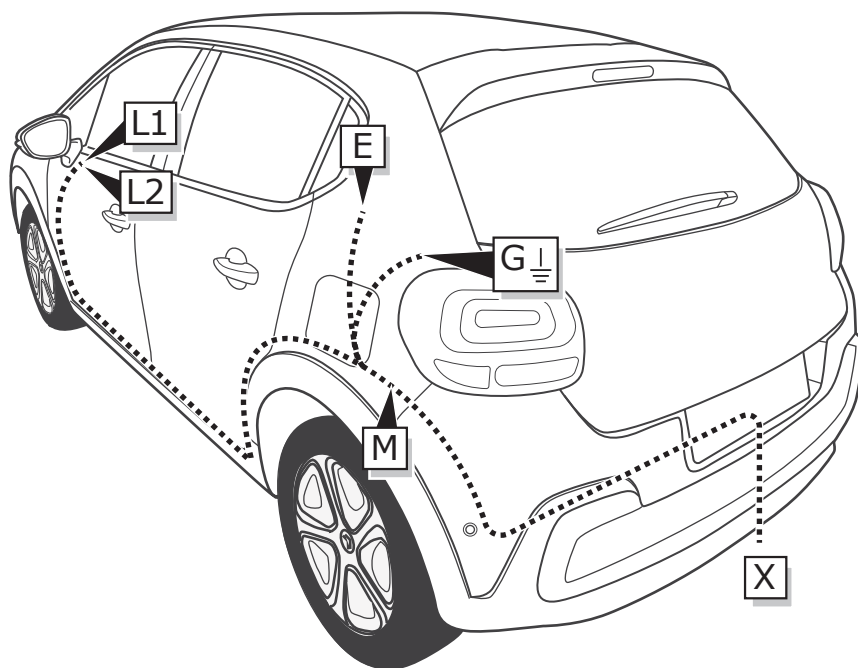


1

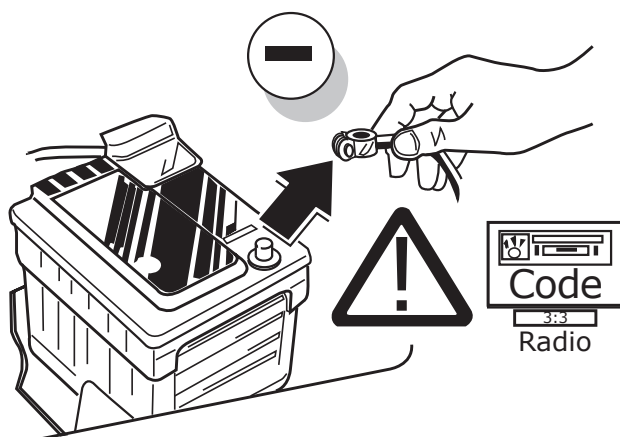


2

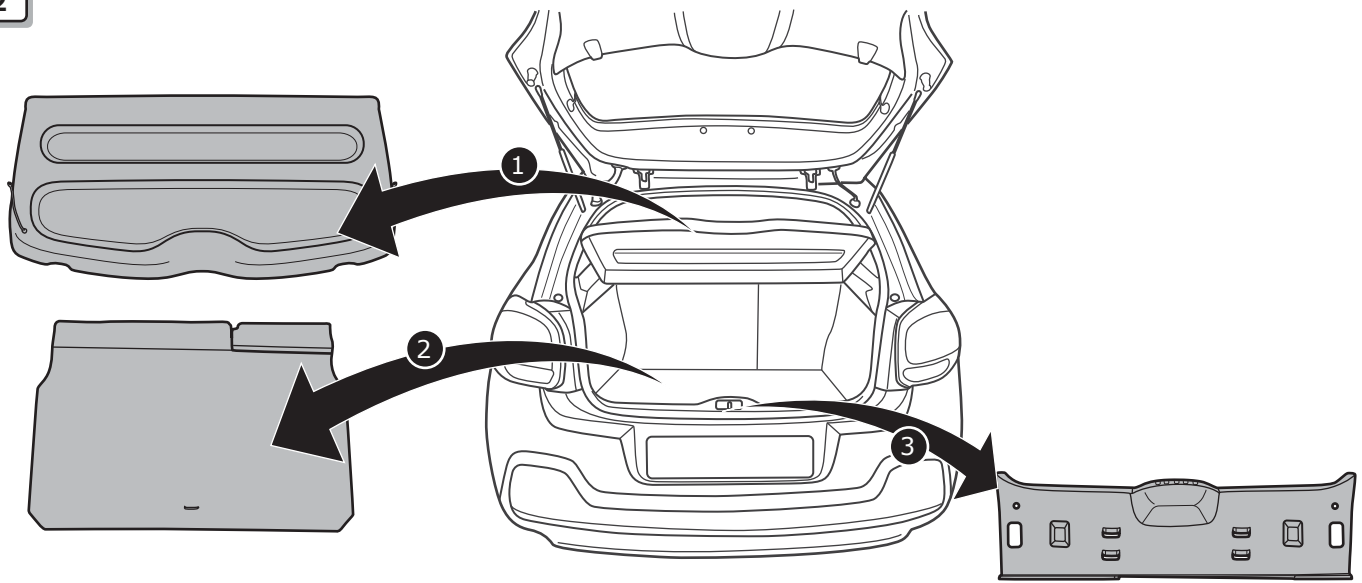



3

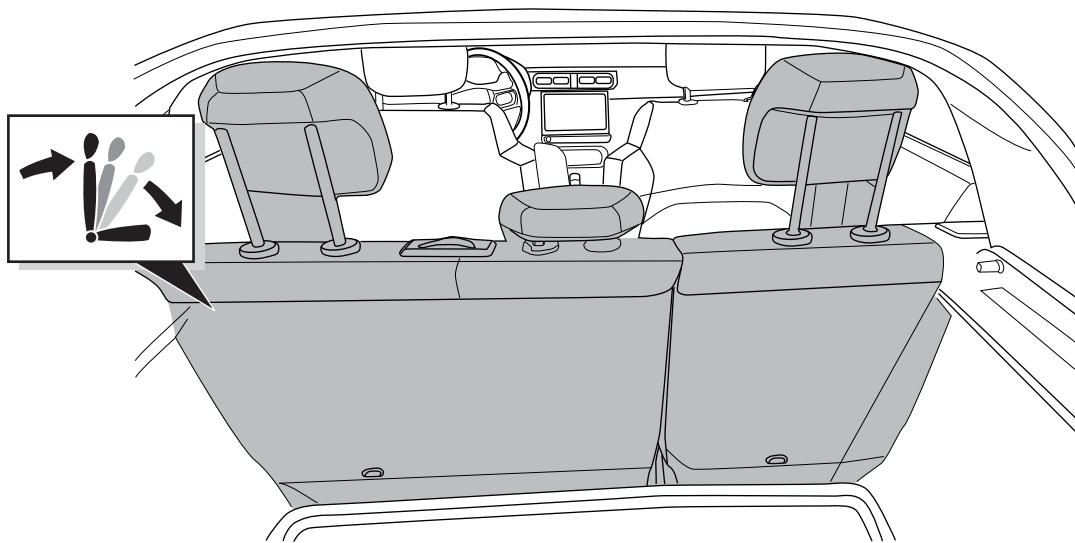



4

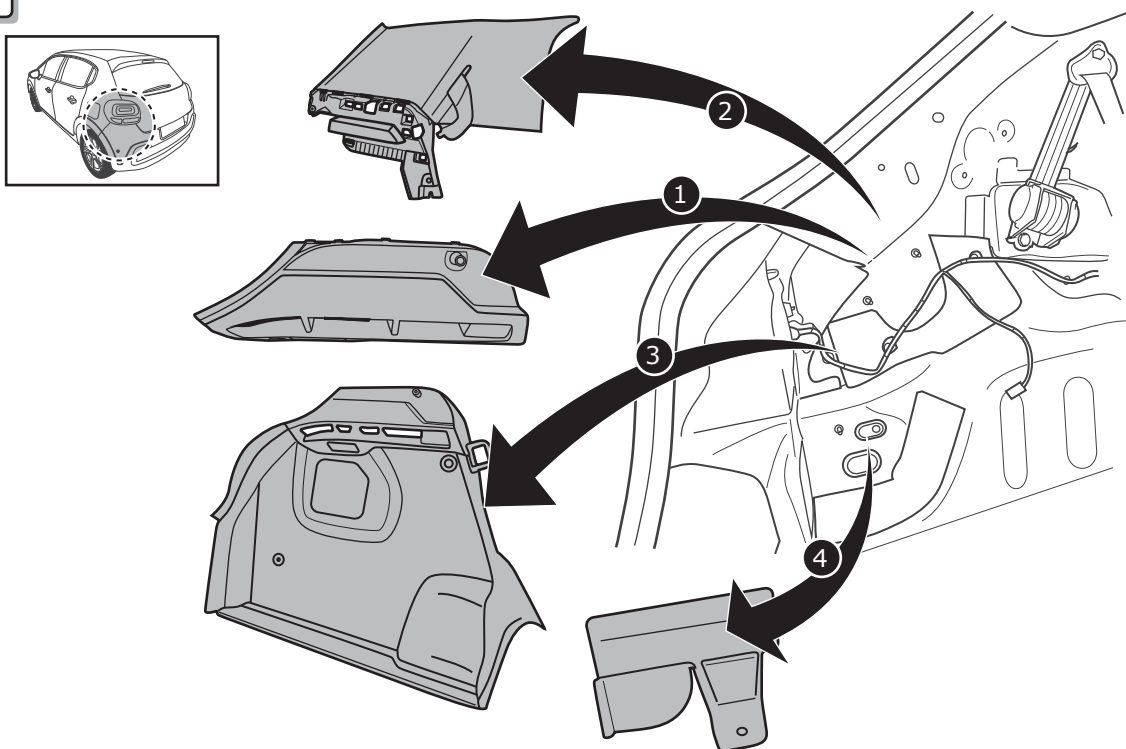

5

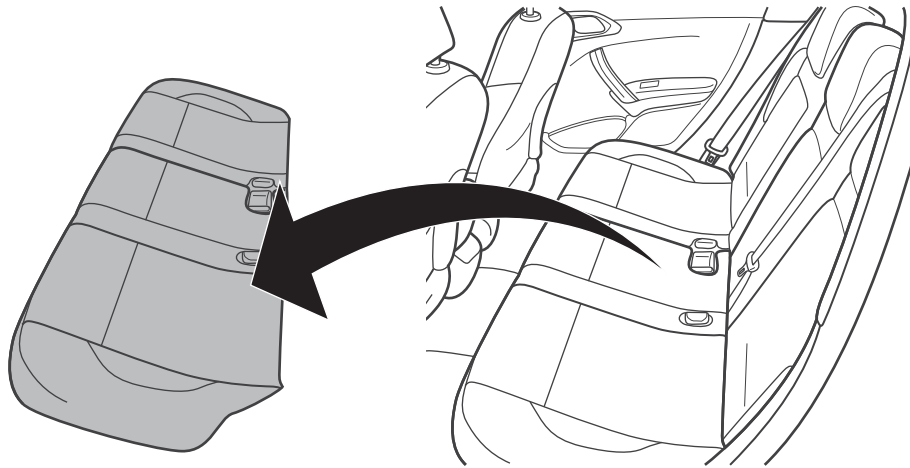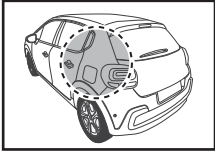


6

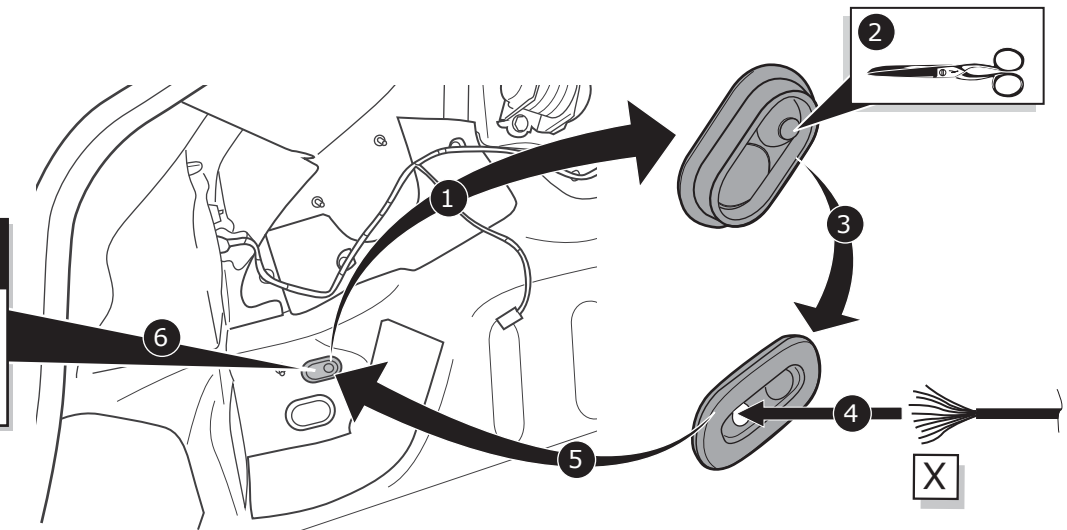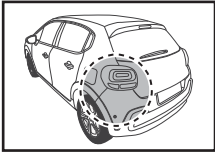


A


Option 1

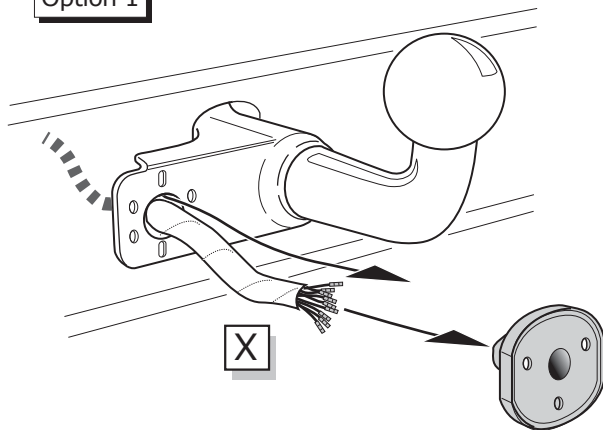

Option 2

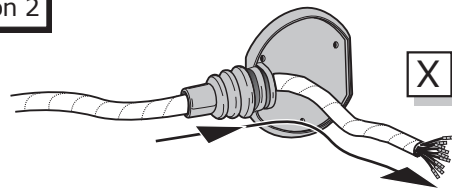

Option 3
















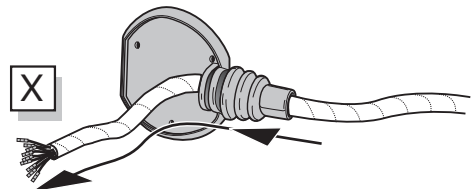


INFO




SOCKET CONNECTION






Page 15

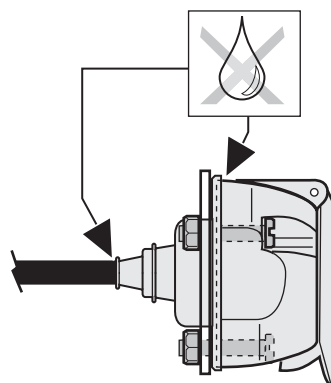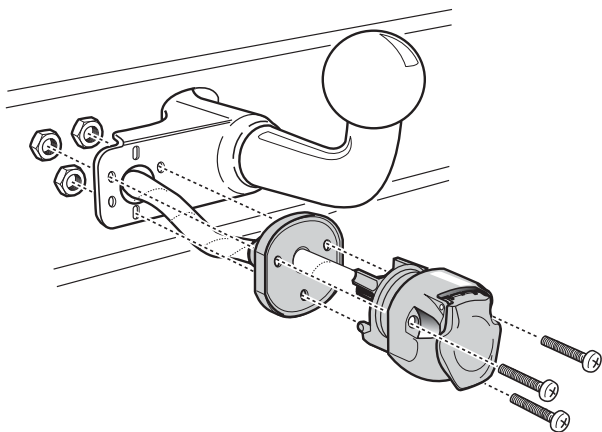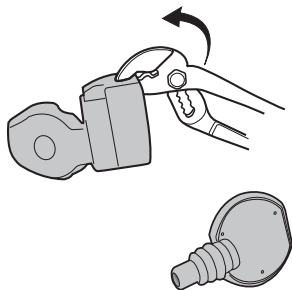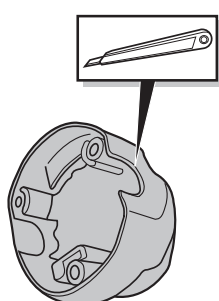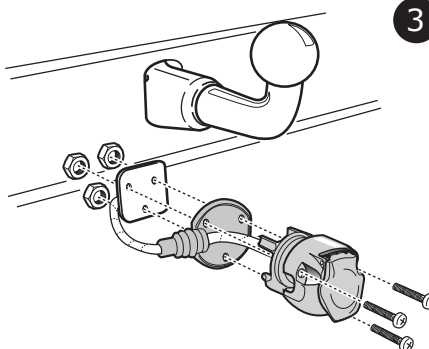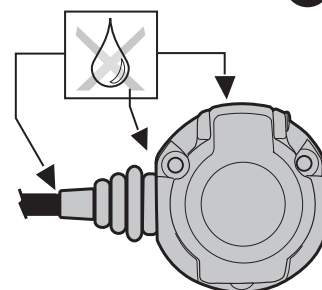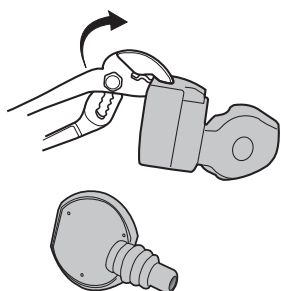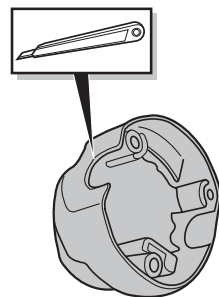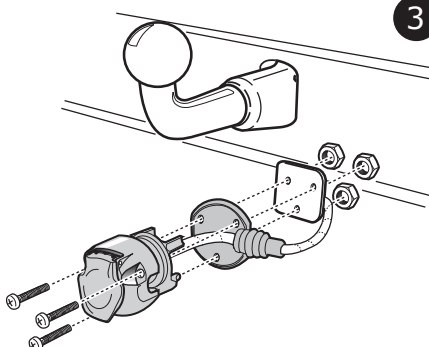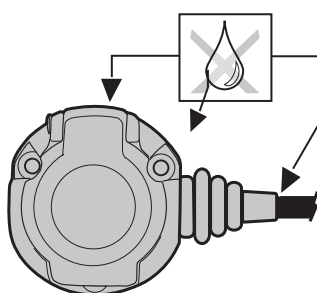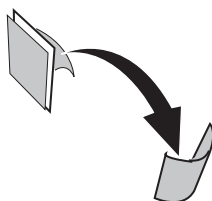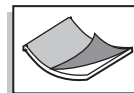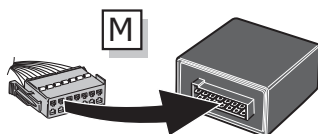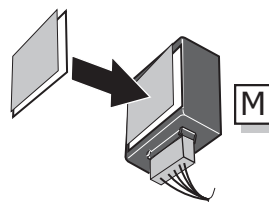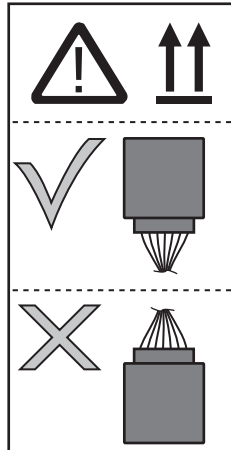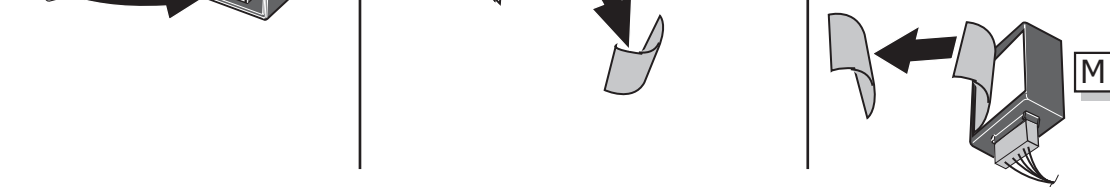B**Option 1****C****Option 2****1****2****3****4****D****Option 3****1****2****3****4****7****1****2****3****4**



8

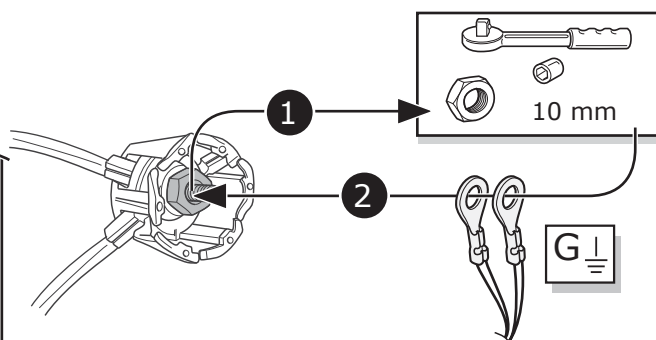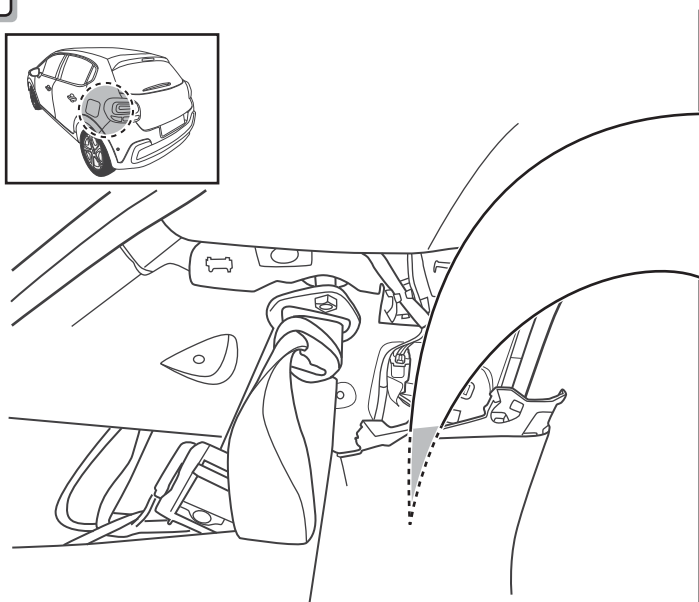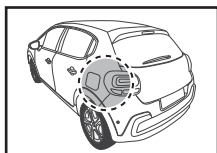


9

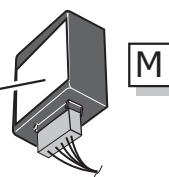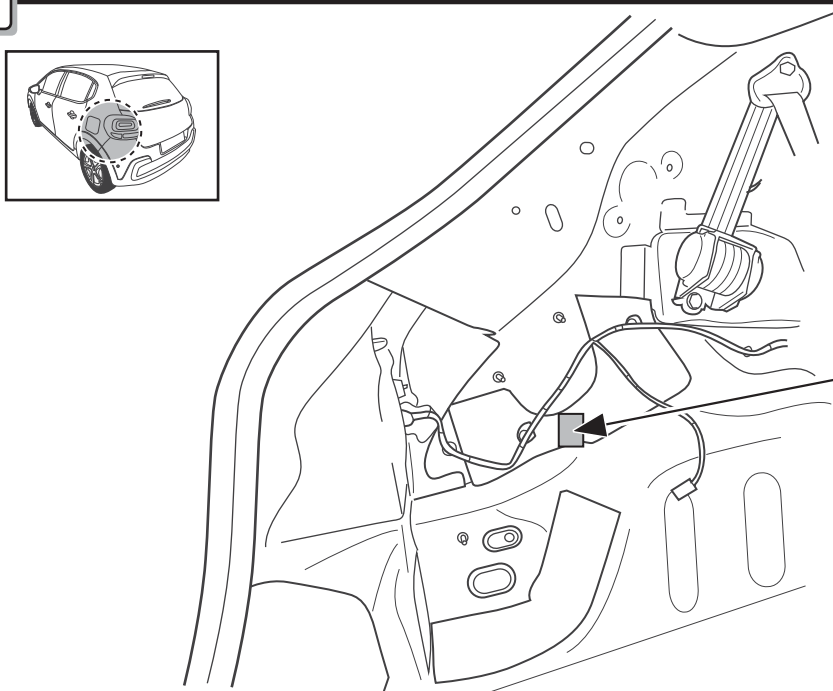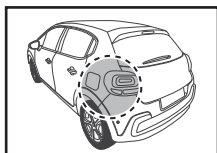


10

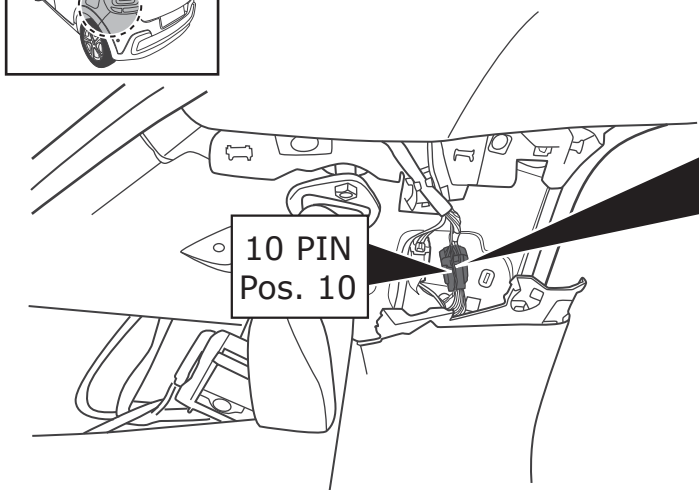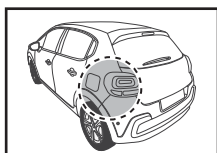



10 PIN
Pos. 10

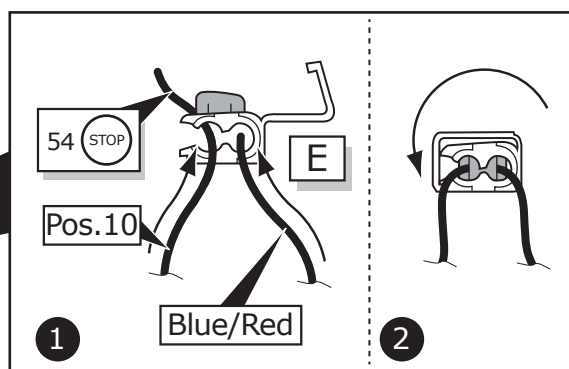


11

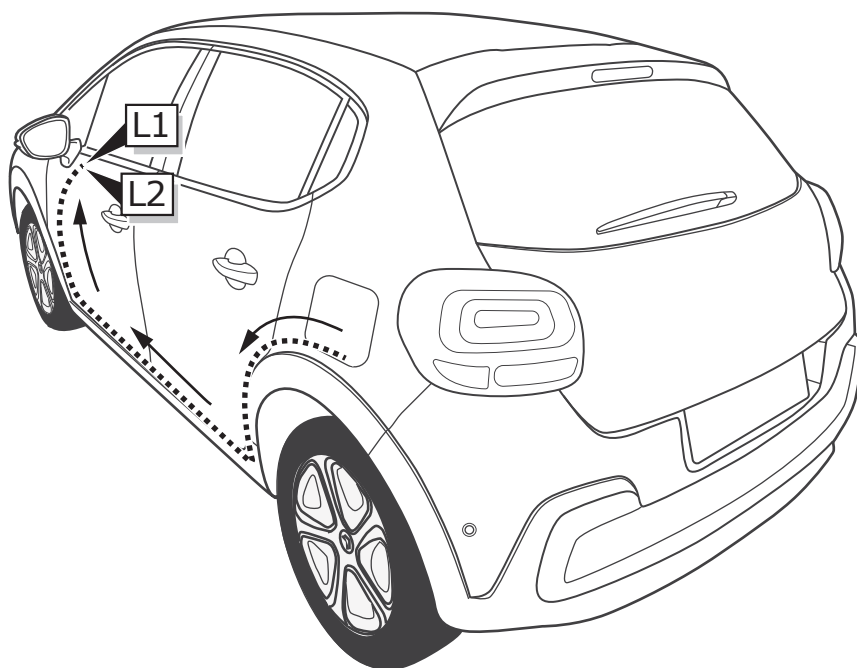


12

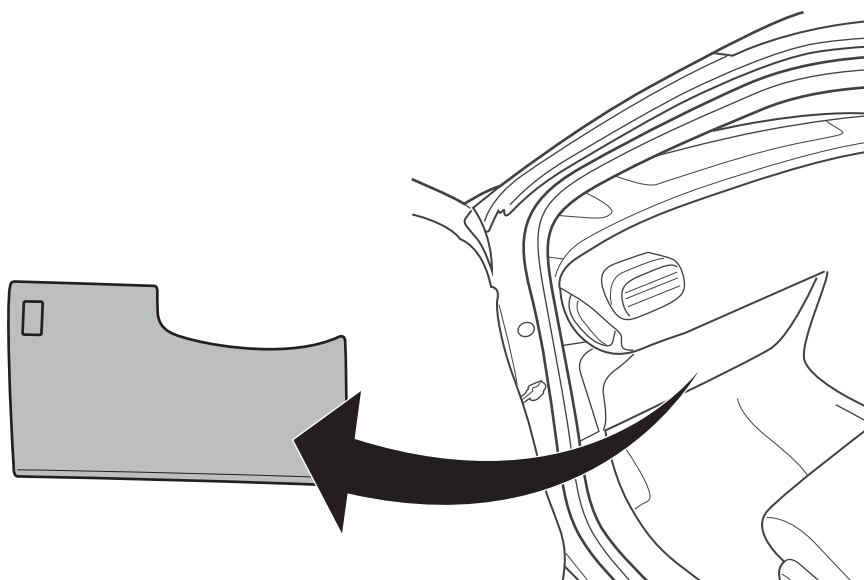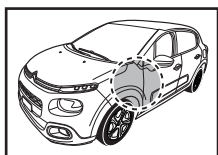


13

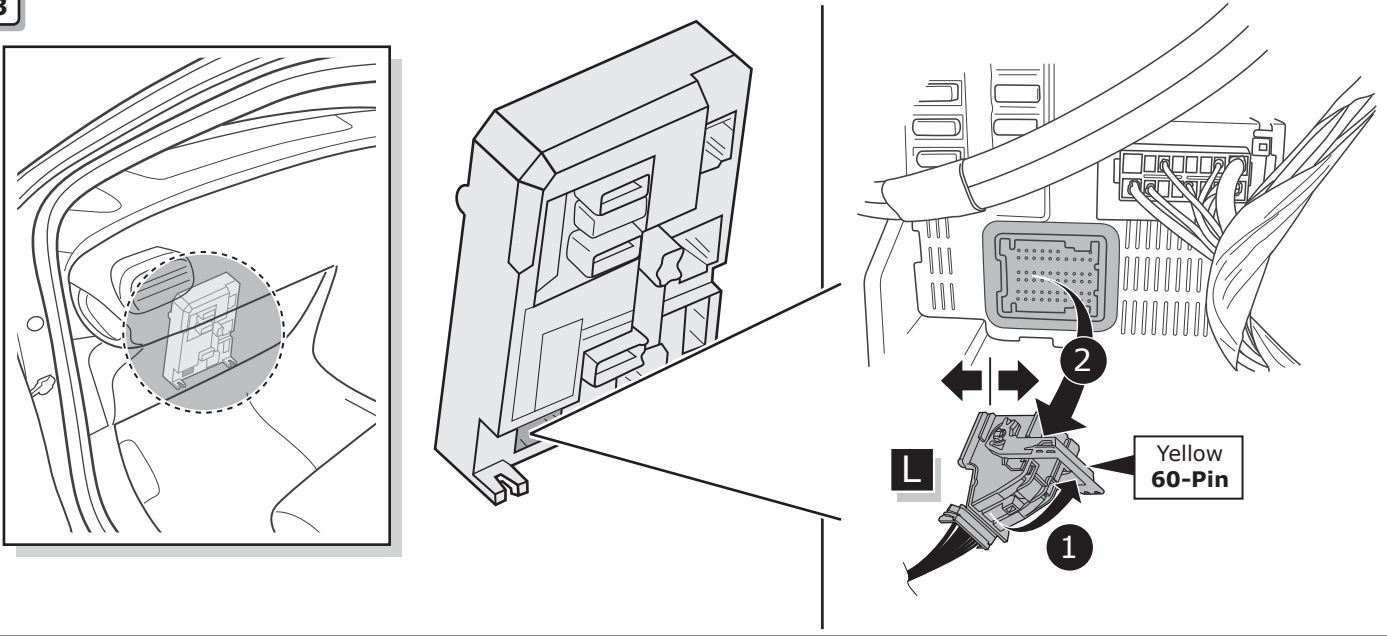



14

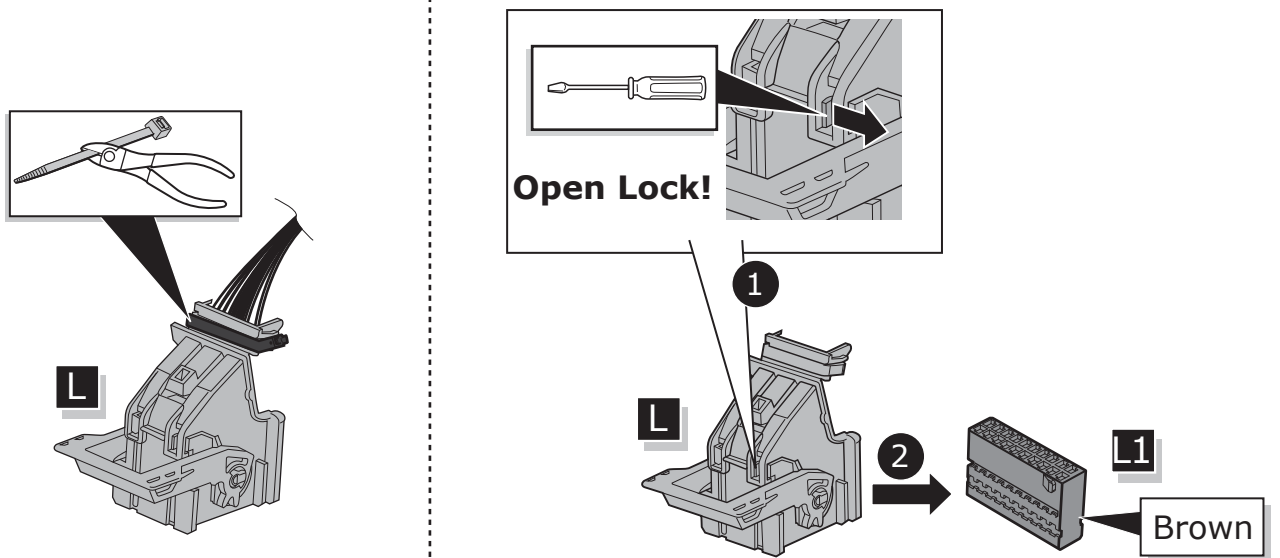




15

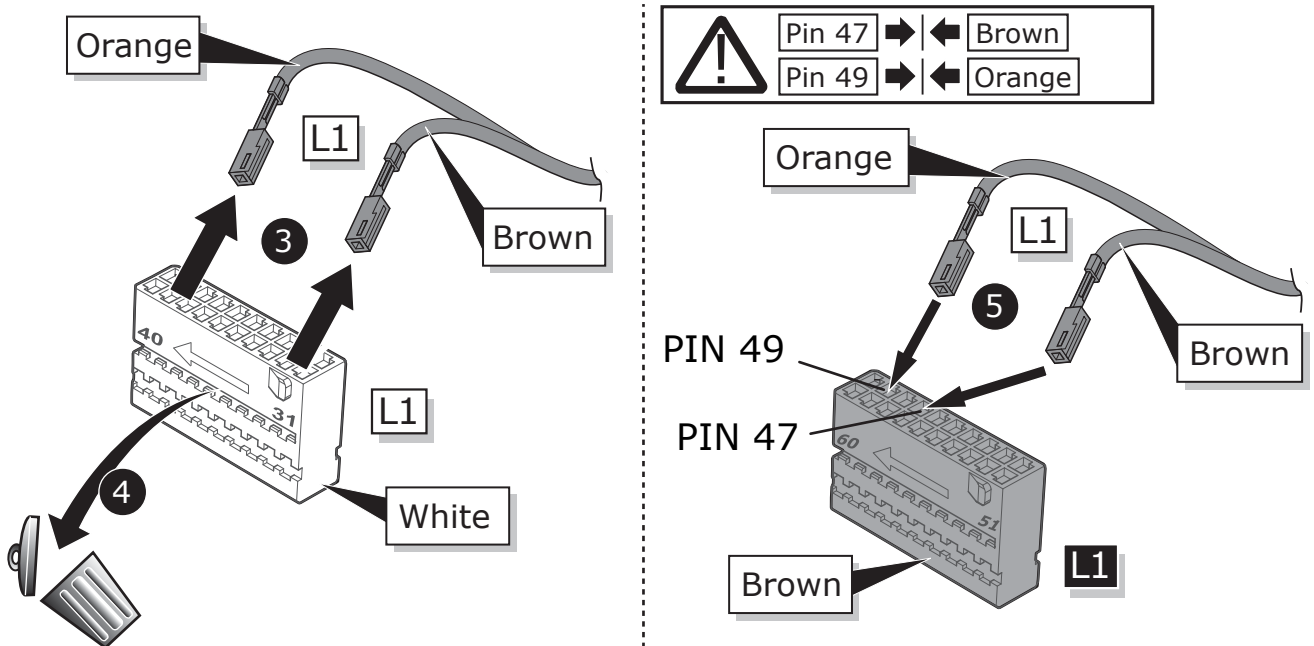


16

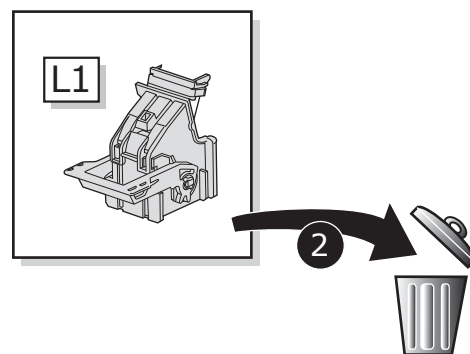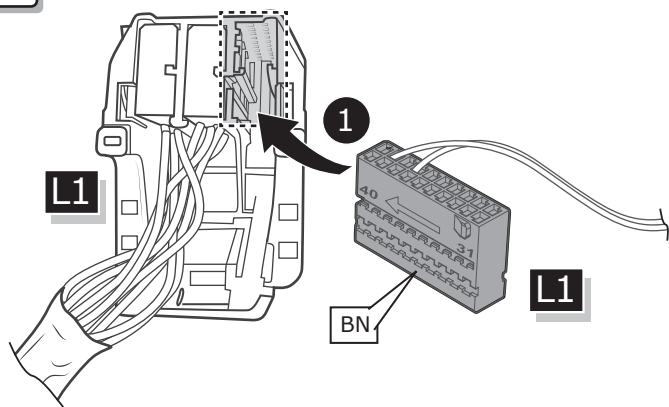


17

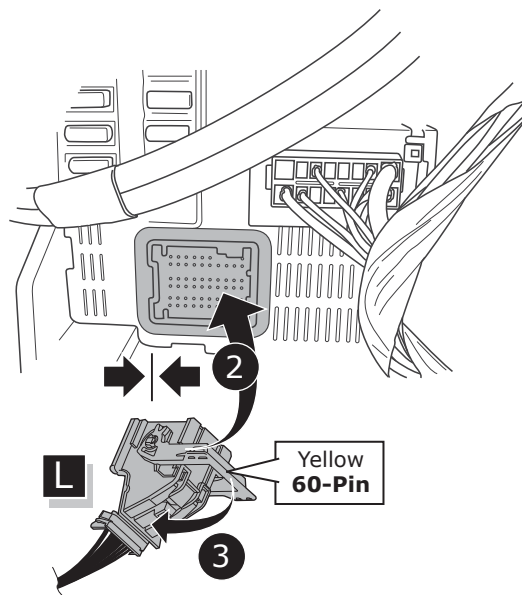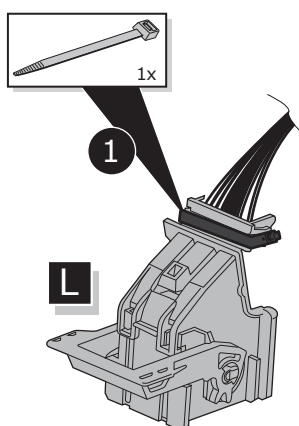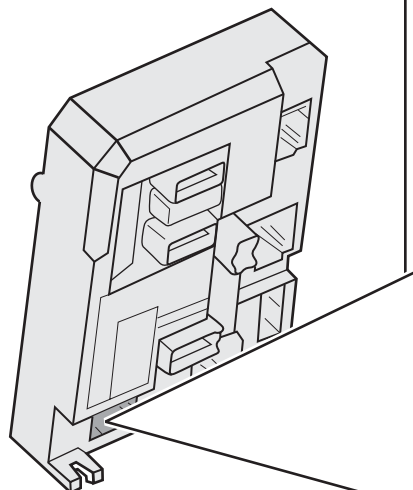





18A


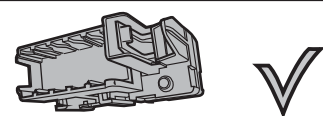


Fuse holder





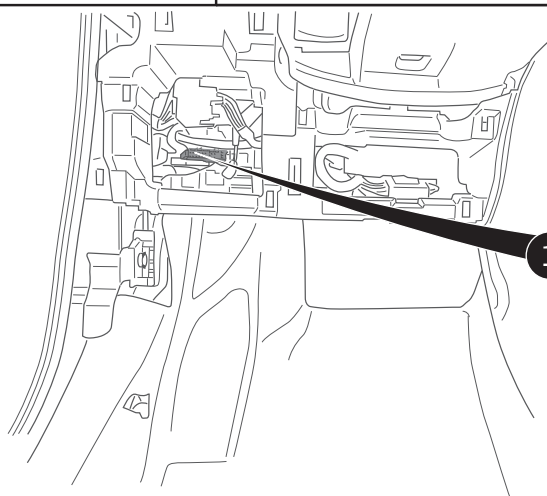






2 UNLOCK

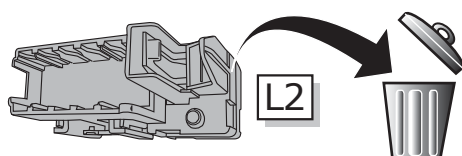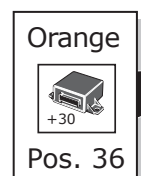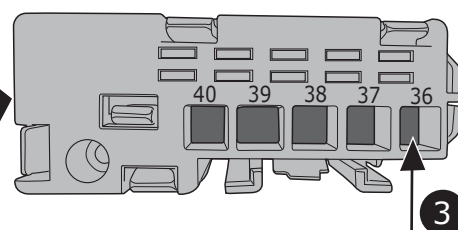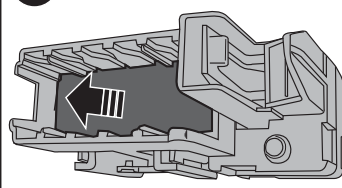


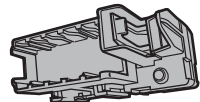
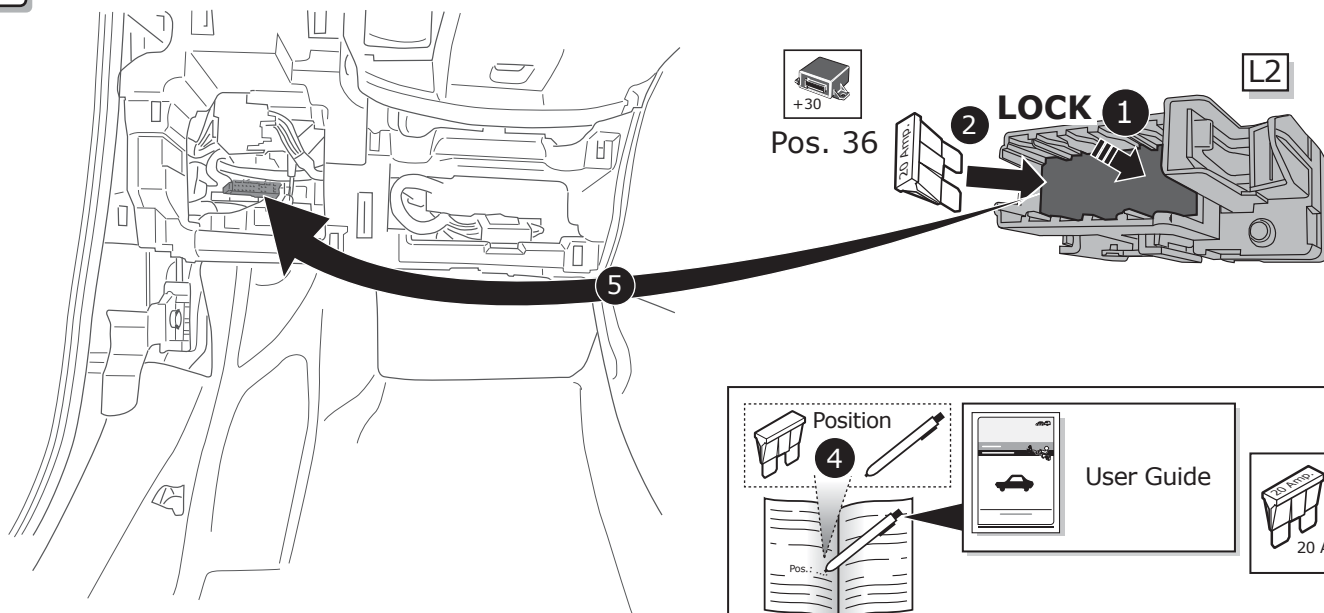


Fuse holder

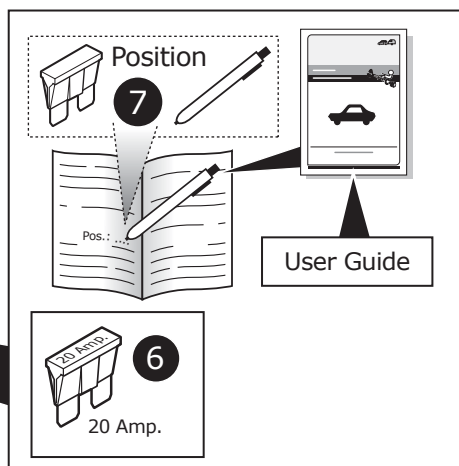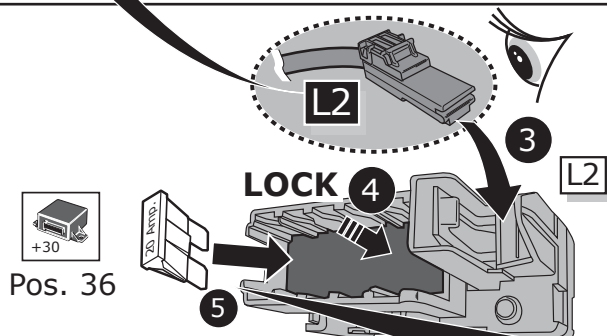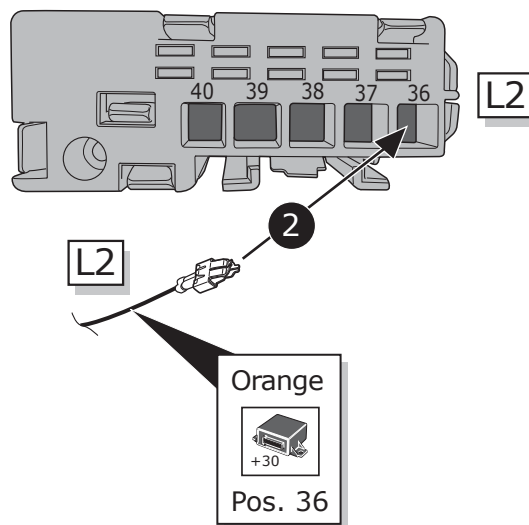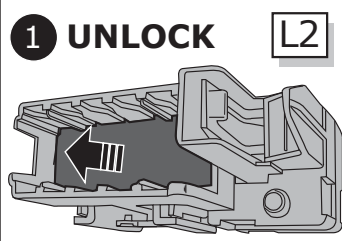
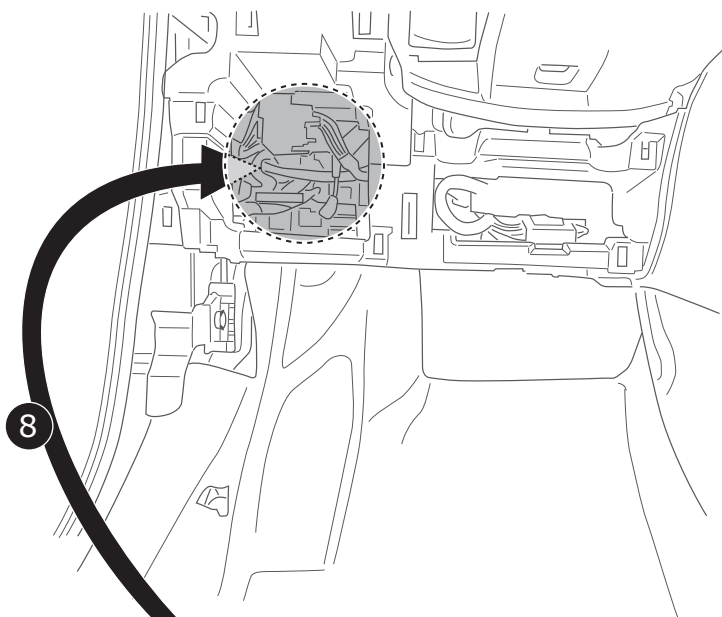


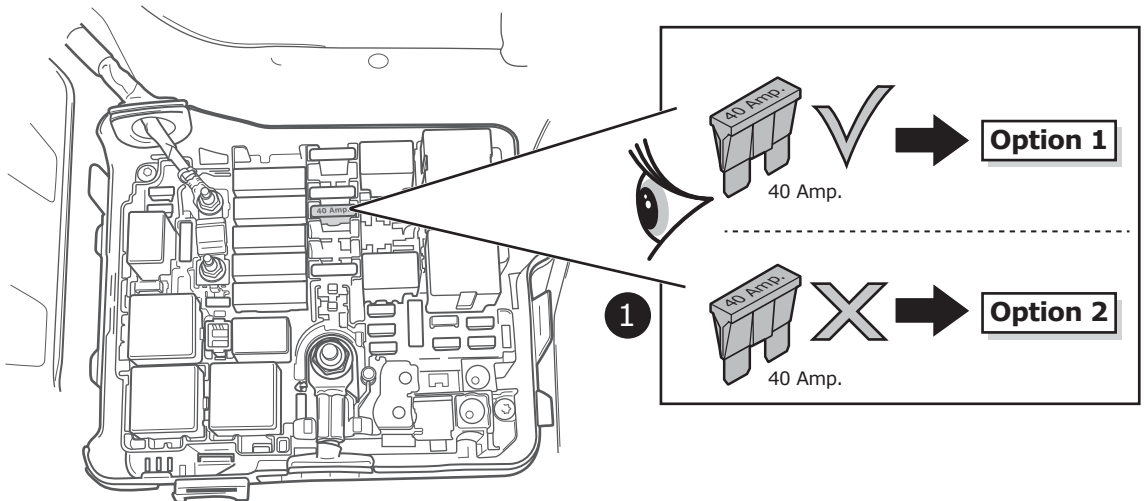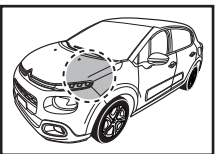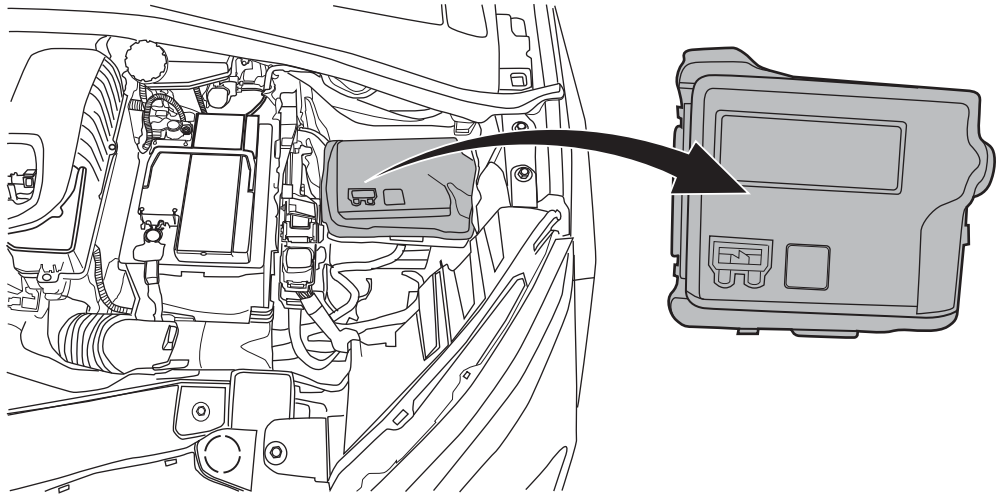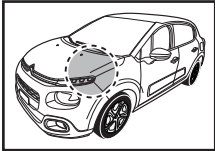


Option 1

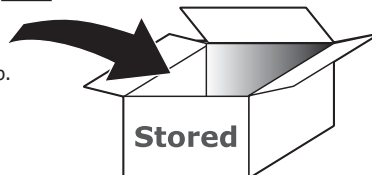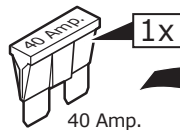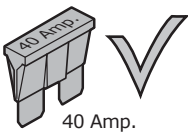


Option 2

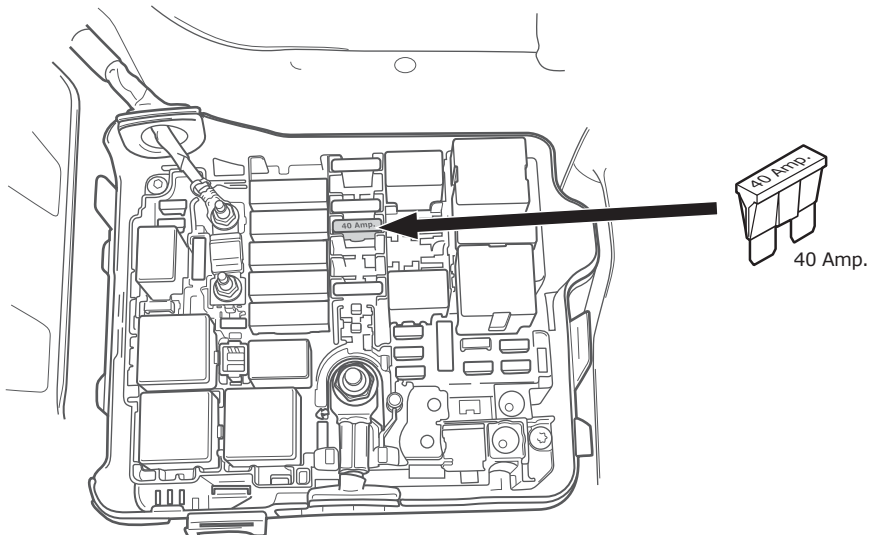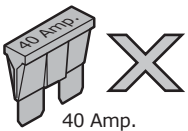

22

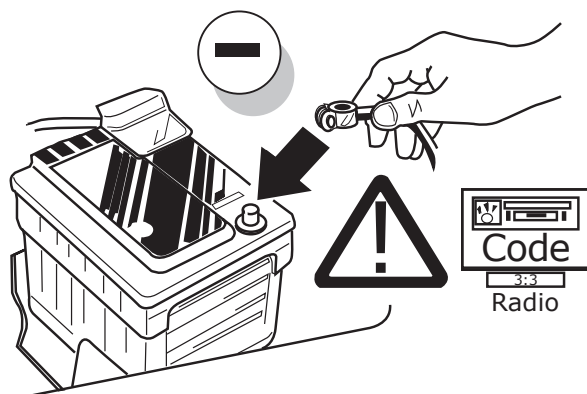

23



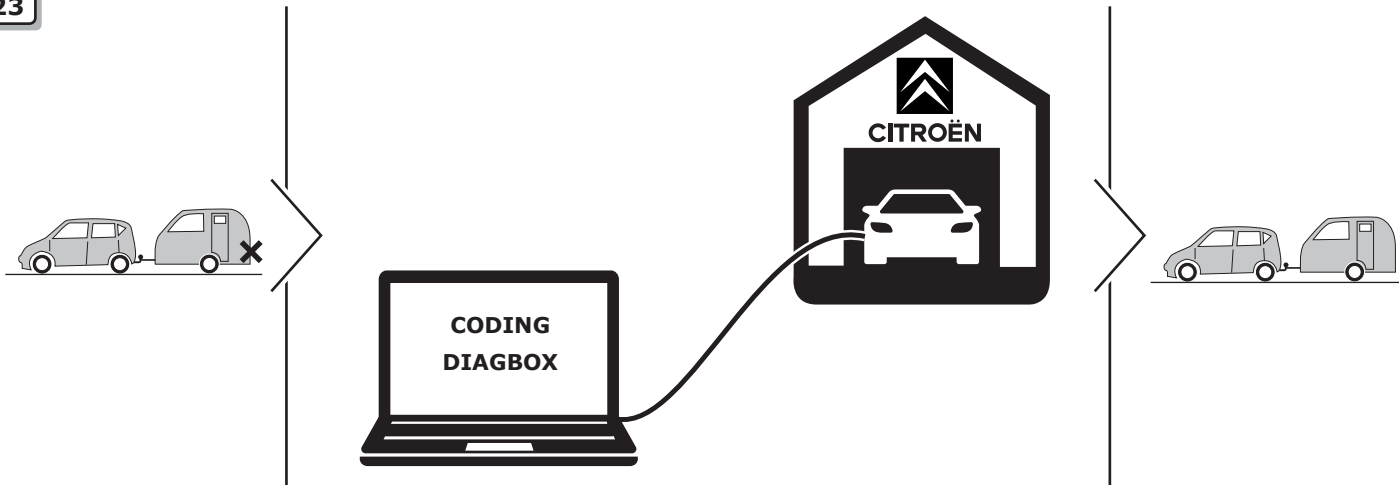


The activation of the trailer functions has to be carried out using the **CITROËN DIAGBOX** as follows:

- choose vehicle
- delivery
- equipment
- trailer control unit (BSR)
- installation of equipment

24



Functional test

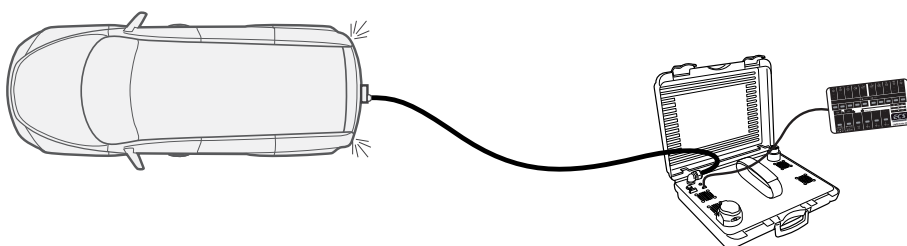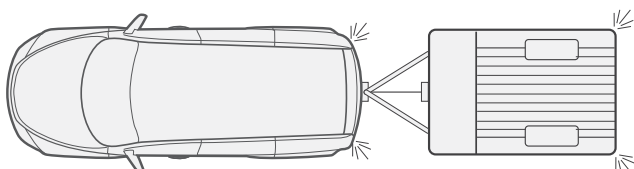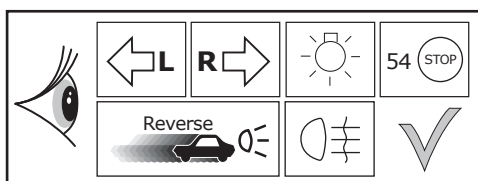

LIGHTMATE®


ECS part no.
LIGHTMATE II
LIGHTMATE III

25

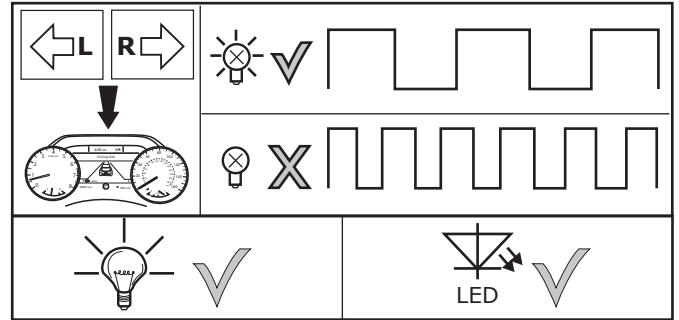
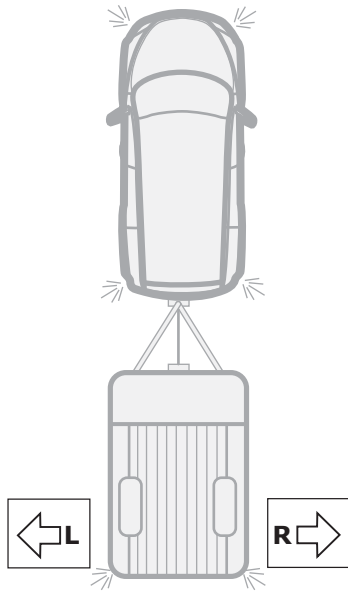



26

Optional Adapter socket

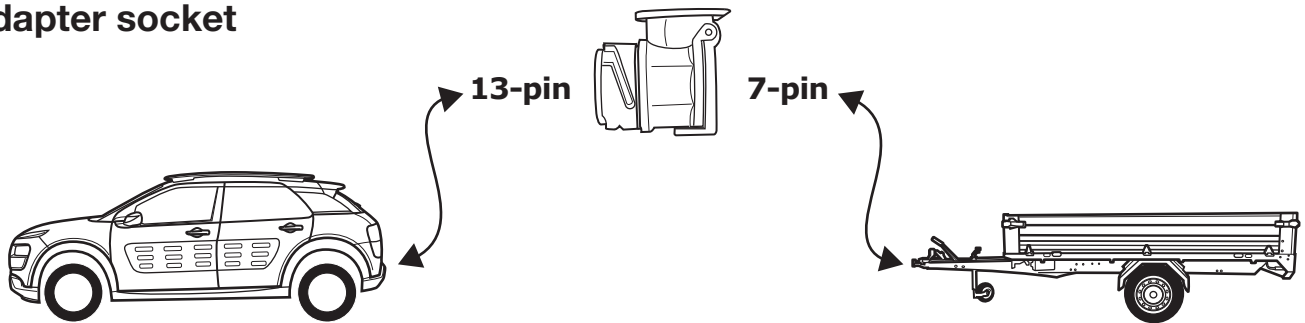

27

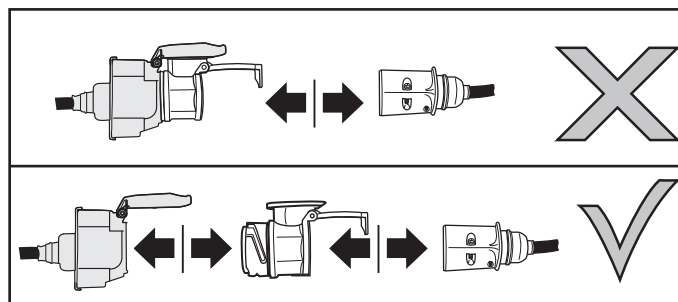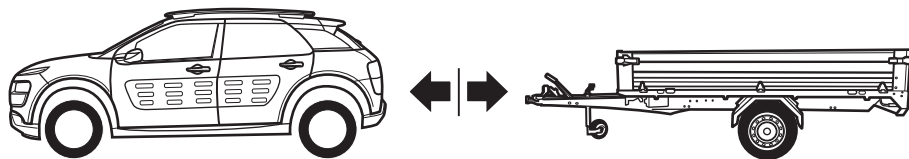

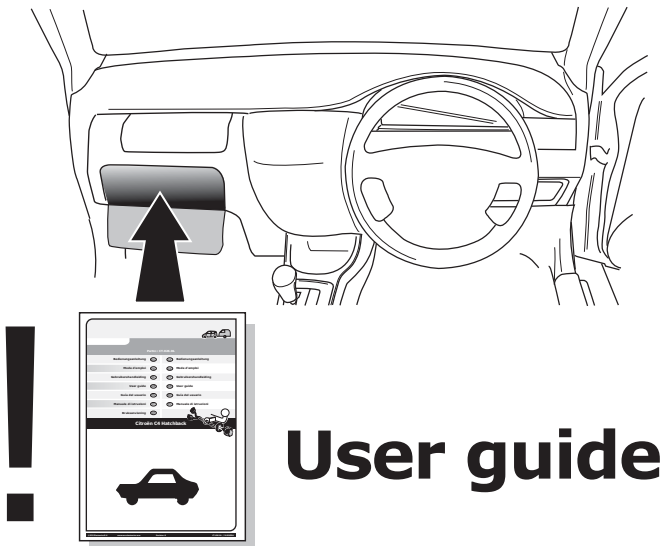








User guide



INFO

SOCKET CONNECTION

DIN/ISO 11446													
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	21W		21W	52W	3x21W	52W	21W	180W/15Amp	180W/15Amp			
Colour	Yellow	Blue	White	Green	Brown	Red 1,00 mm ²	Black	Black/ Red	Brown/ White	Red 2,50 mm ²	White	-	White