




Skoda Yeti 2010-




Partnr.: SK-015-D2U

- Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.

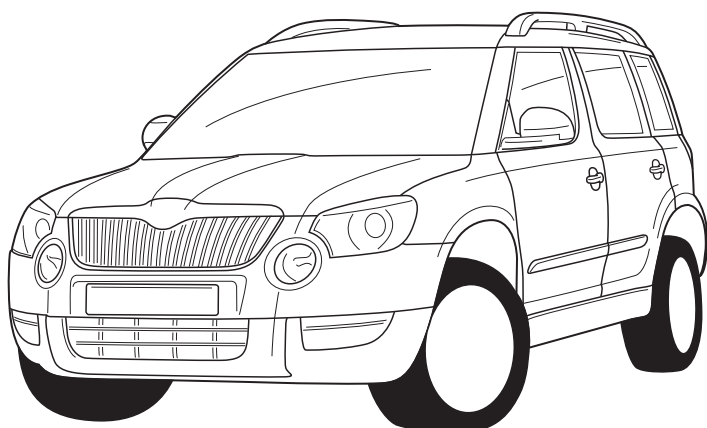


Part list

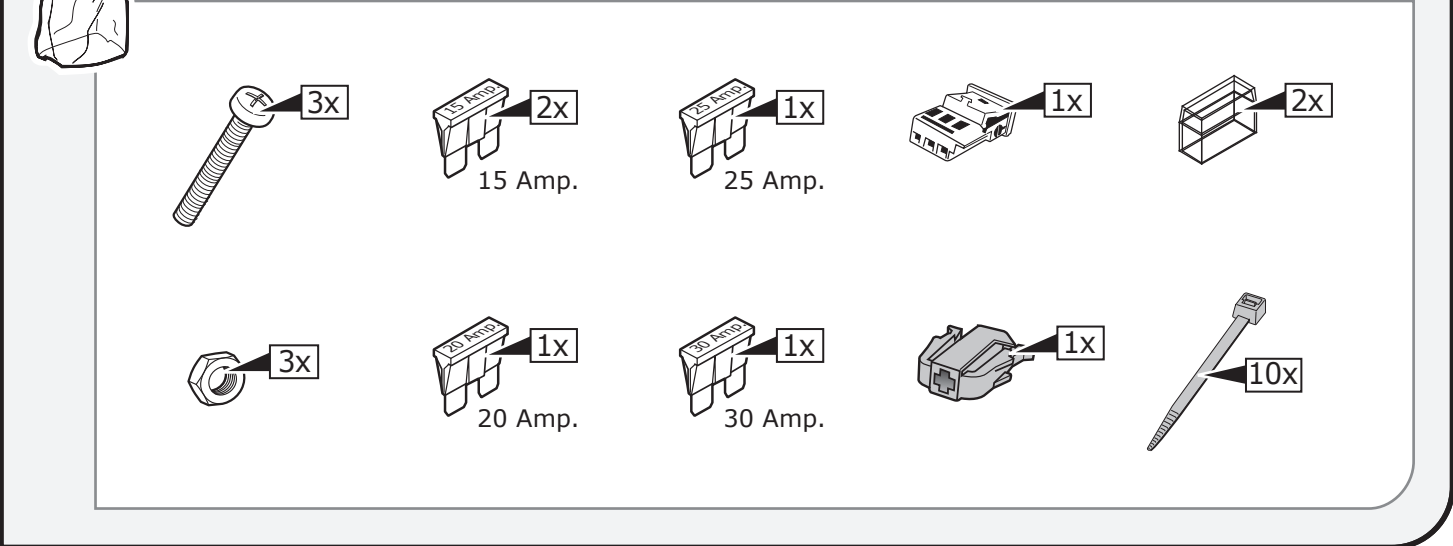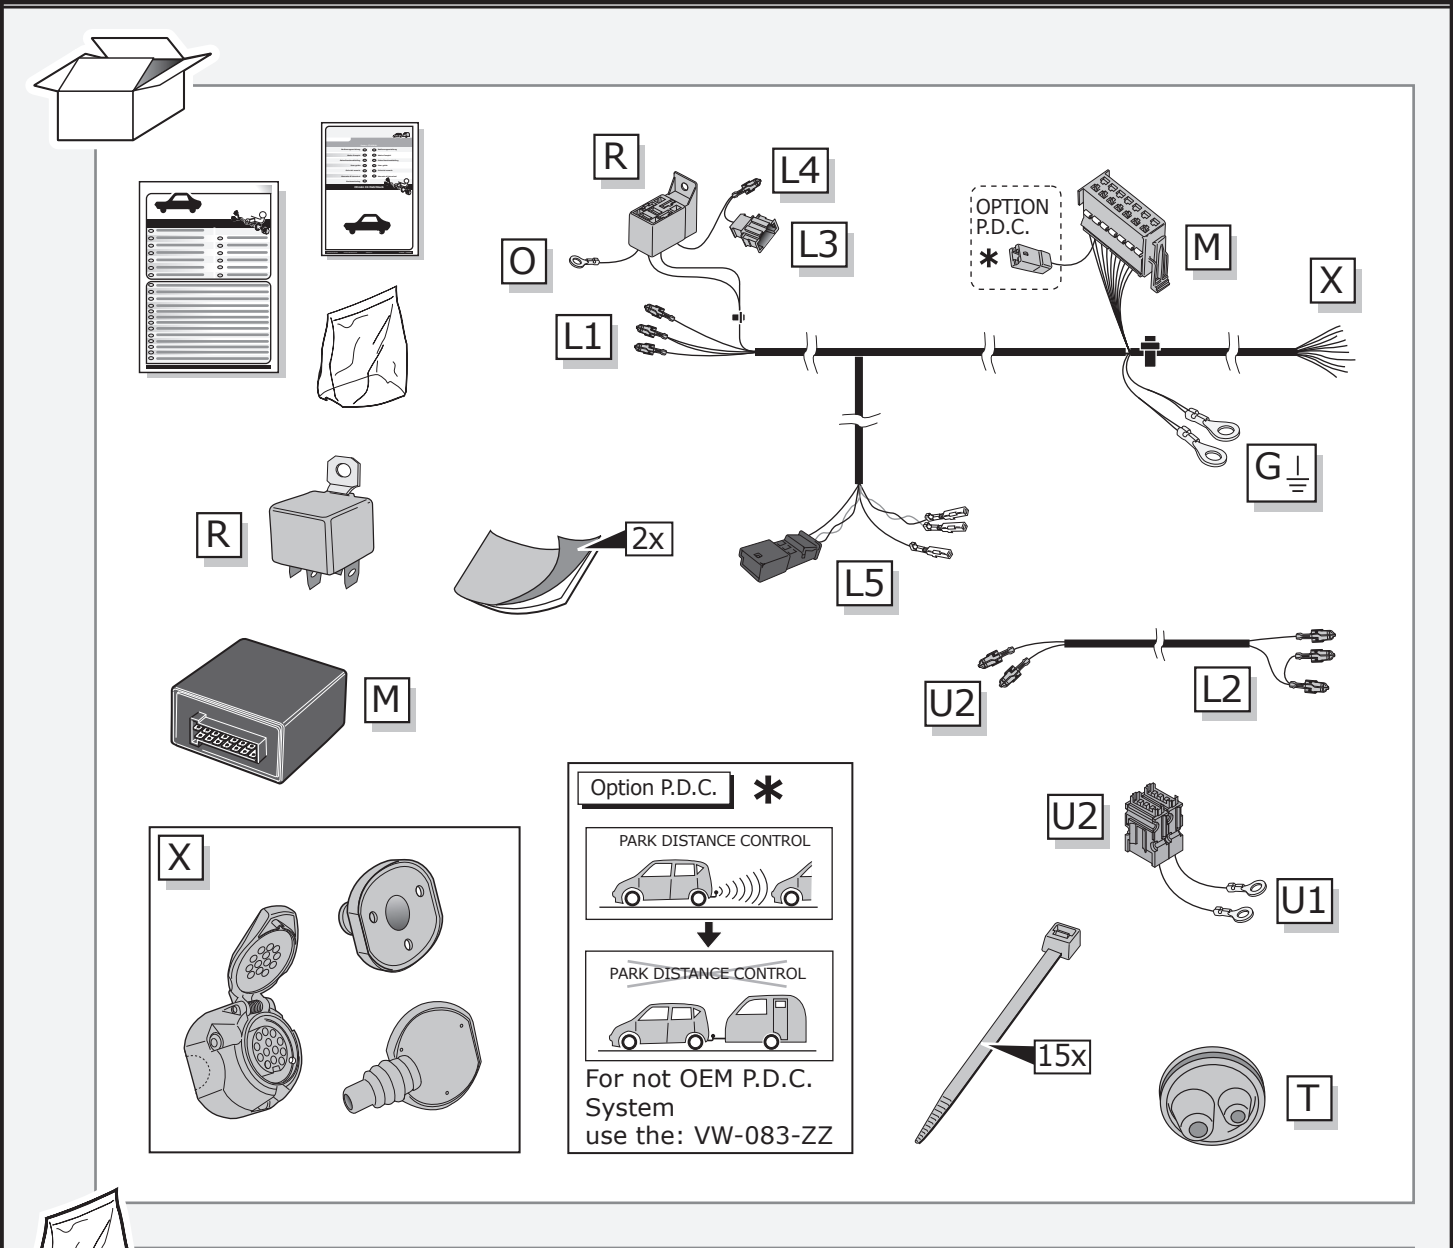


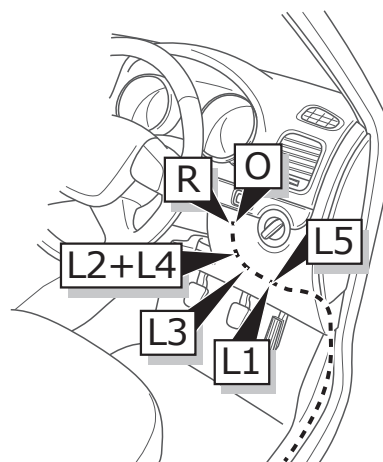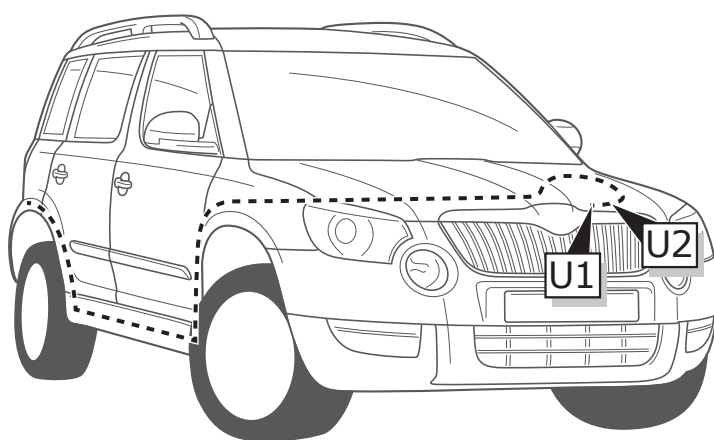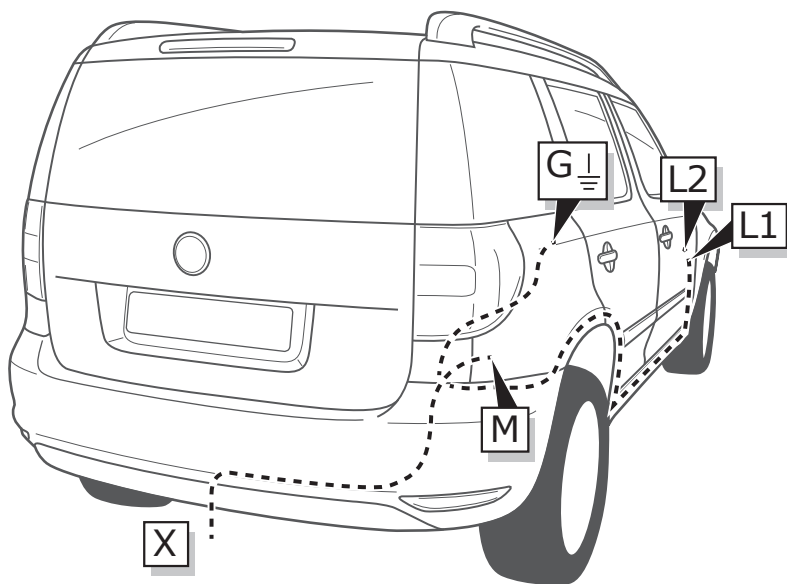


1

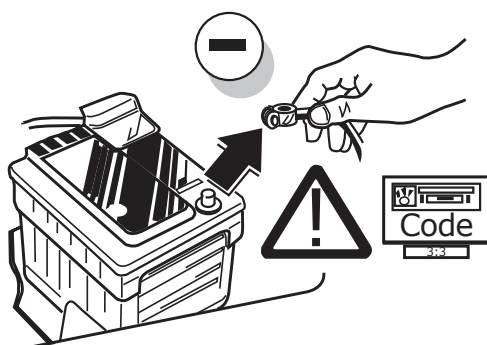


2

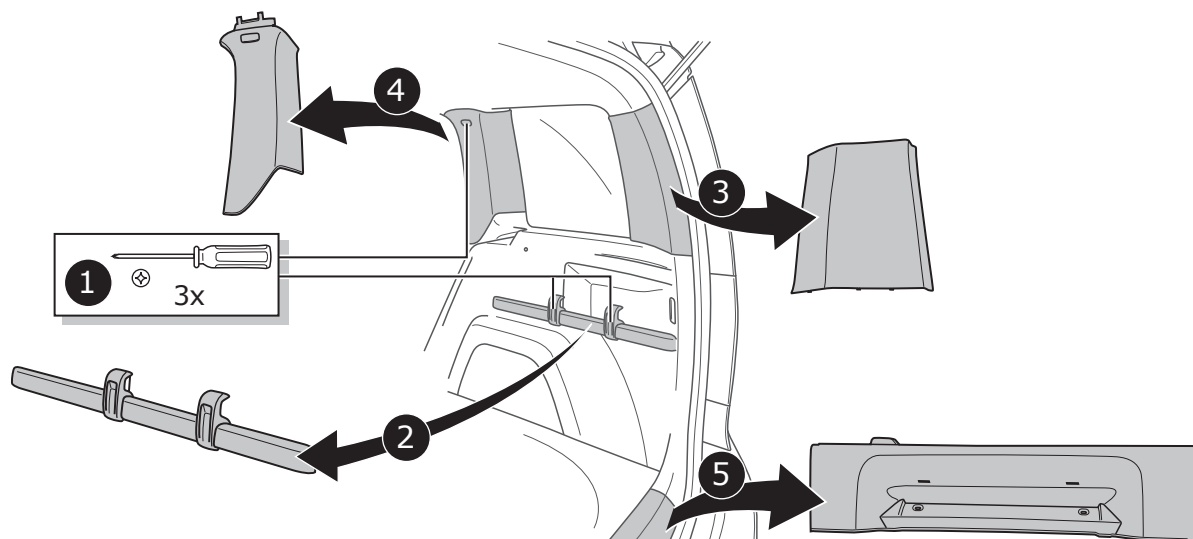


3

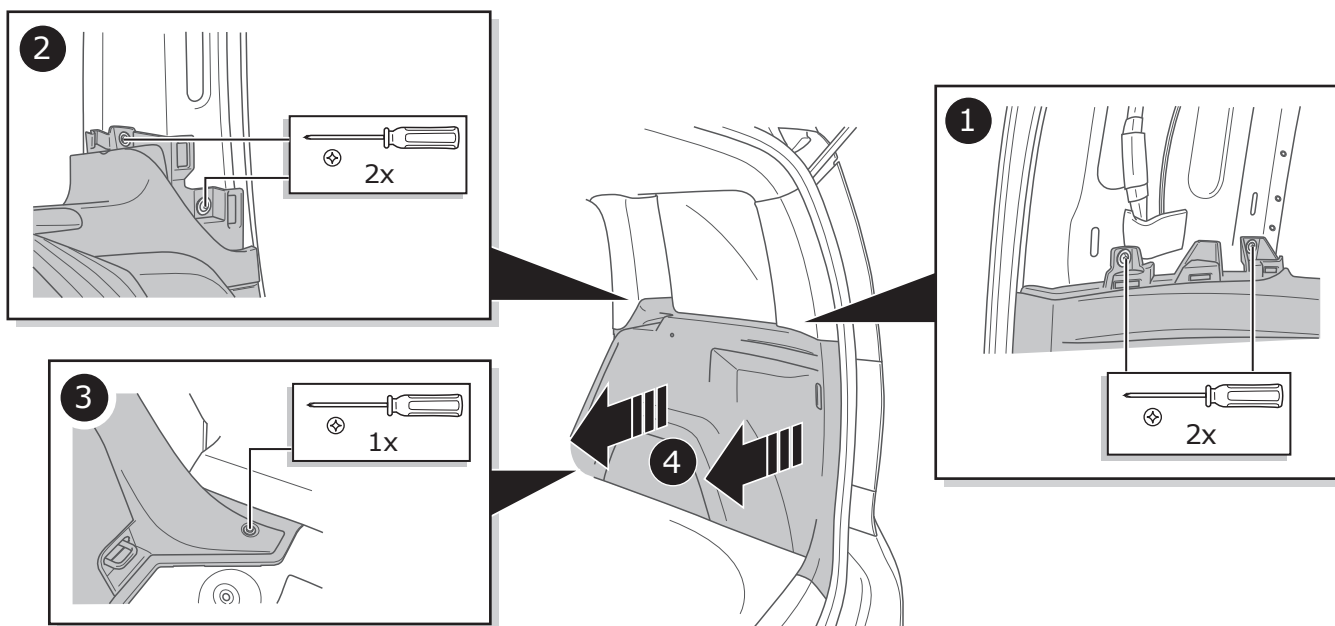


4

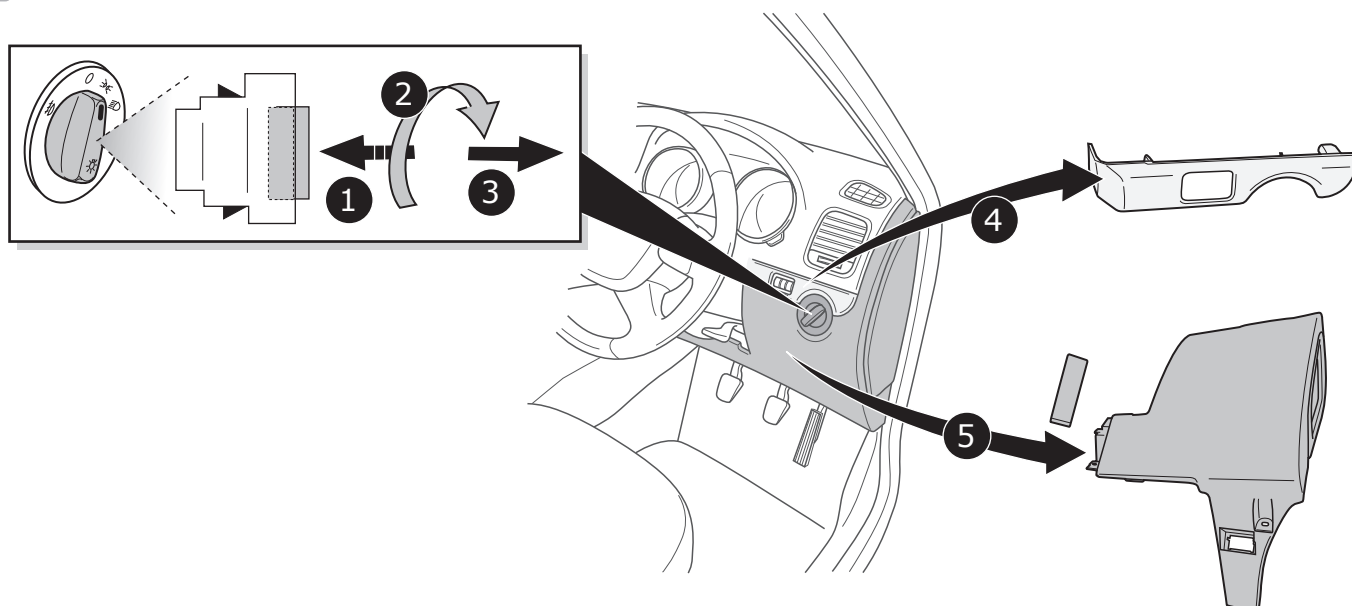

5

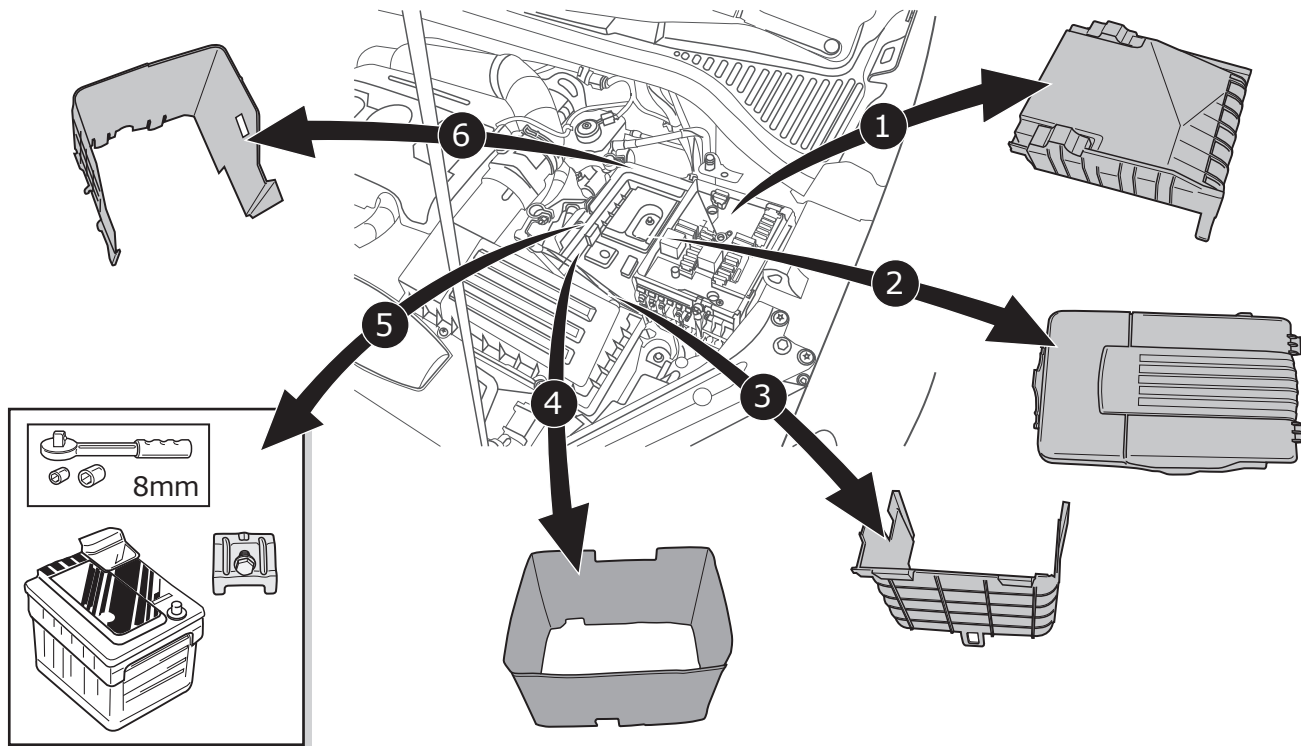


6

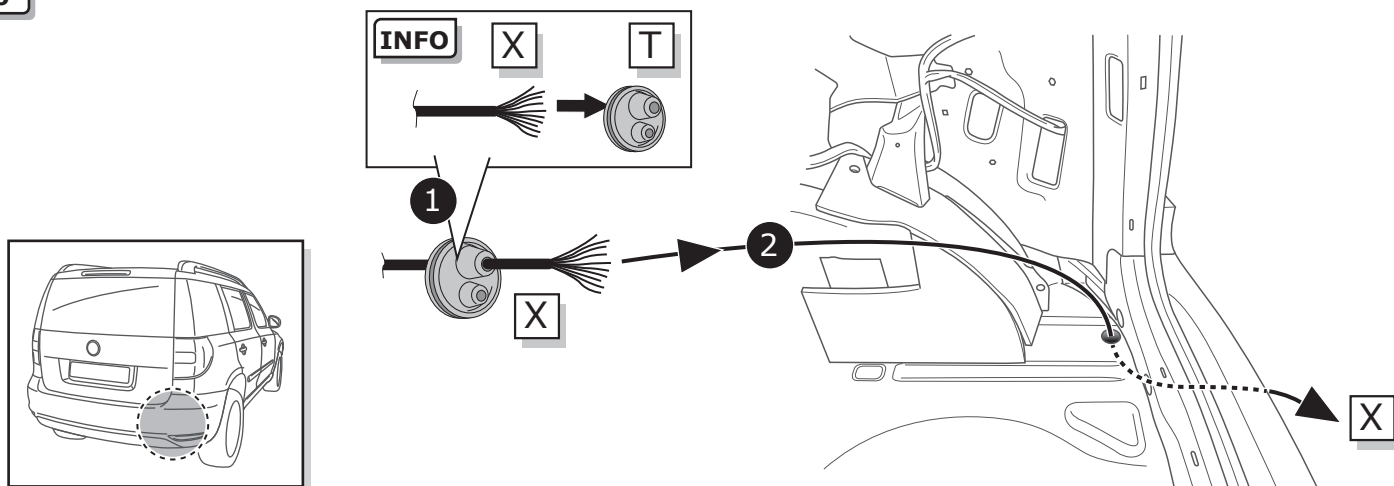


A


Option 1

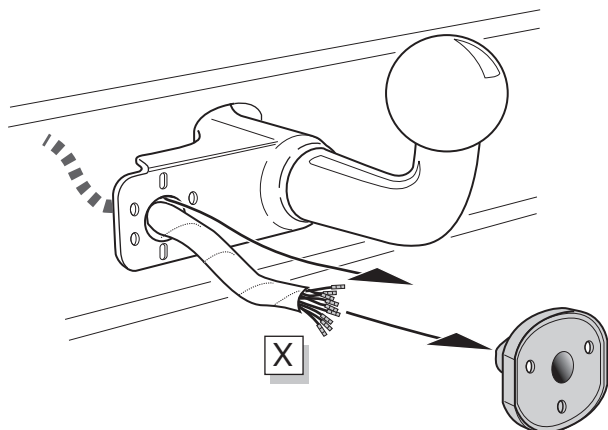

Option 2

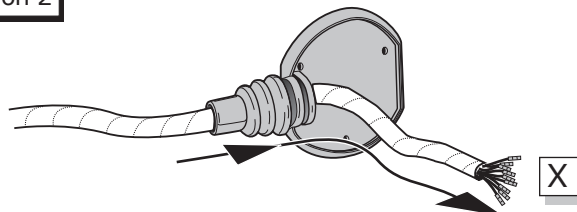



Option 3

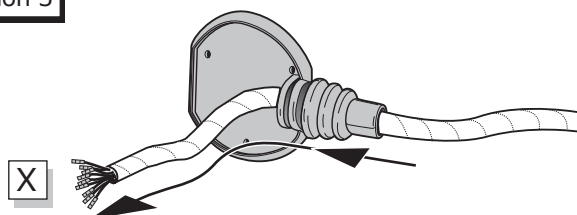

SOCKET CONNECTION

B


Option 1

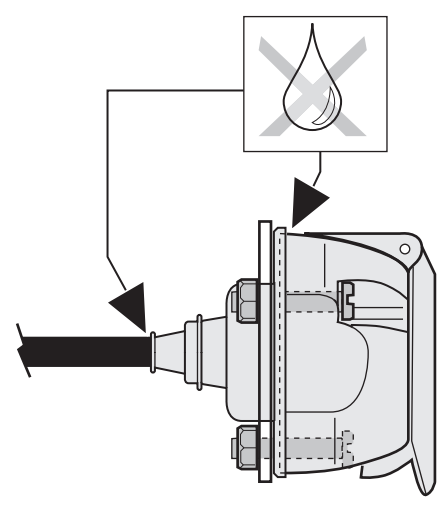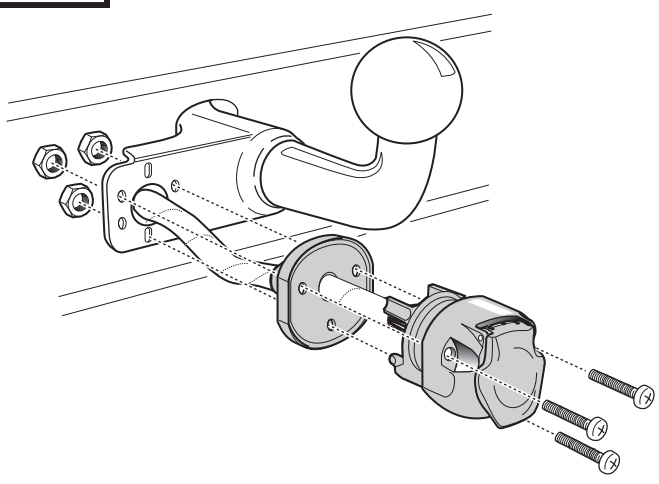


C

Option 2


1

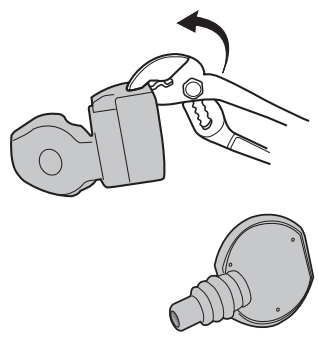


2

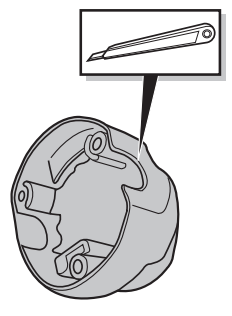

3

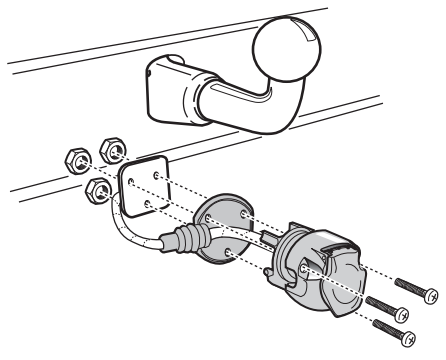


4

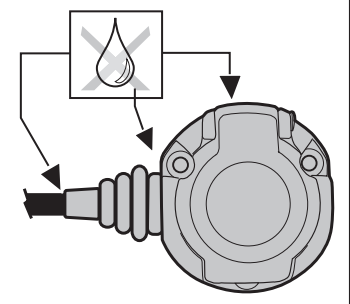


D

Option 3


1

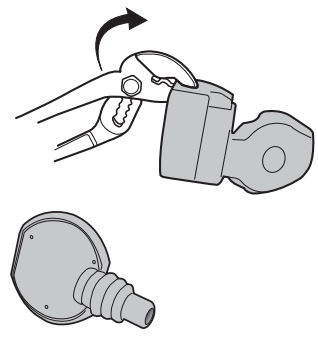


2

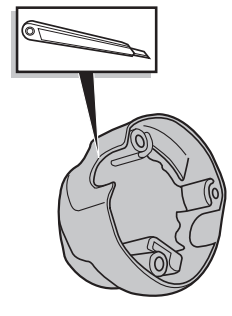



3

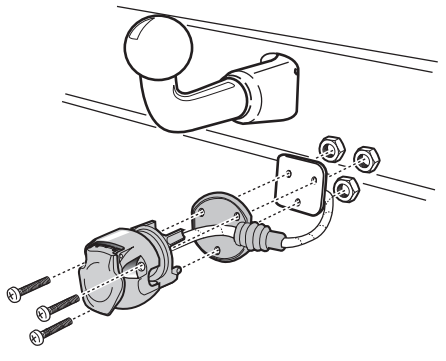



4

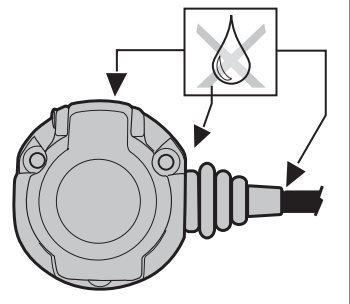


7

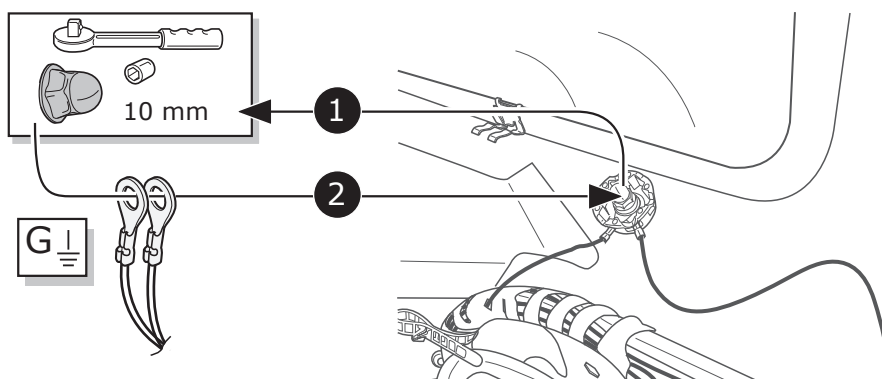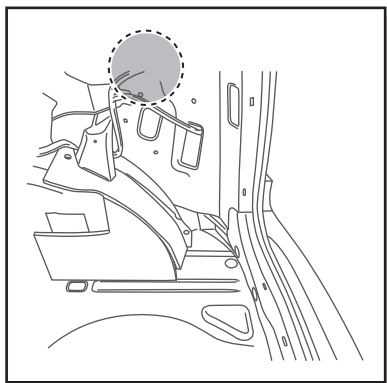


8

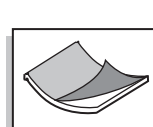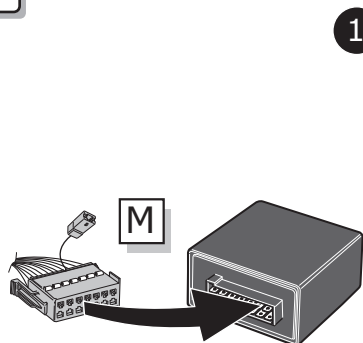

2

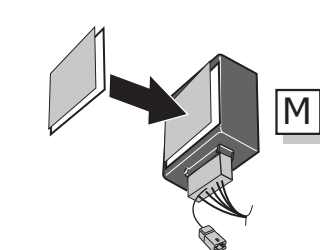


3

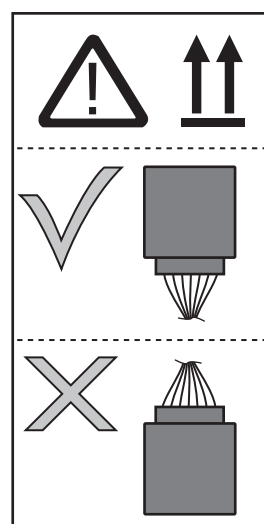


4

9

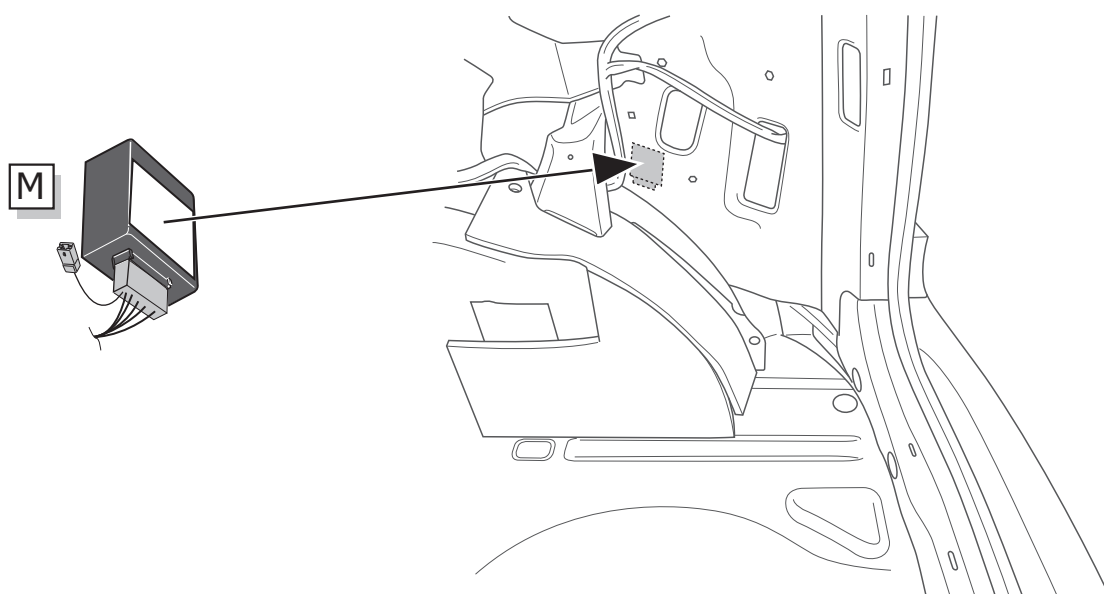


10

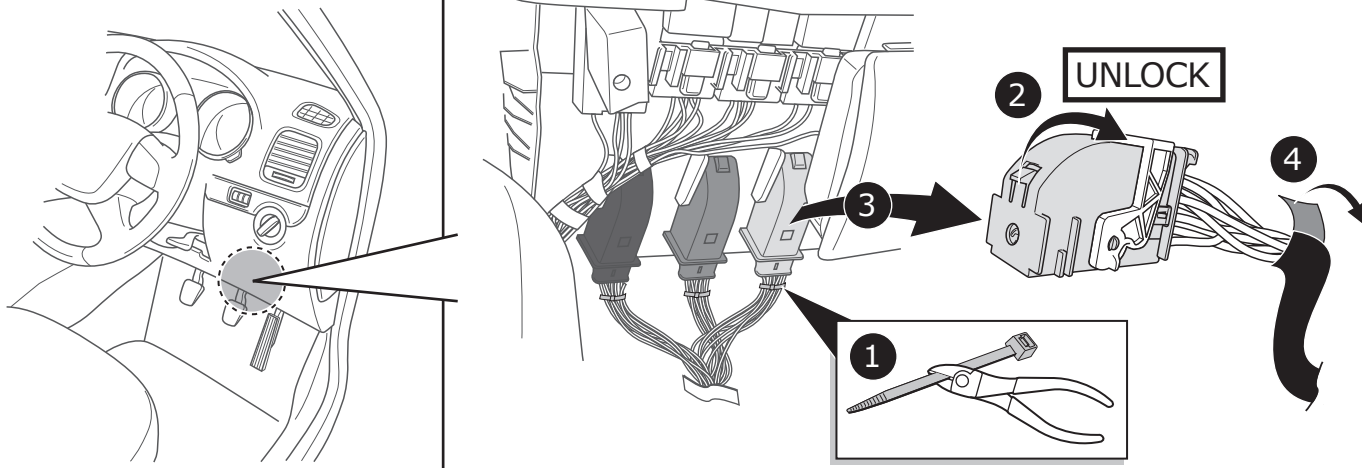


11


1

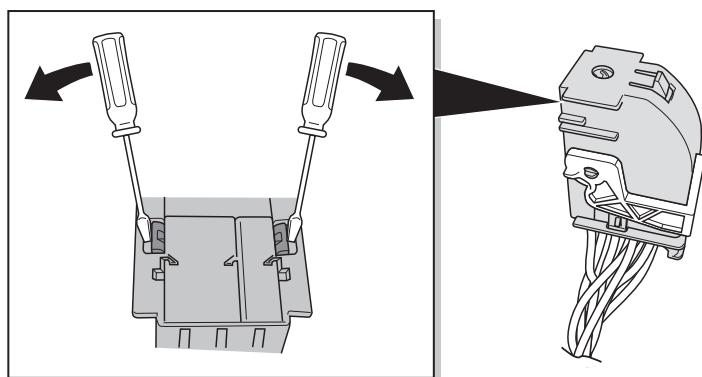


2


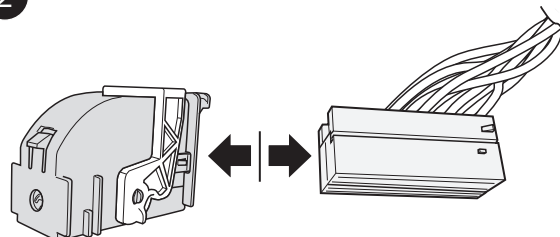


3

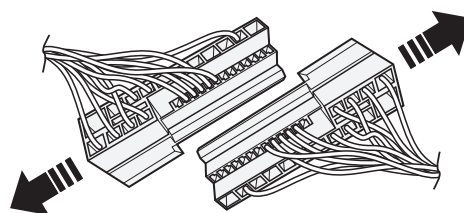


12

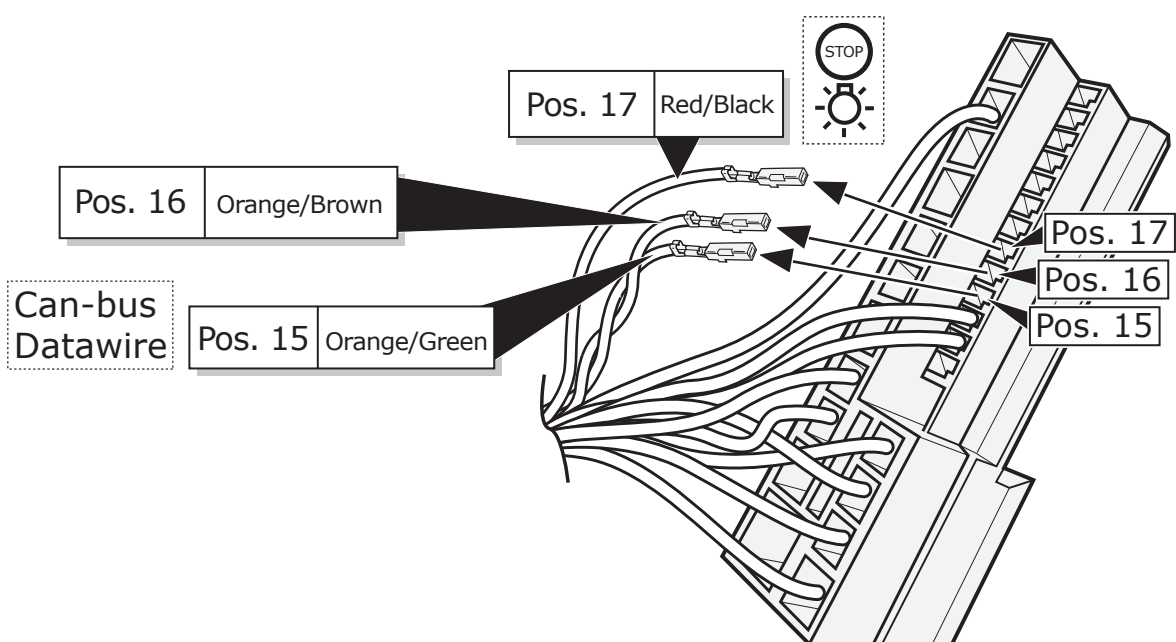

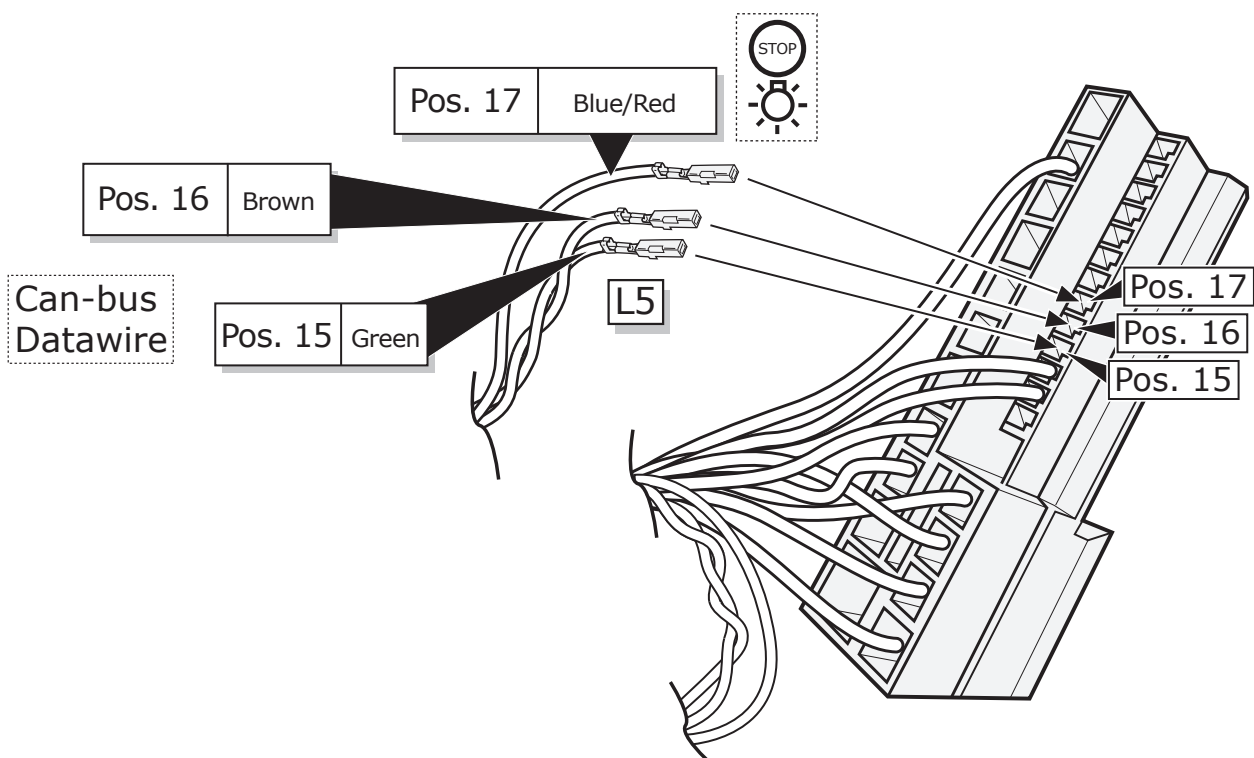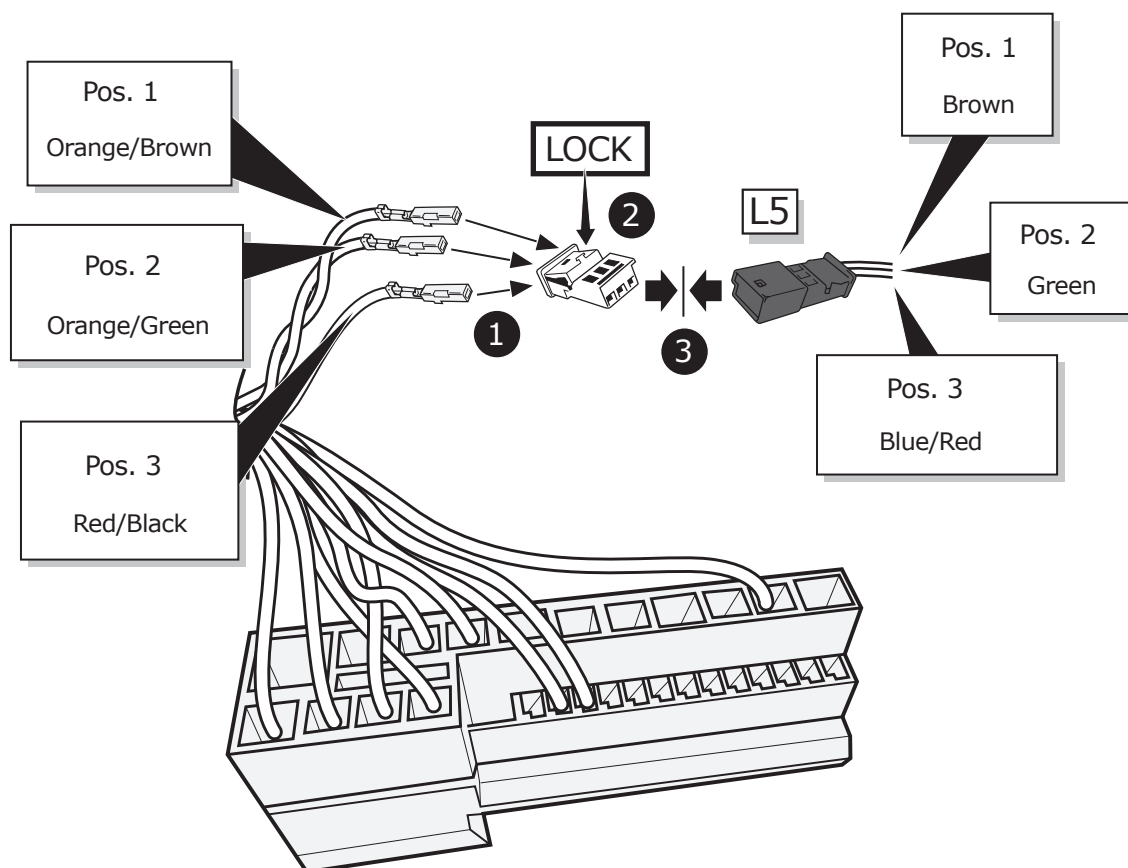


15



1

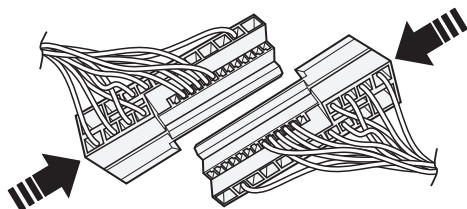




2

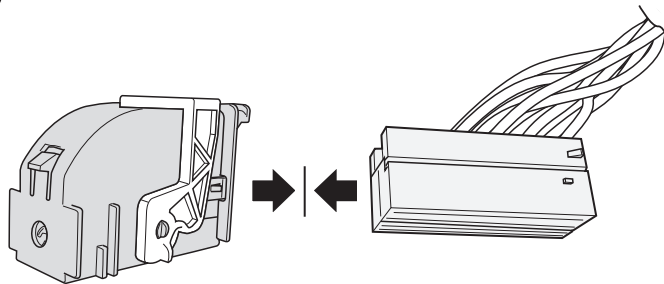


16

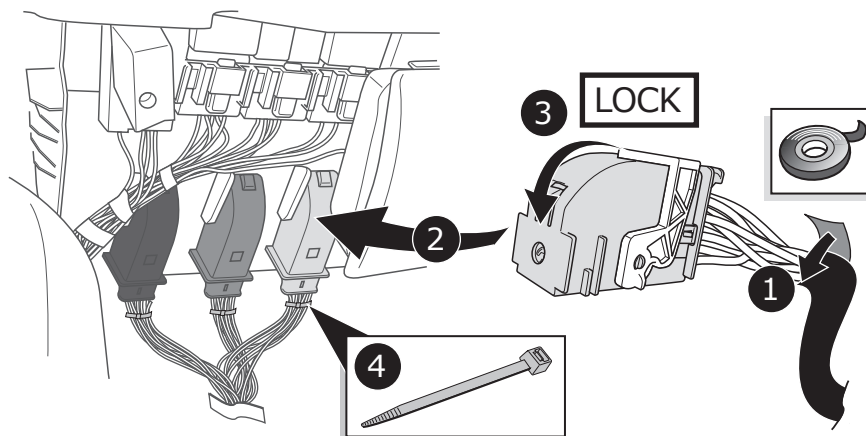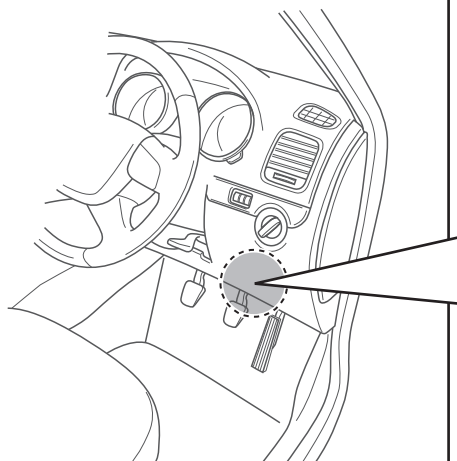


17

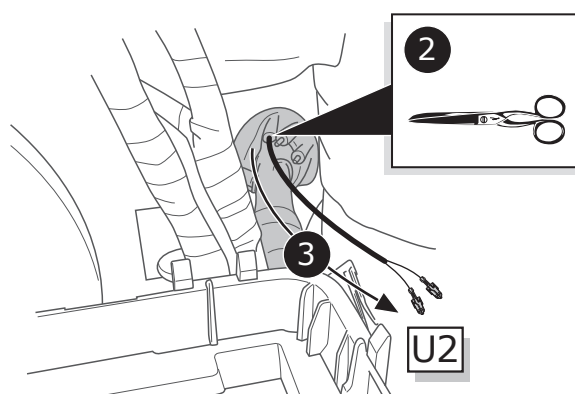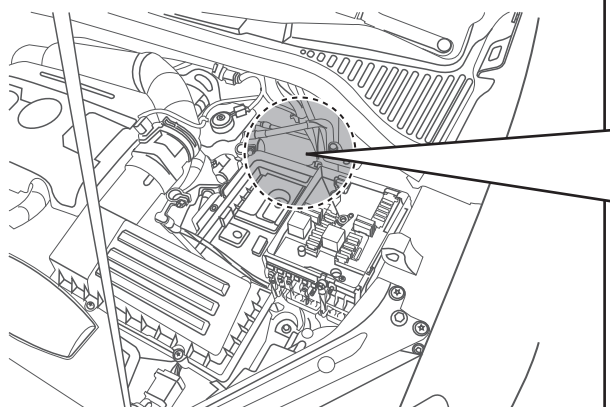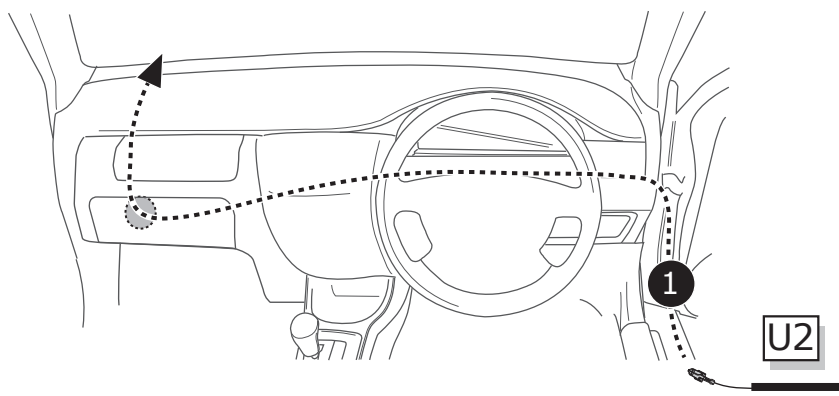


18

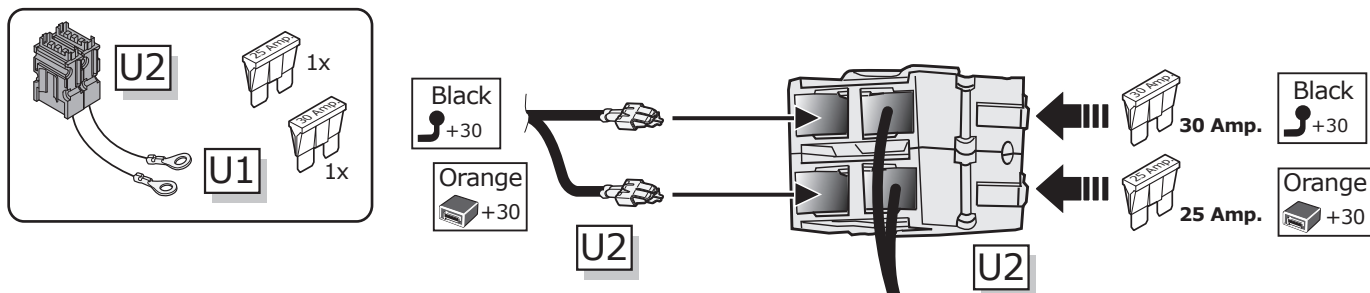


19

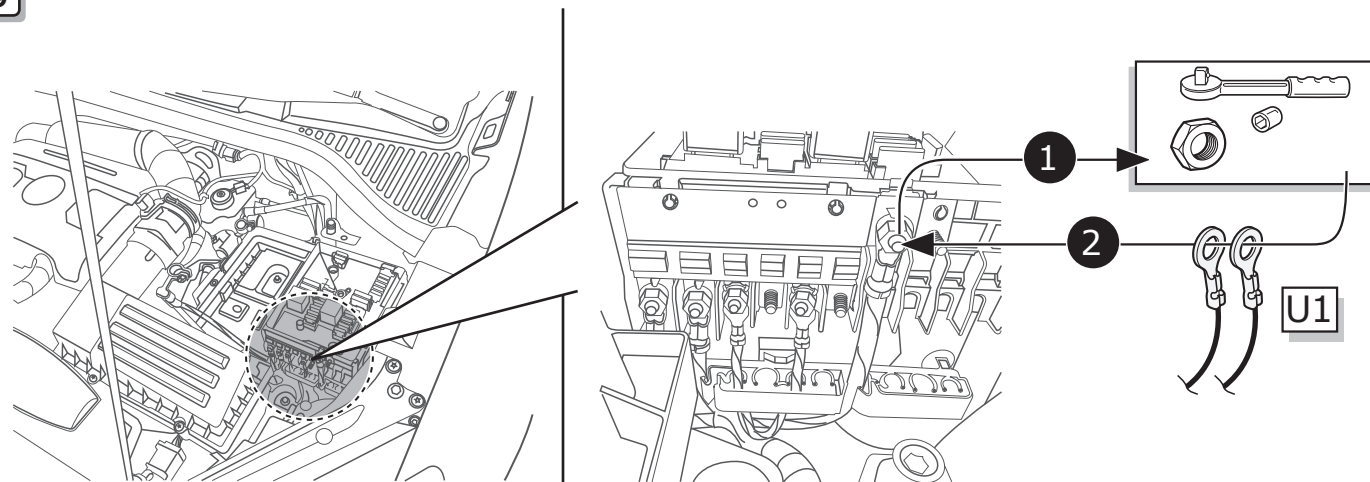


20

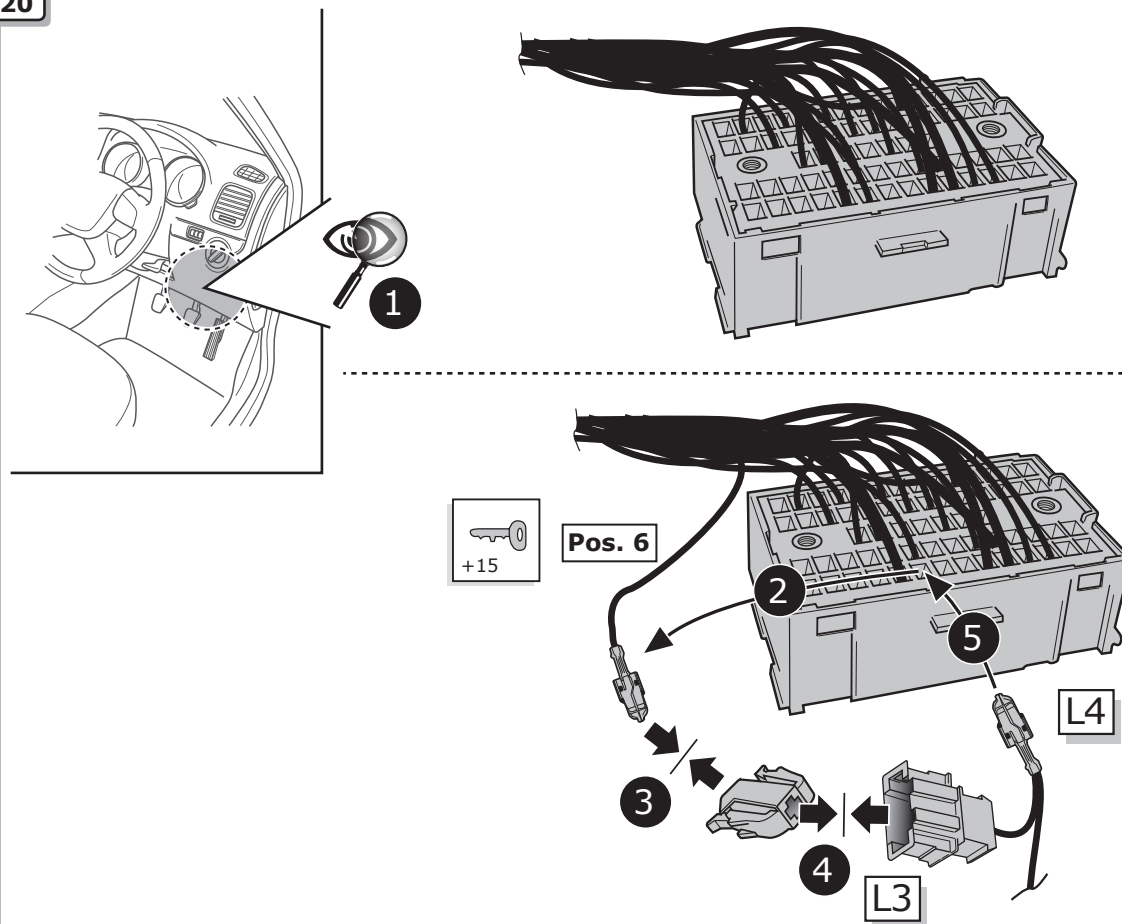


21

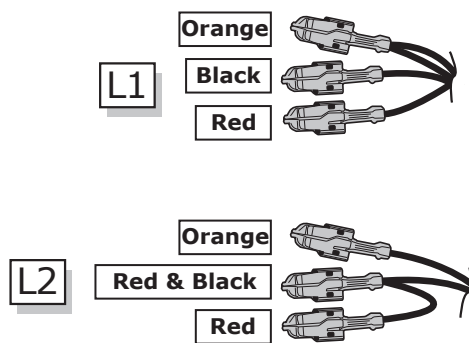






1

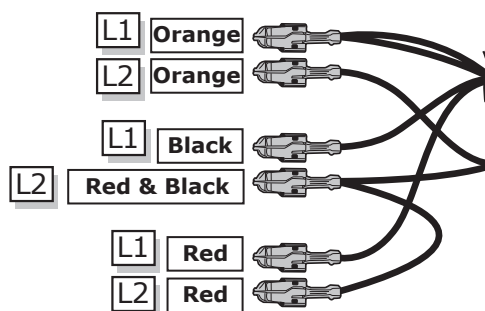

2

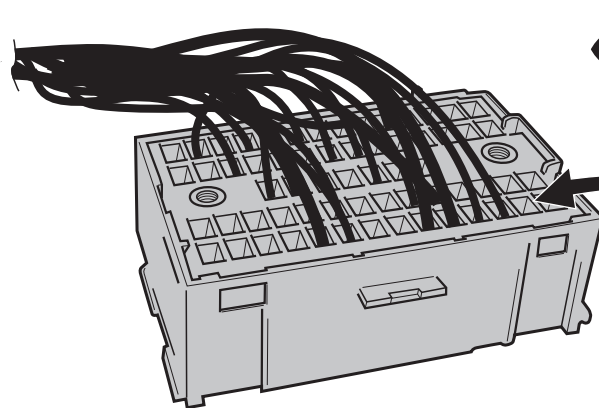


Pos. 2 Pos. 3 OF Pos. 8

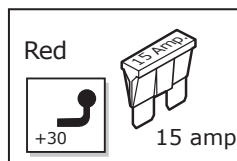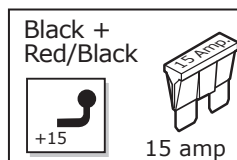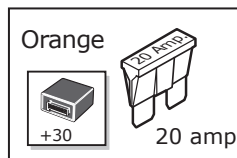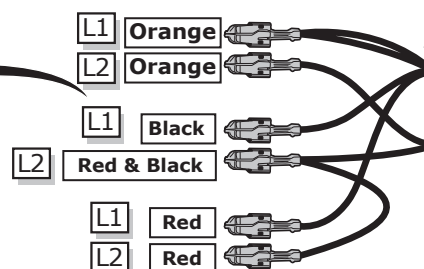


User Guide

3


22

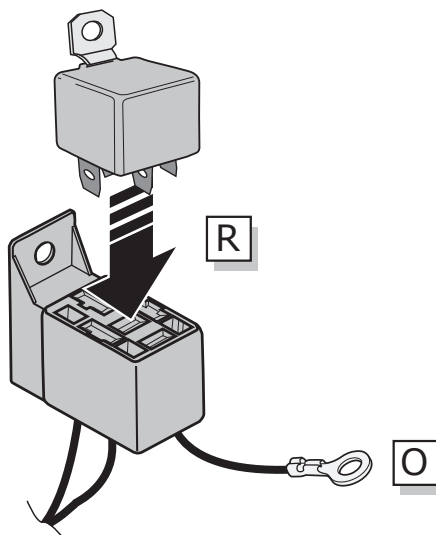

23

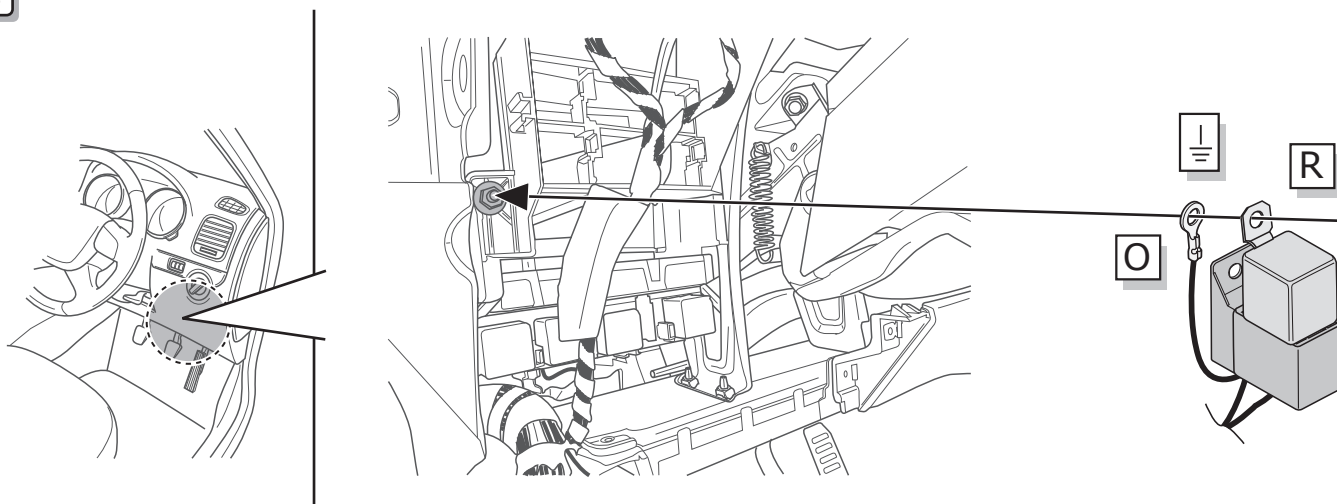

24

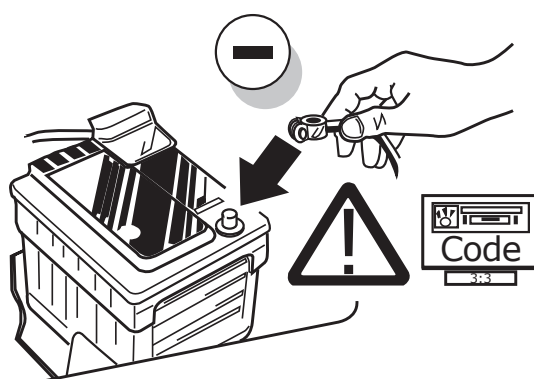

25


A VAG Service Tester must be used to code the vehicle's Gateway with the additional function for the towing hitch at the dealer.

26



TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

REINSTALL TRIM.

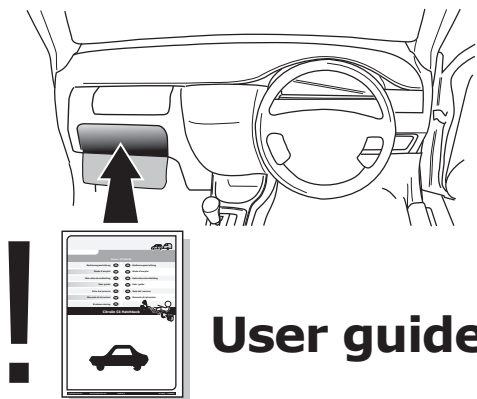

SOCKET CONNECTION

DIN/ISO 11446												—	
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	21W		21W	42W	3x21W	42W	21W	180W/15Amp	180W/15Amp			
Colour	Black/ White	Blue	Brown	Black/ Green	Grey/ Red	Black/ Red	Grey/ Black	Black	Red	Yellow	Brown	Red/ Blue	Brown