

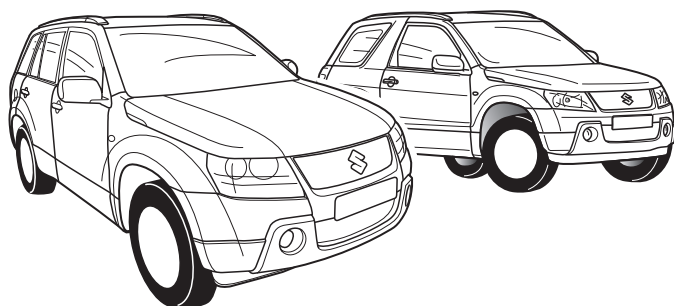


Suzuki Grand Vitara 3 & 5 Dr 2006- Partnr.: SZ-018-BLU


- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.

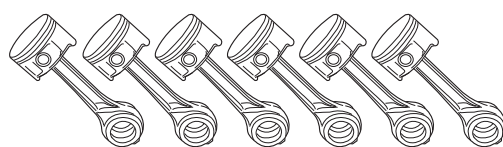








Part list


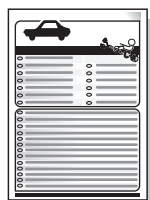


V6 → X


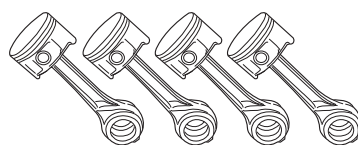


4Cyl → ✓

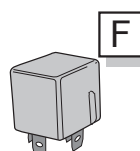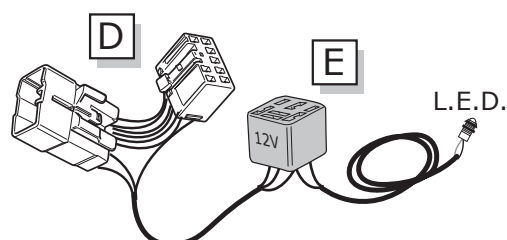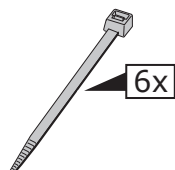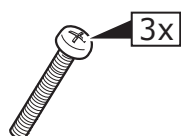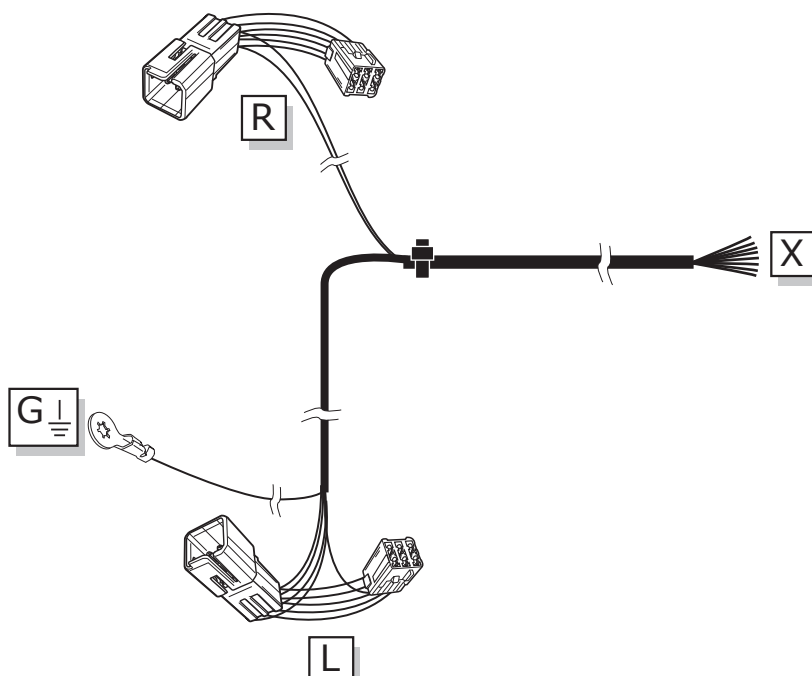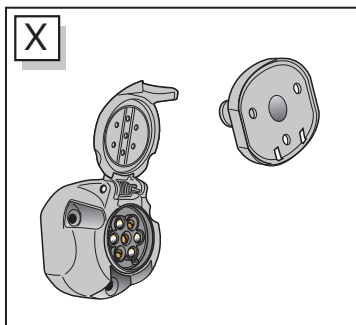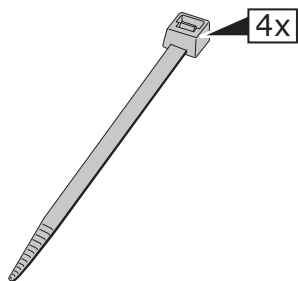


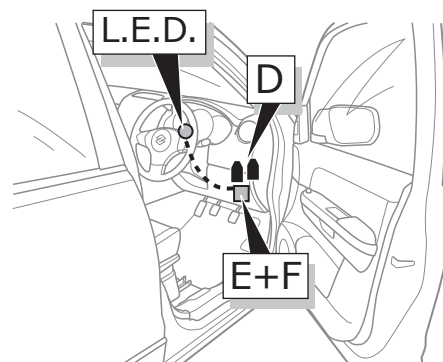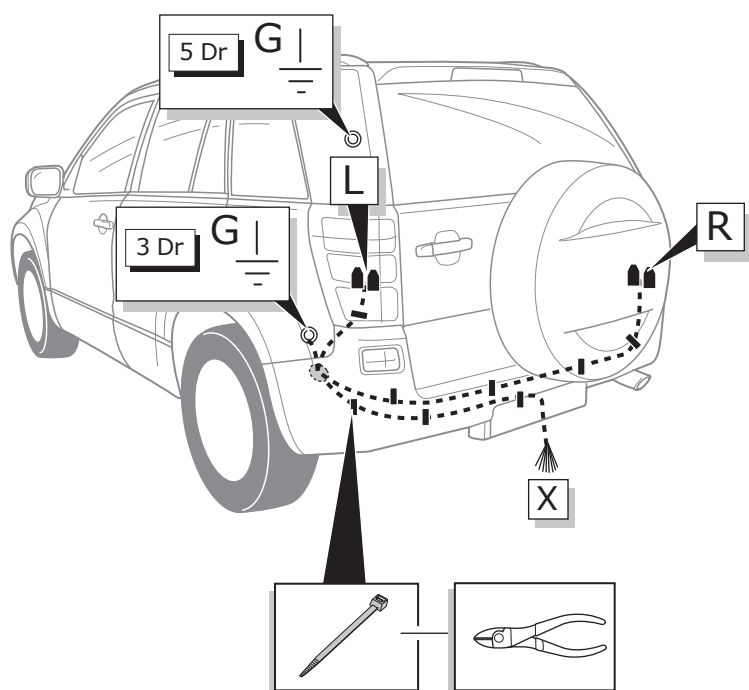


1

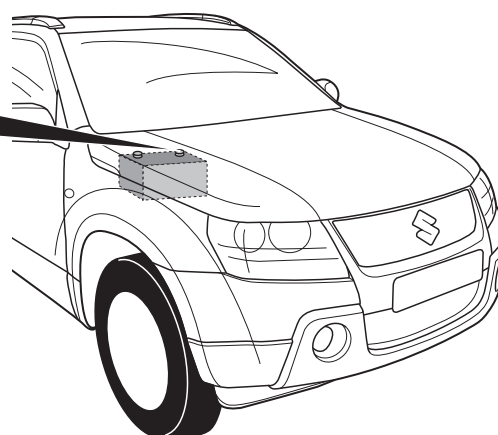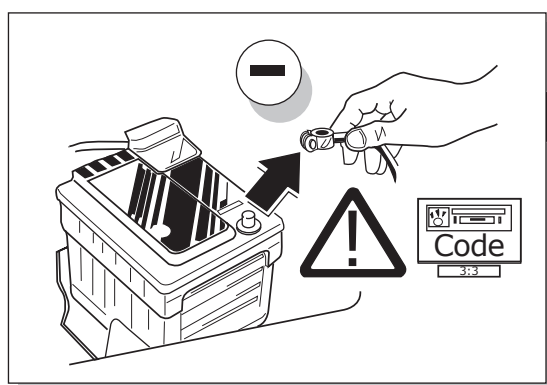


2

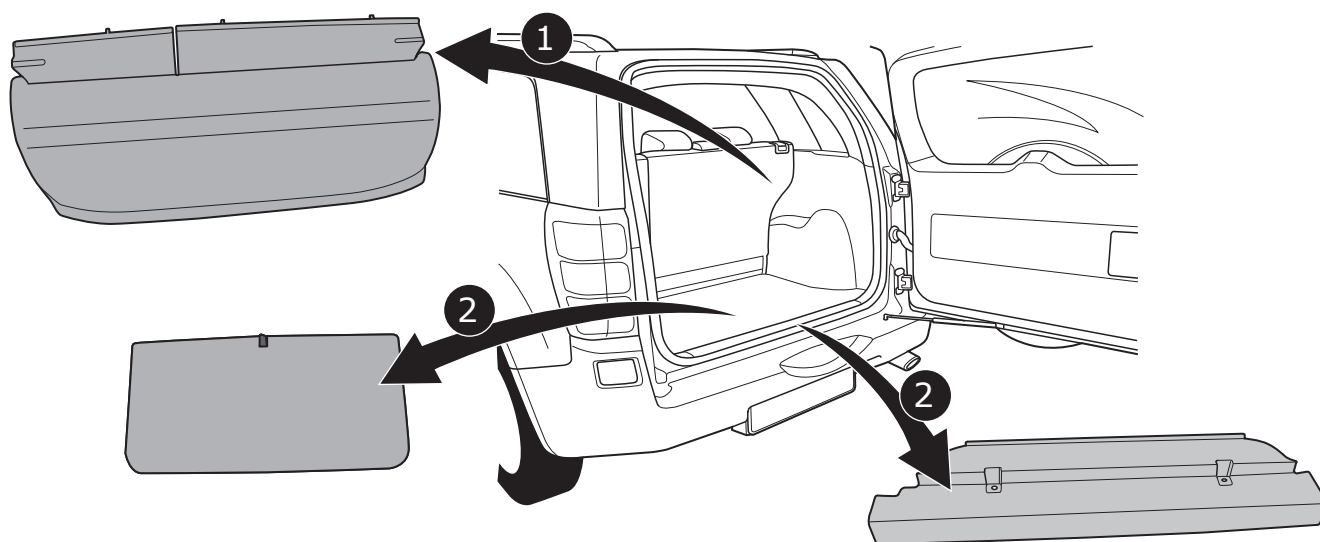

3

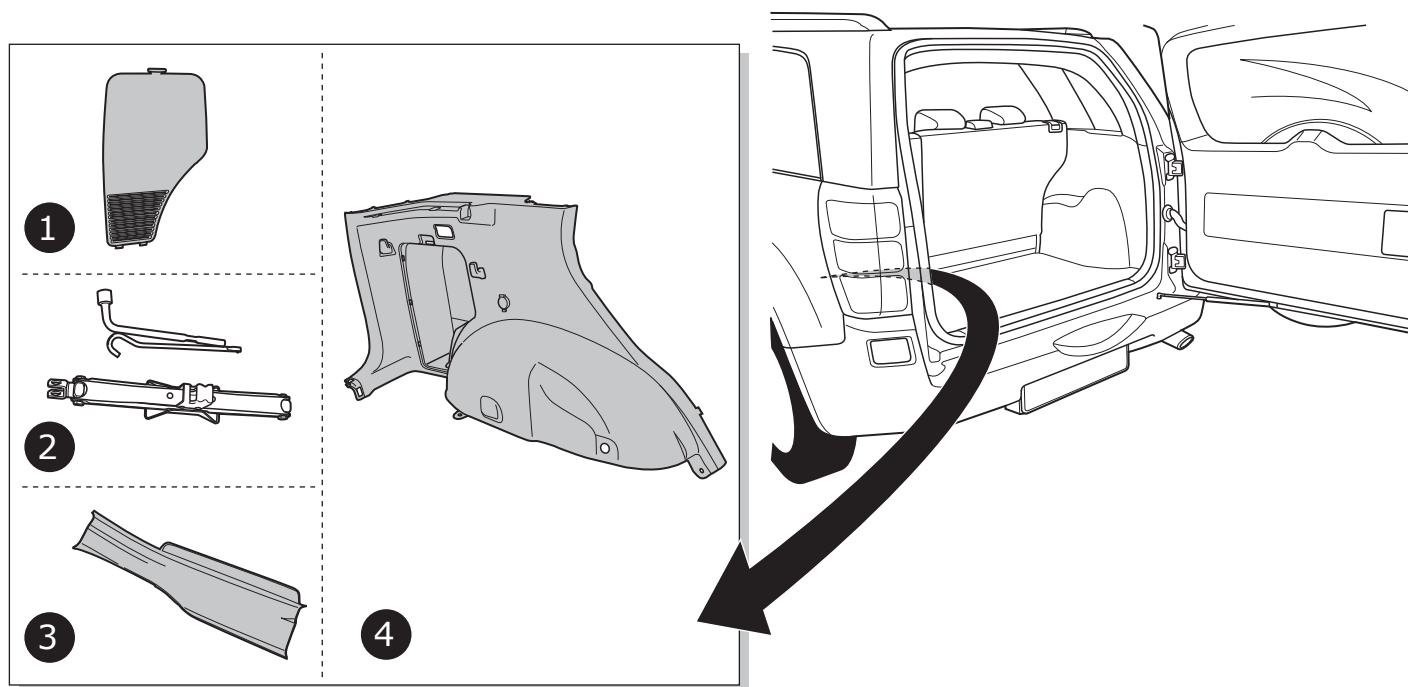


4

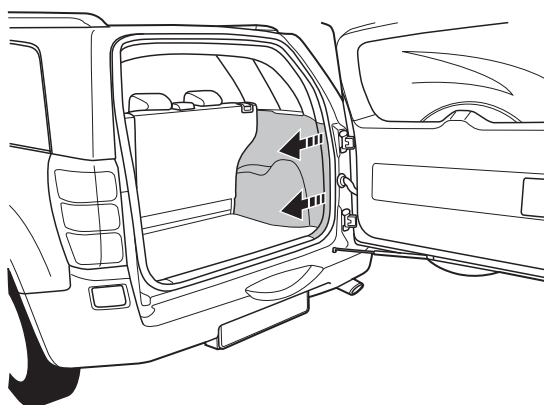

5


3 Dr

5 Dr

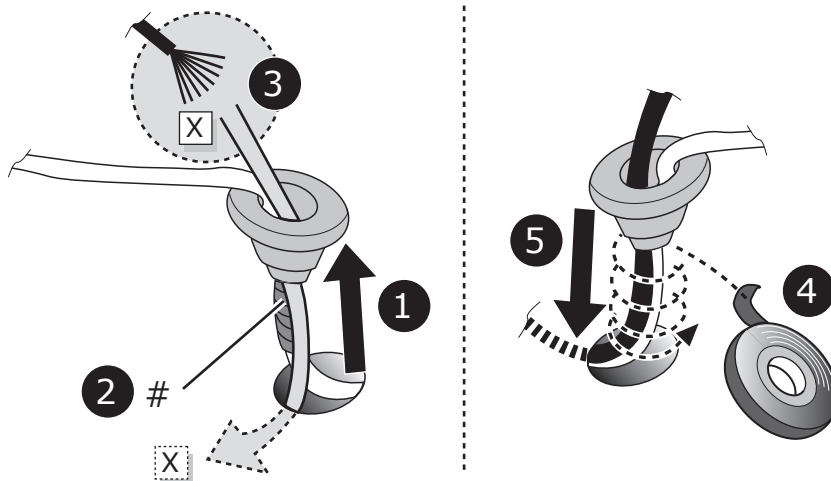

2 Remove tape.

A

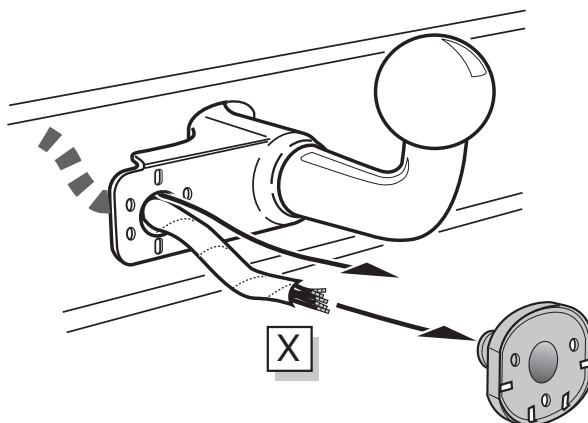



B

SOCKET CONNECTION




Pag. 8

C

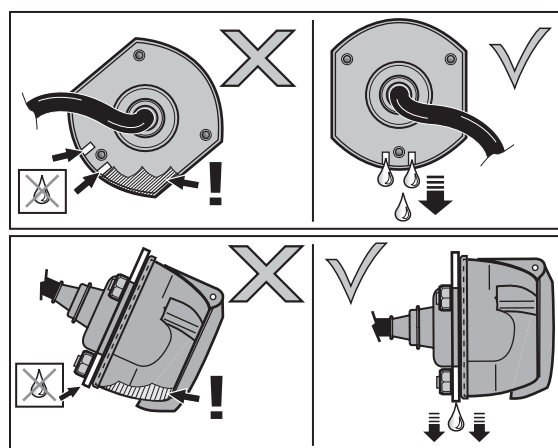
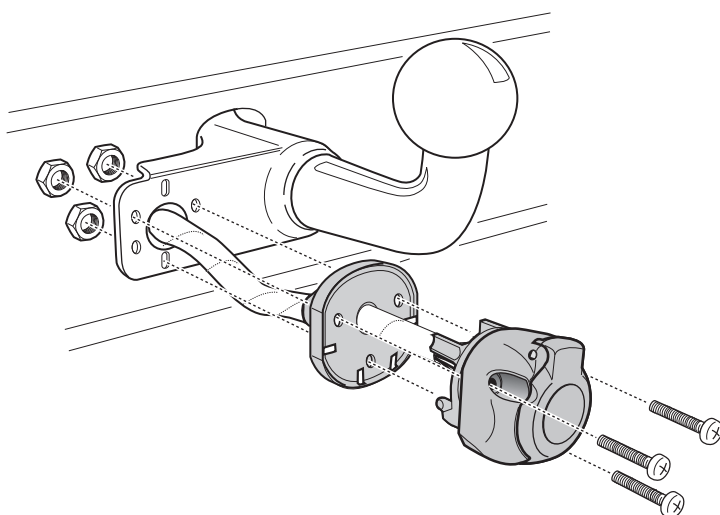


6



3 Dr

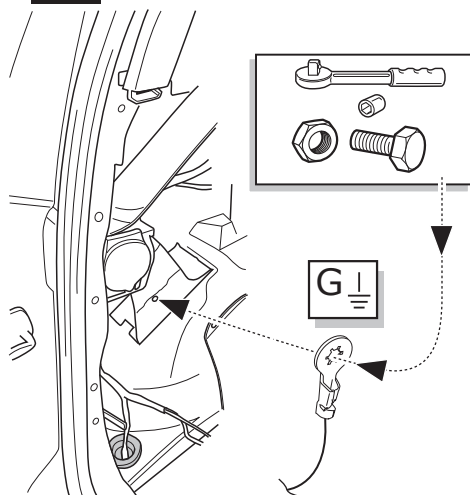



5 Dr

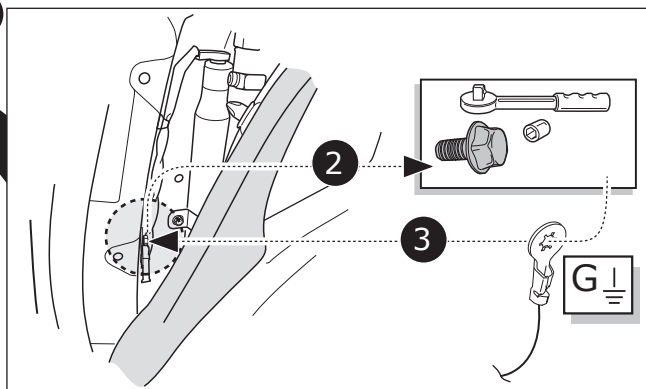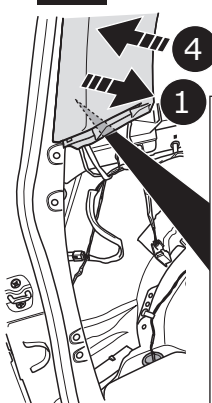


7

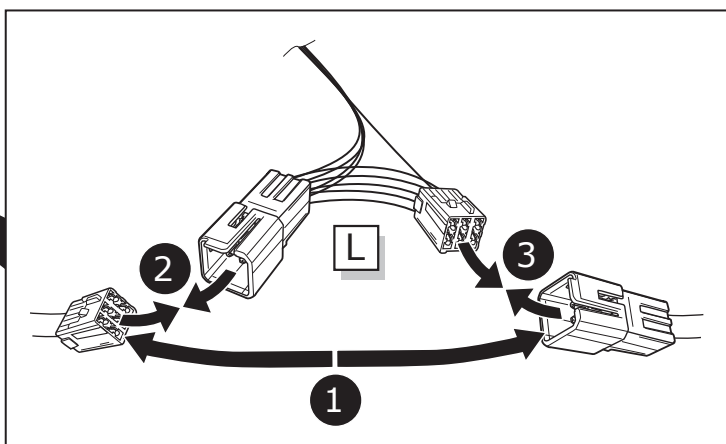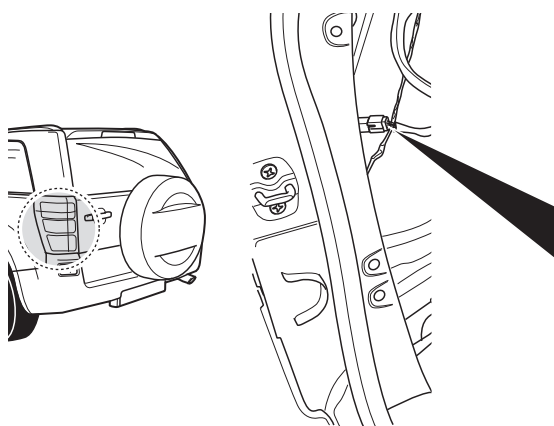


8

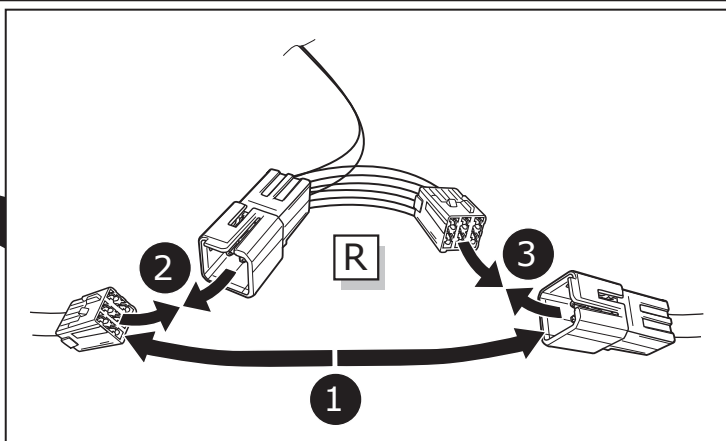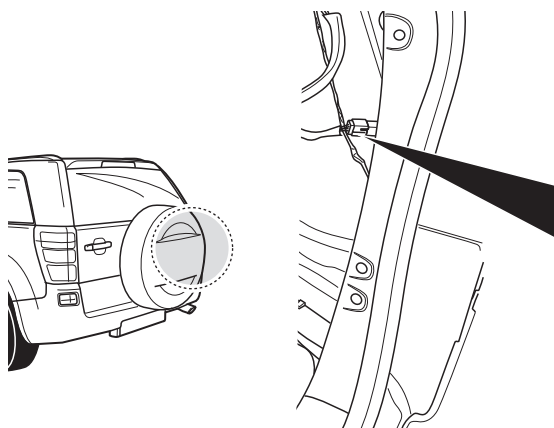


9

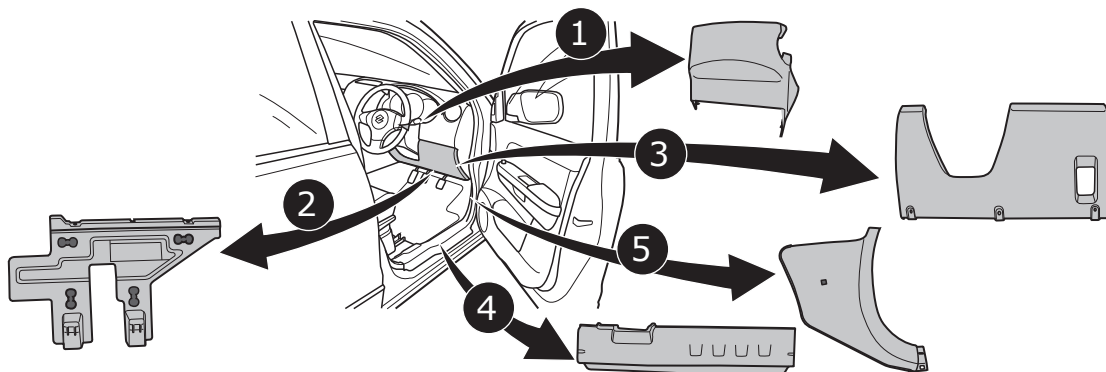


10

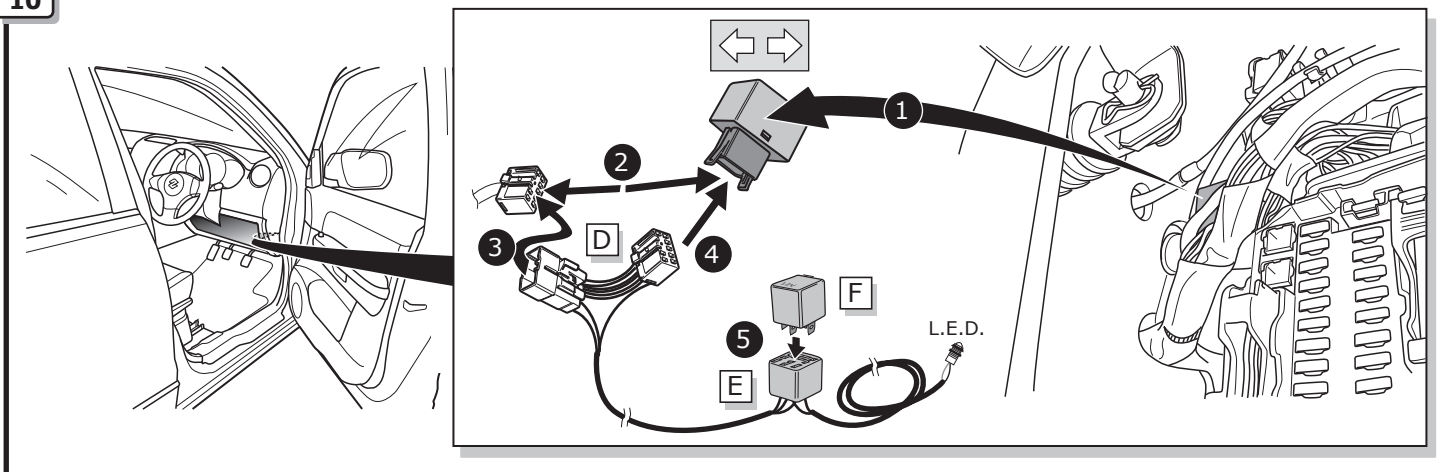


11

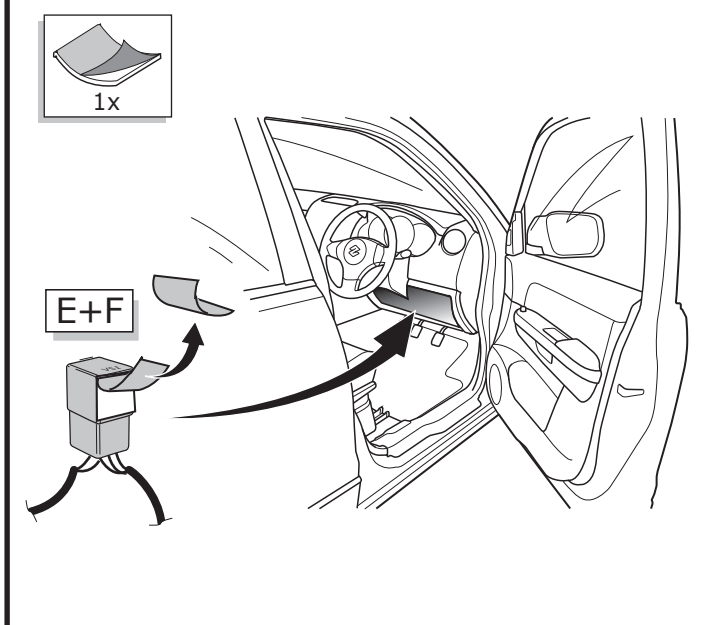

12

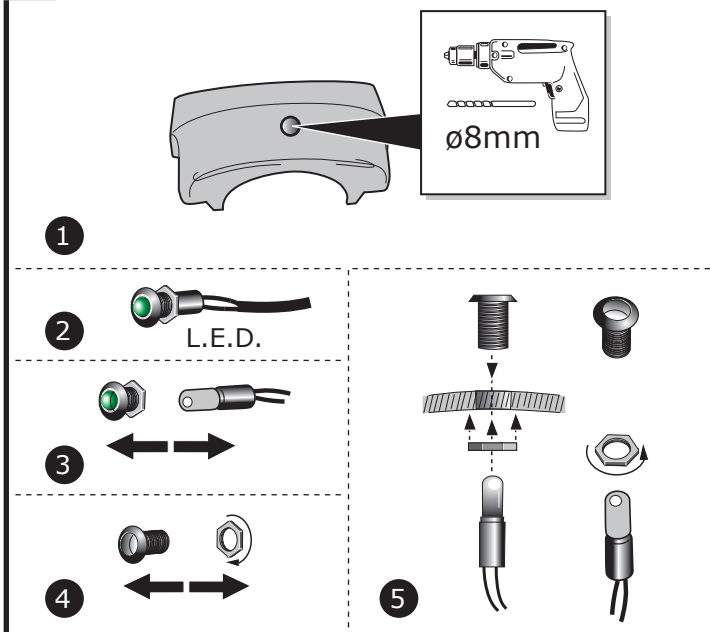

13

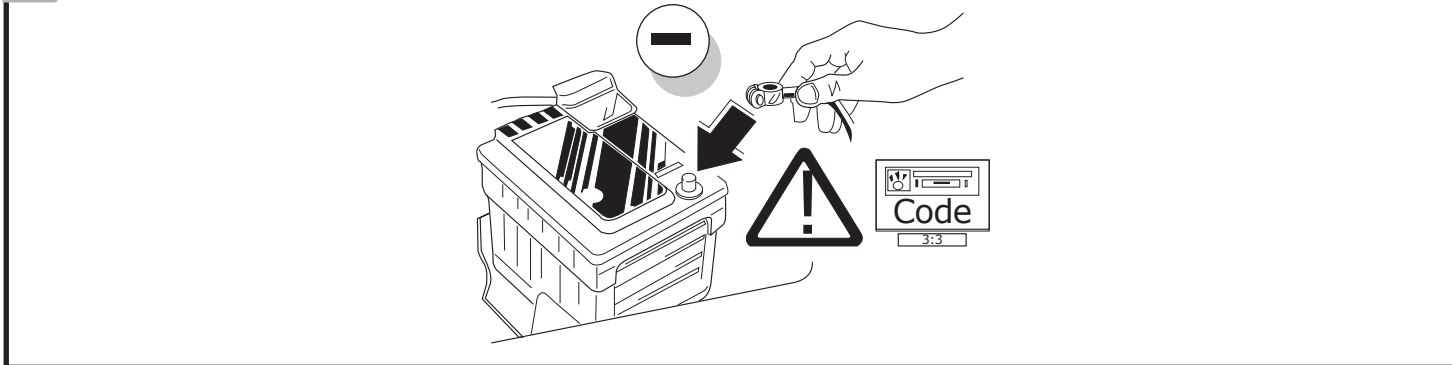


14

1000

REINSTALL TRIM.

15

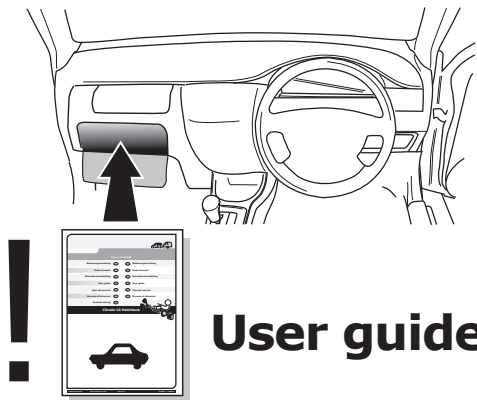

SOCKET CONNECTION

DIN/ISO 1724			$\equiv$ 1-7					
Pmax	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8
Colour	21W	2x21W		21W	52W	3x21W	52W	
	Yellow	Blue	White	Green	Brown	Red	Black	Grey