
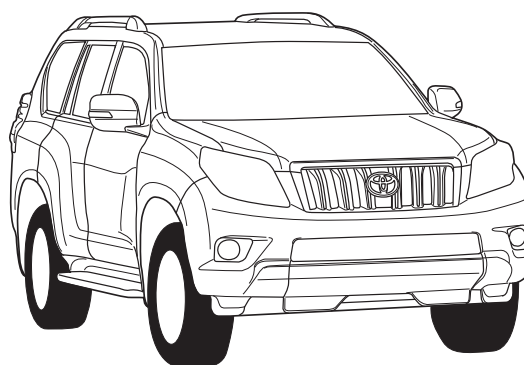




Toyota Land Cruiser 09/2009-

Partnr.: TO-186-BLU

- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.

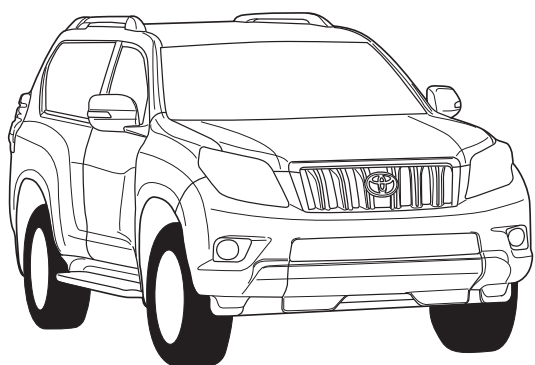

Part list

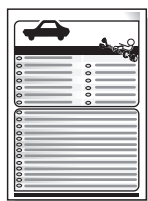

L2



U1

L1




X



3x



4x






B




M

B

X

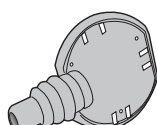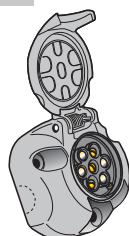

M

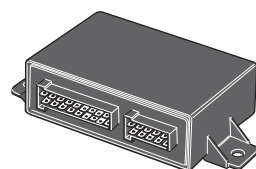

UN-243-YZ

Optional reverse lamp
pre-wire extension included



Pag. 12



3x




3x




1x



1x

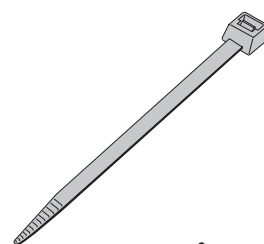


6x




1x


3-doors

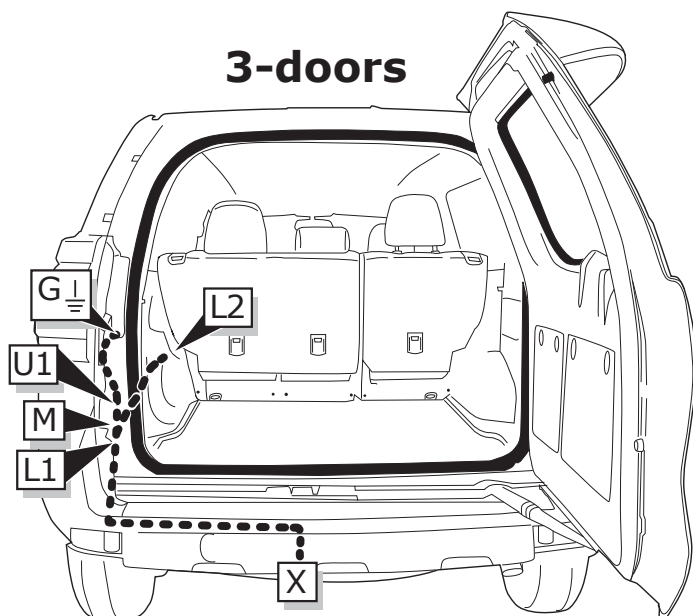

5-doors

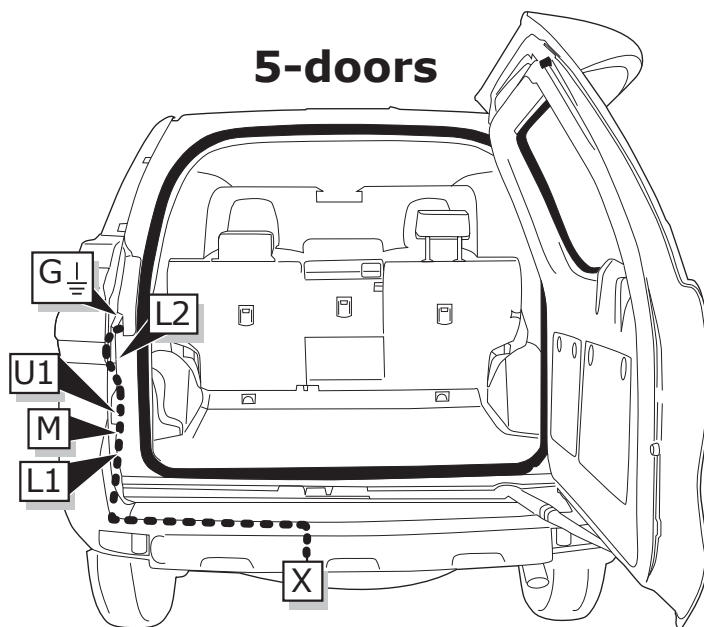


1

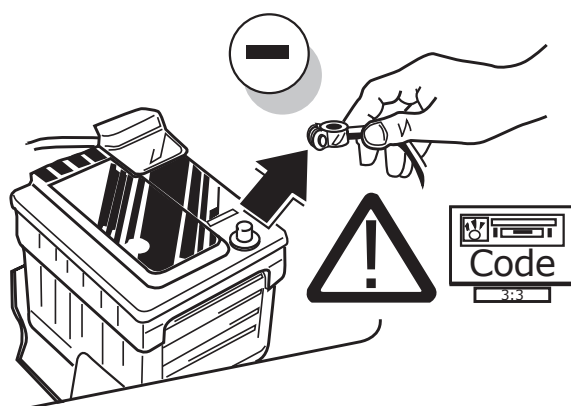


3-Doors


2

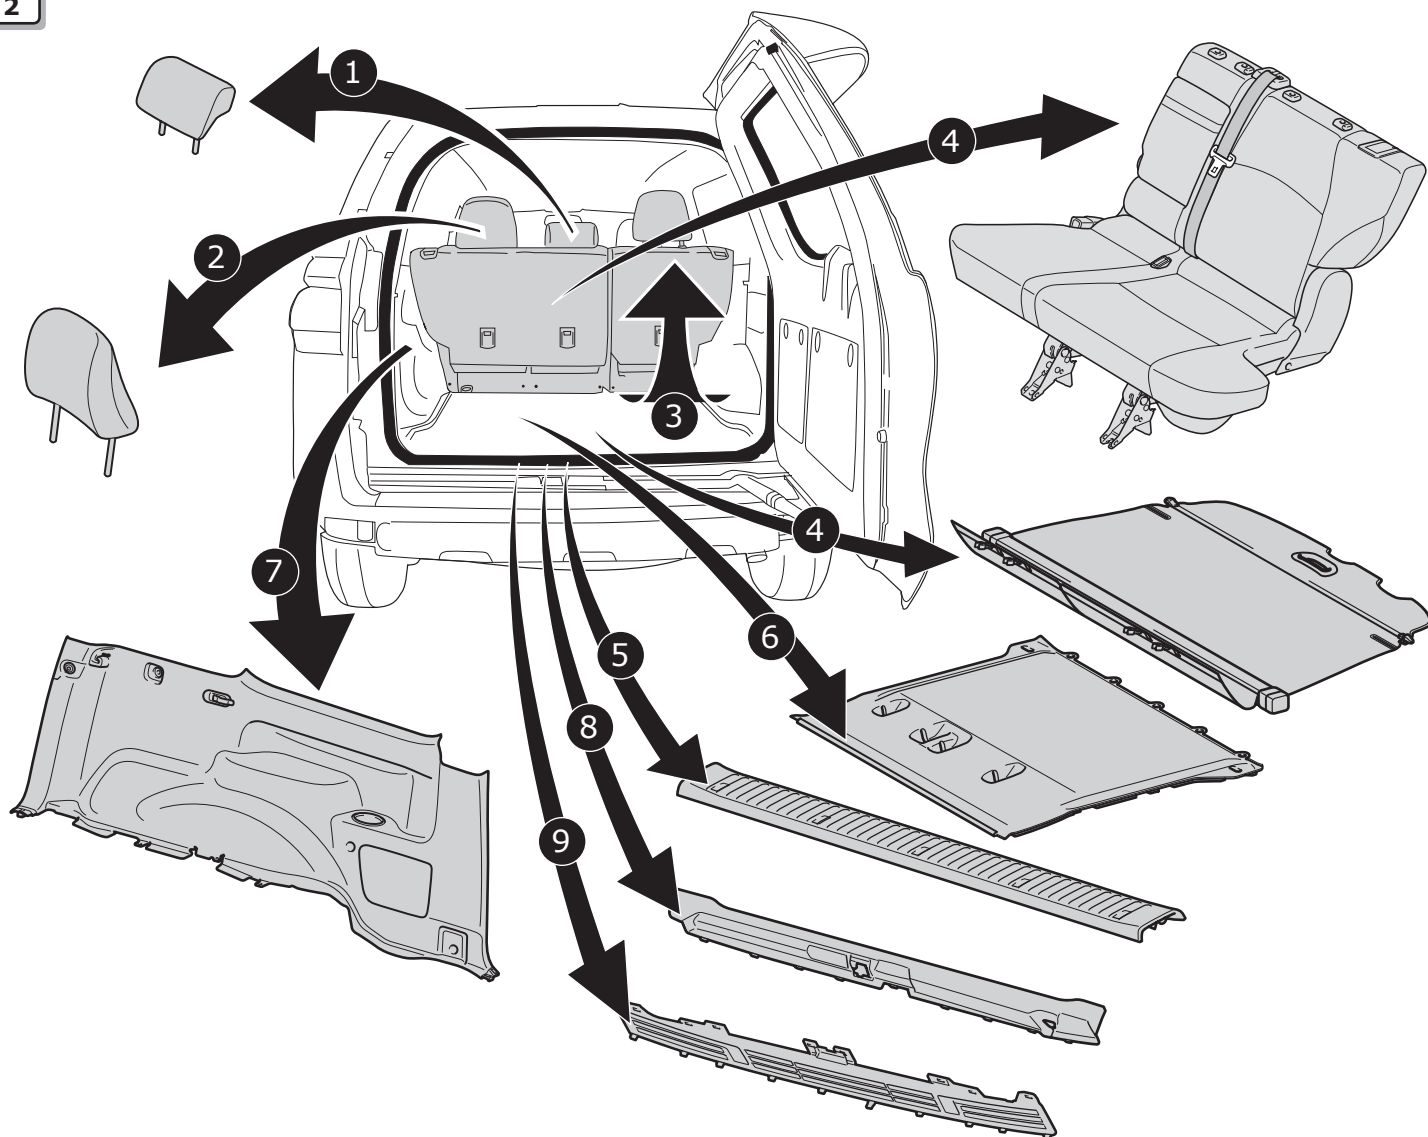


3

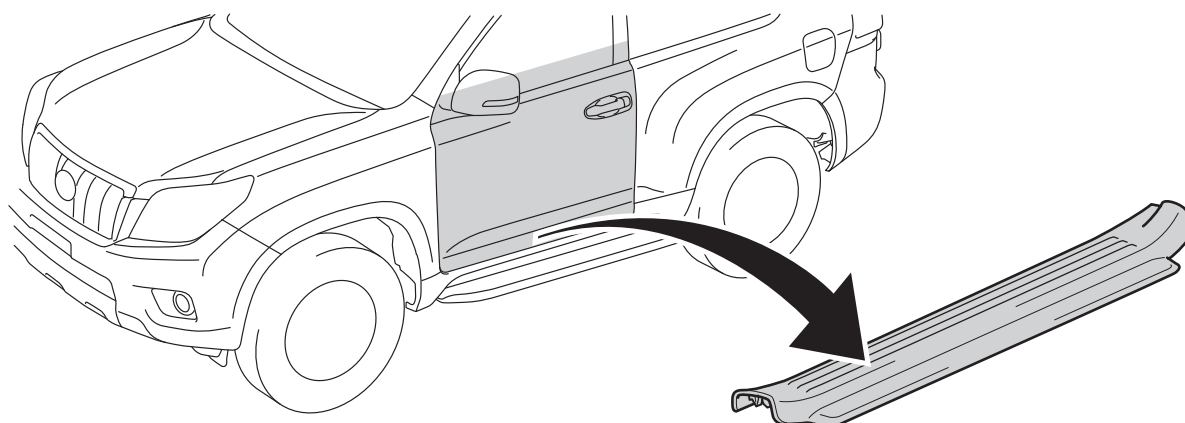

4

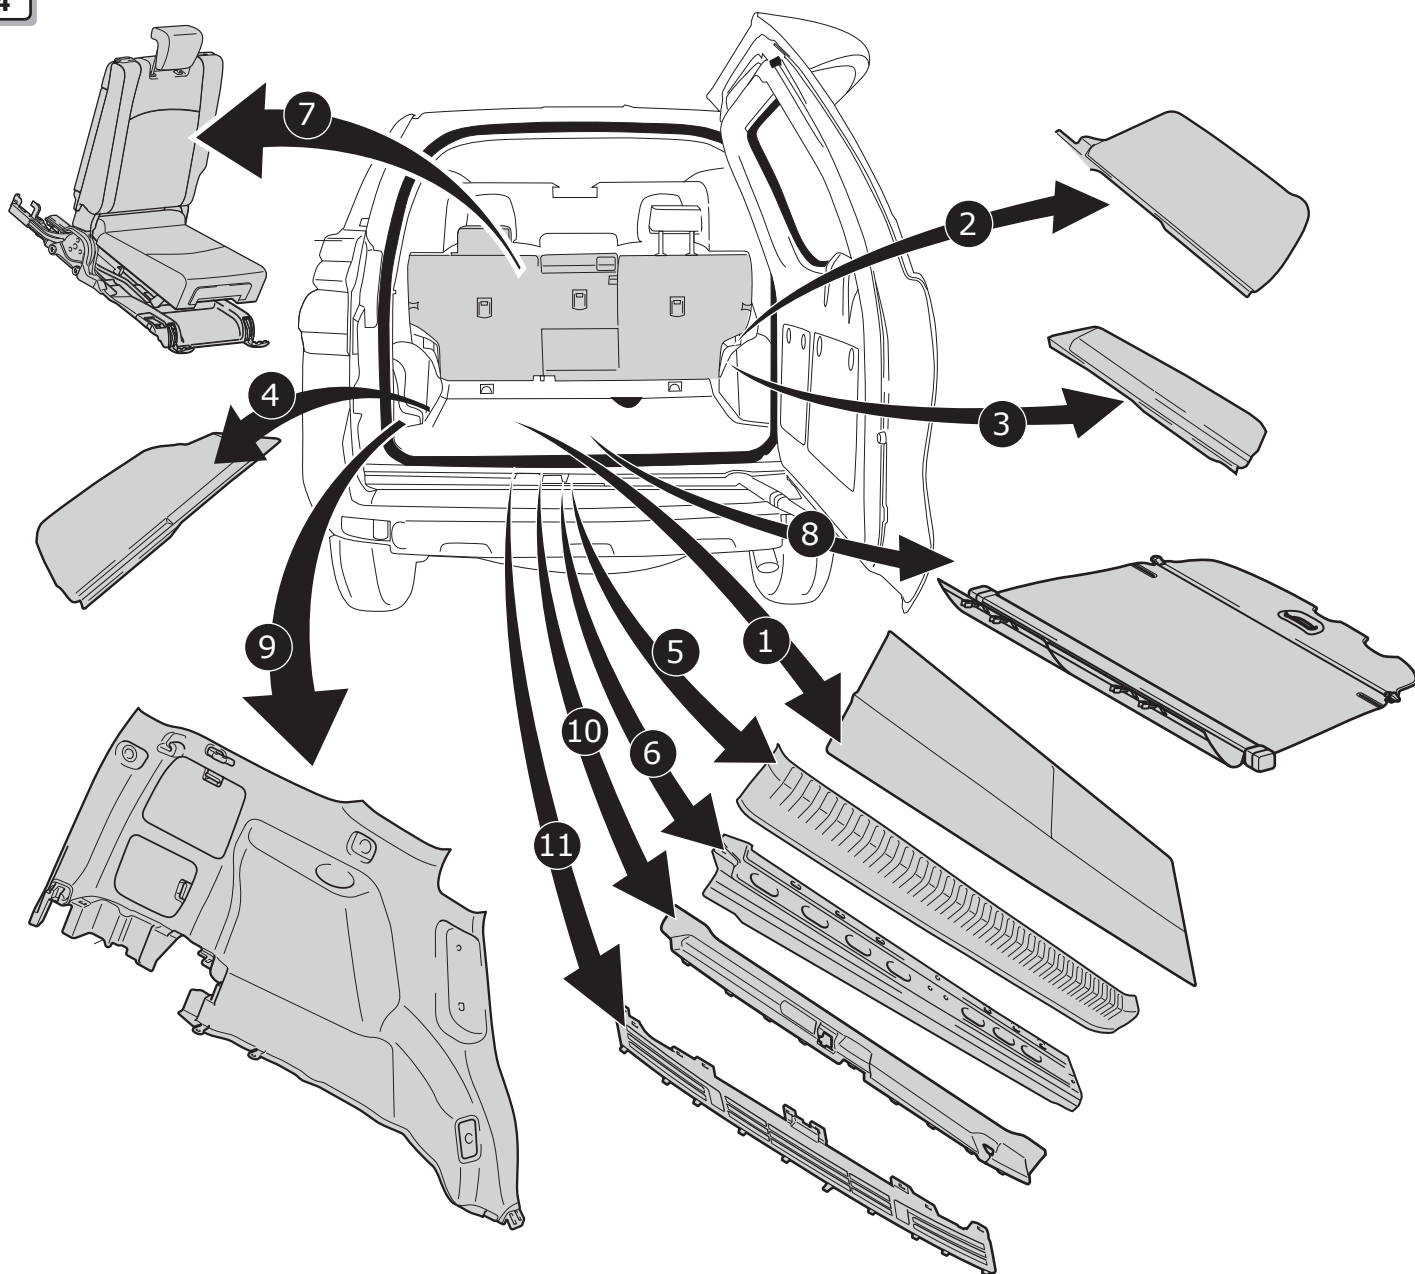


5

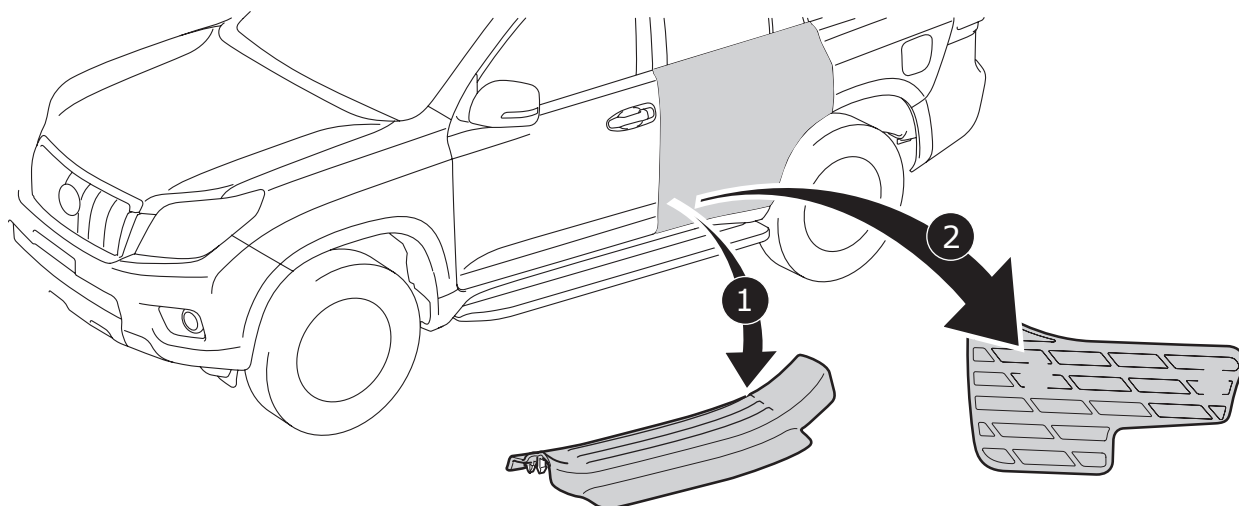


3-Doors

6

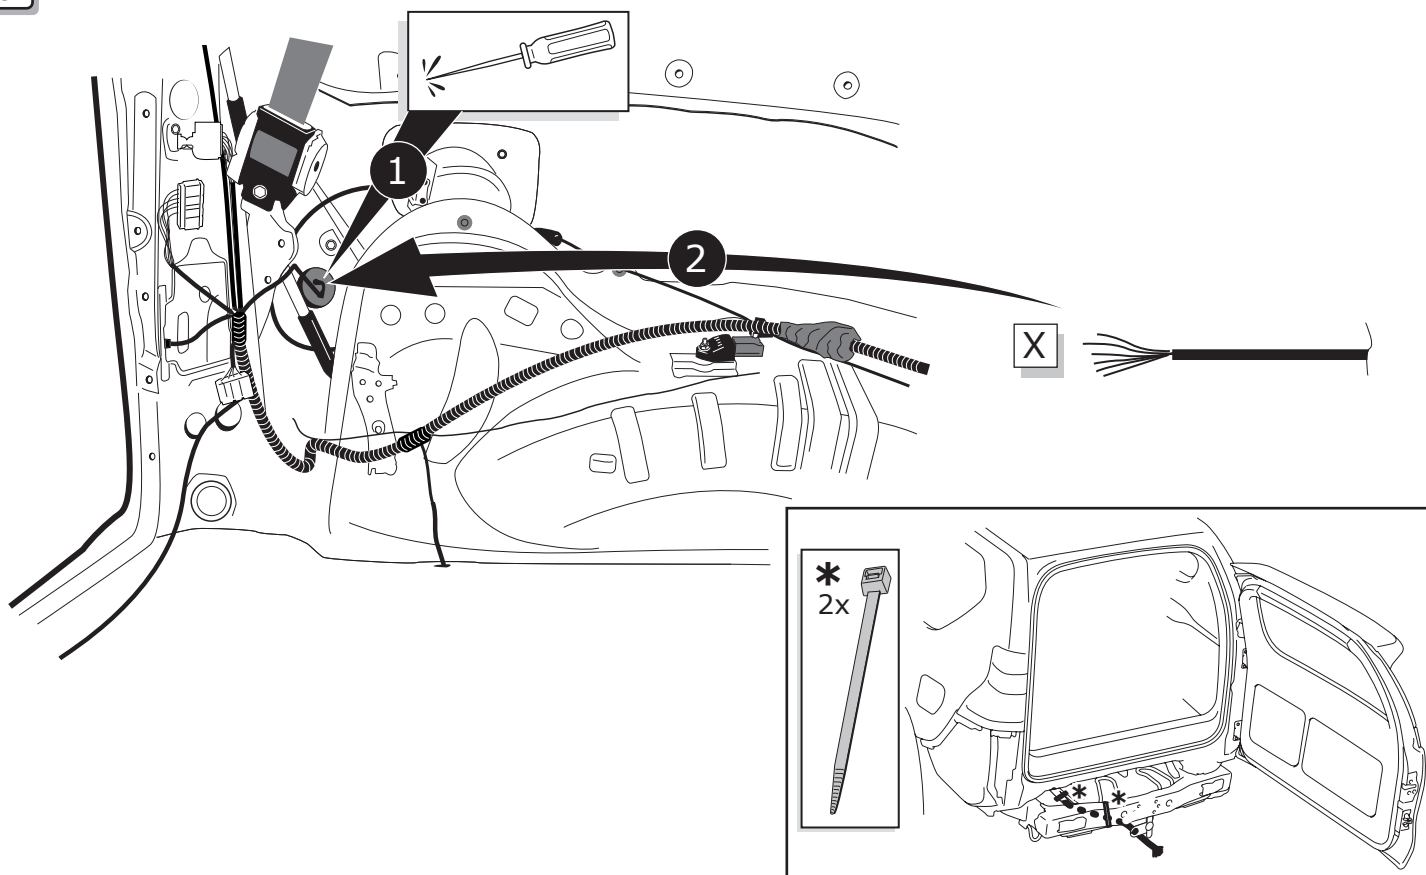


5-Doors

7

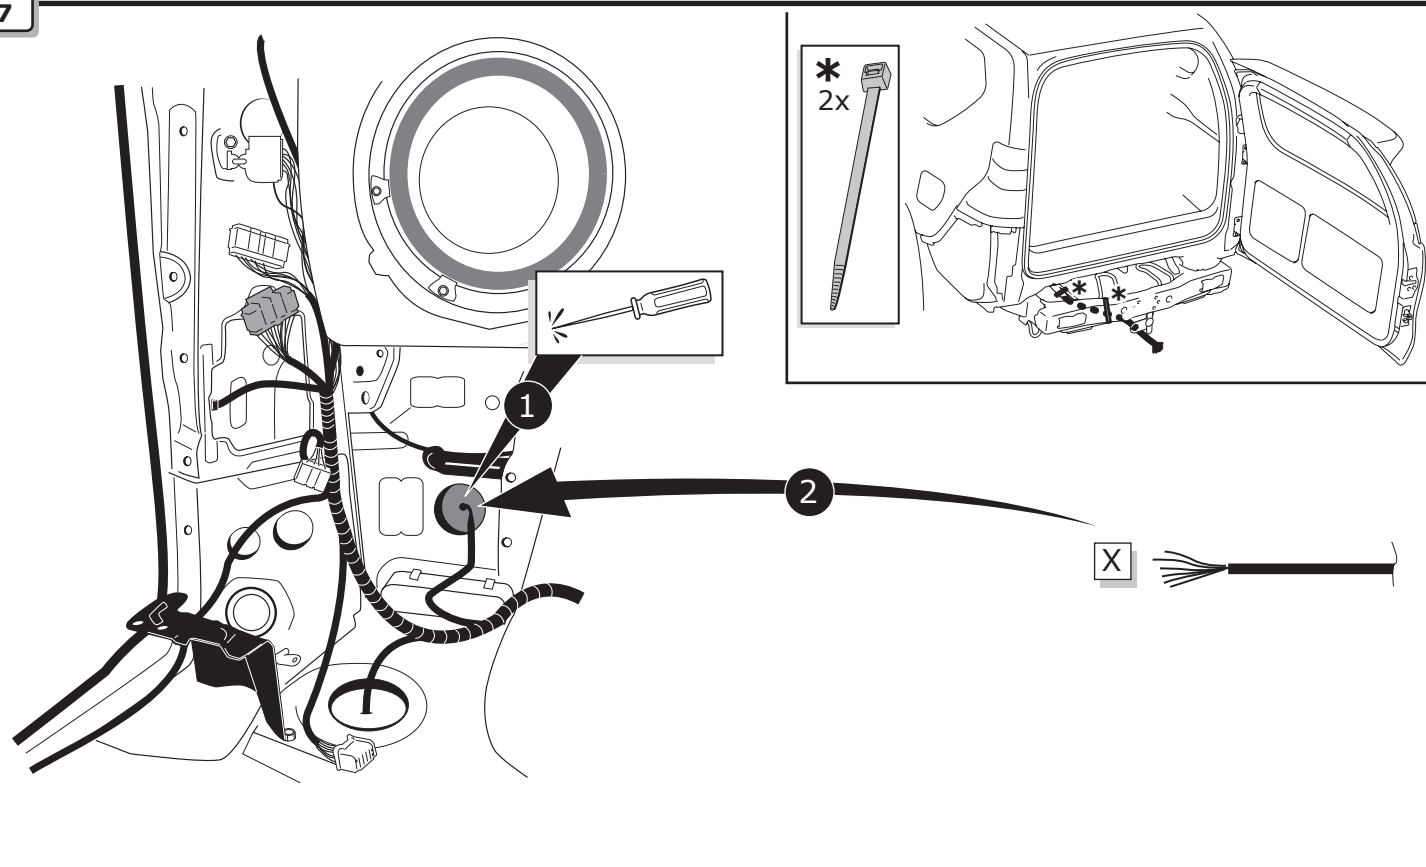


A


Option 1

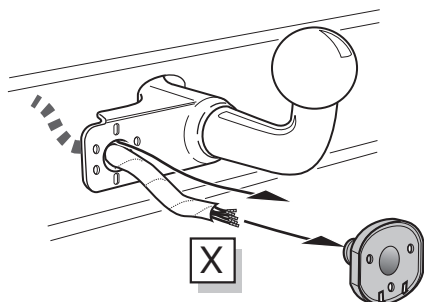

Option 2

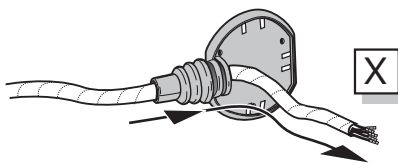

Option 3

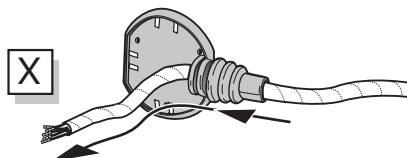

INFO



SOCKET CONNECTION



Pag. 11




B

Option 1

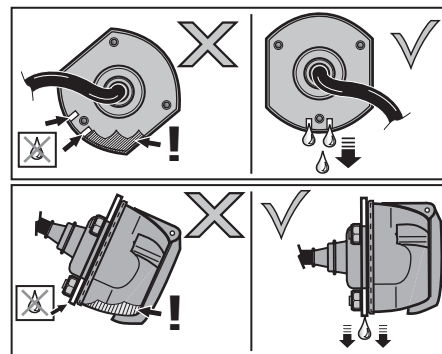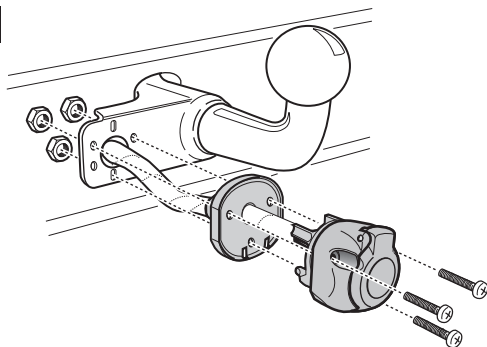




C

Option 2

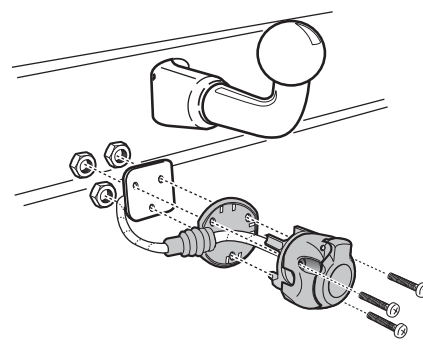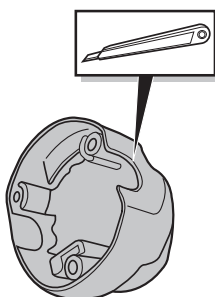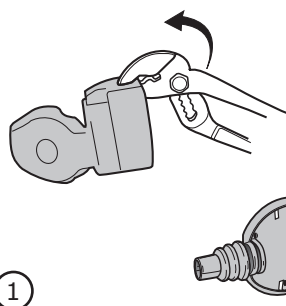


D

Option 3

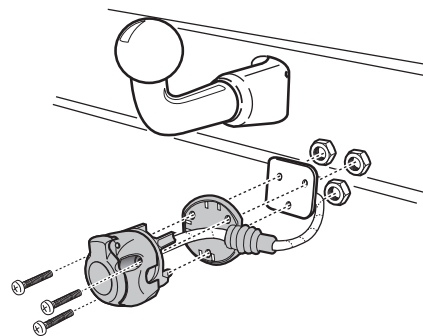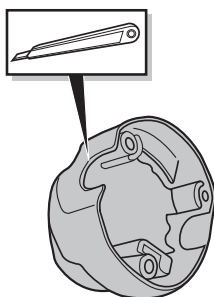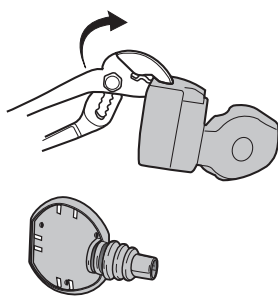


3-Doors & 5-Doors

8

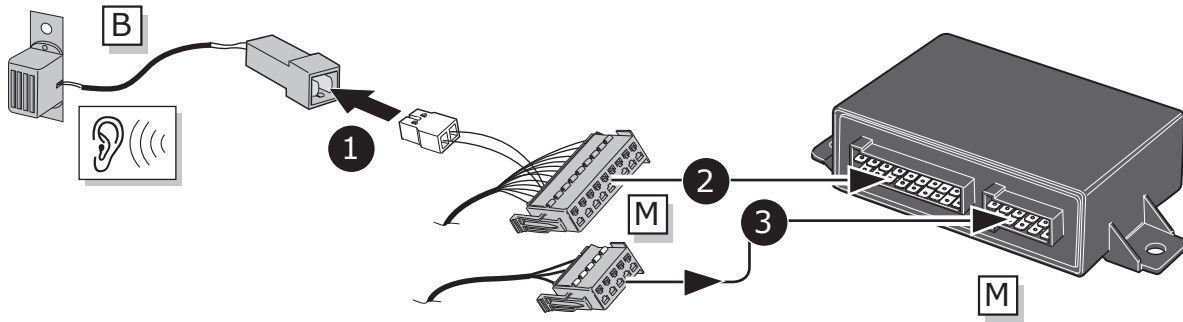


9

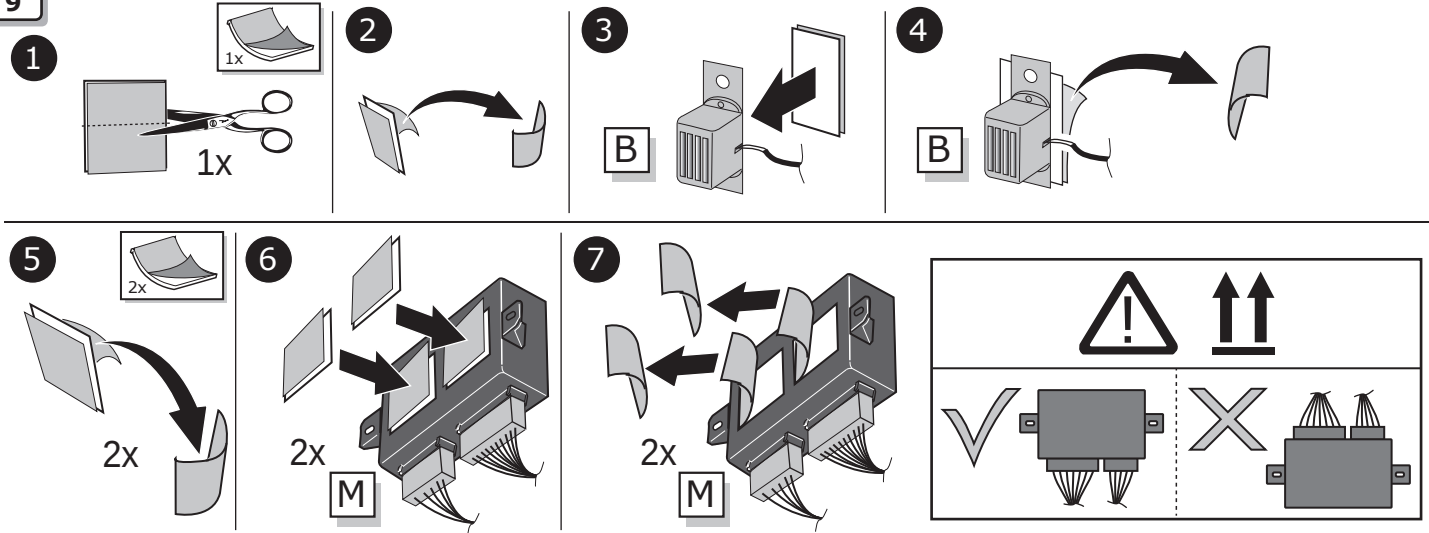


3-Doors

10

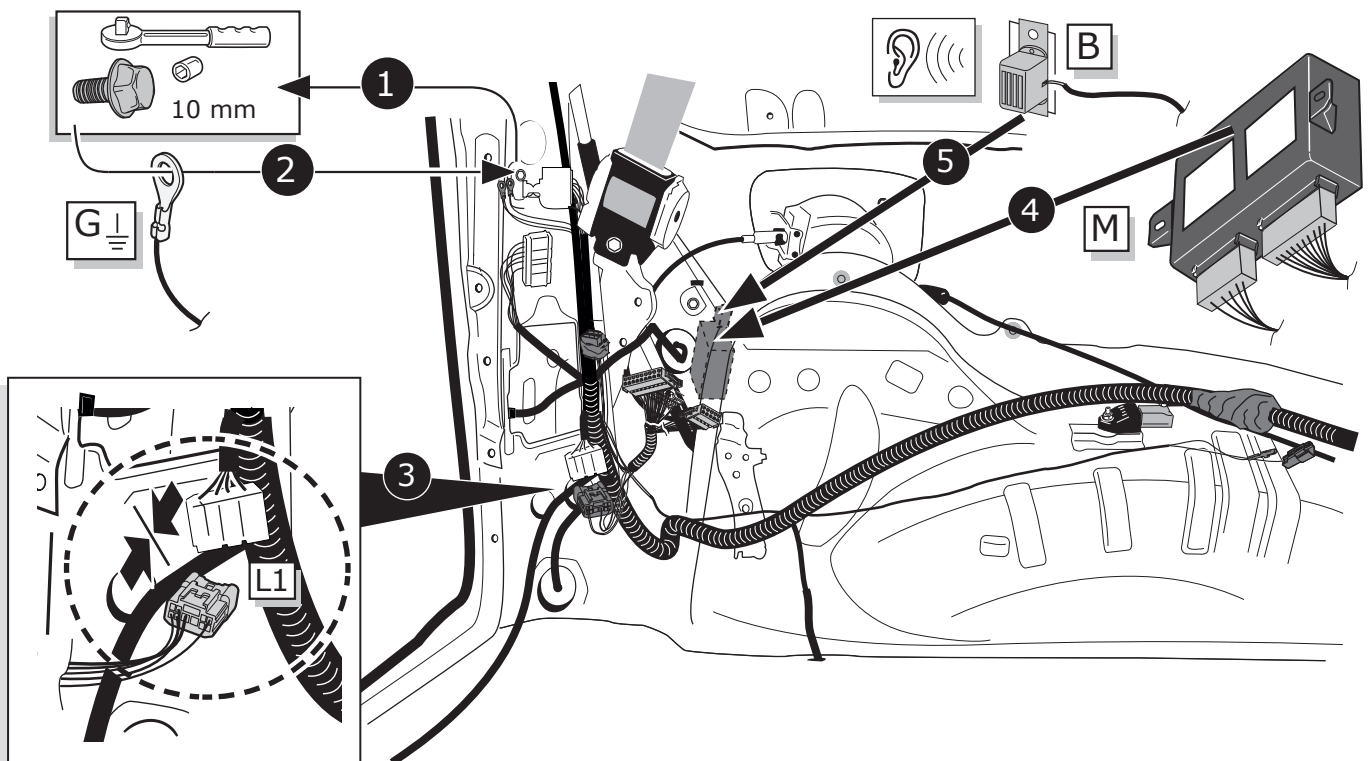


5-Doors

11

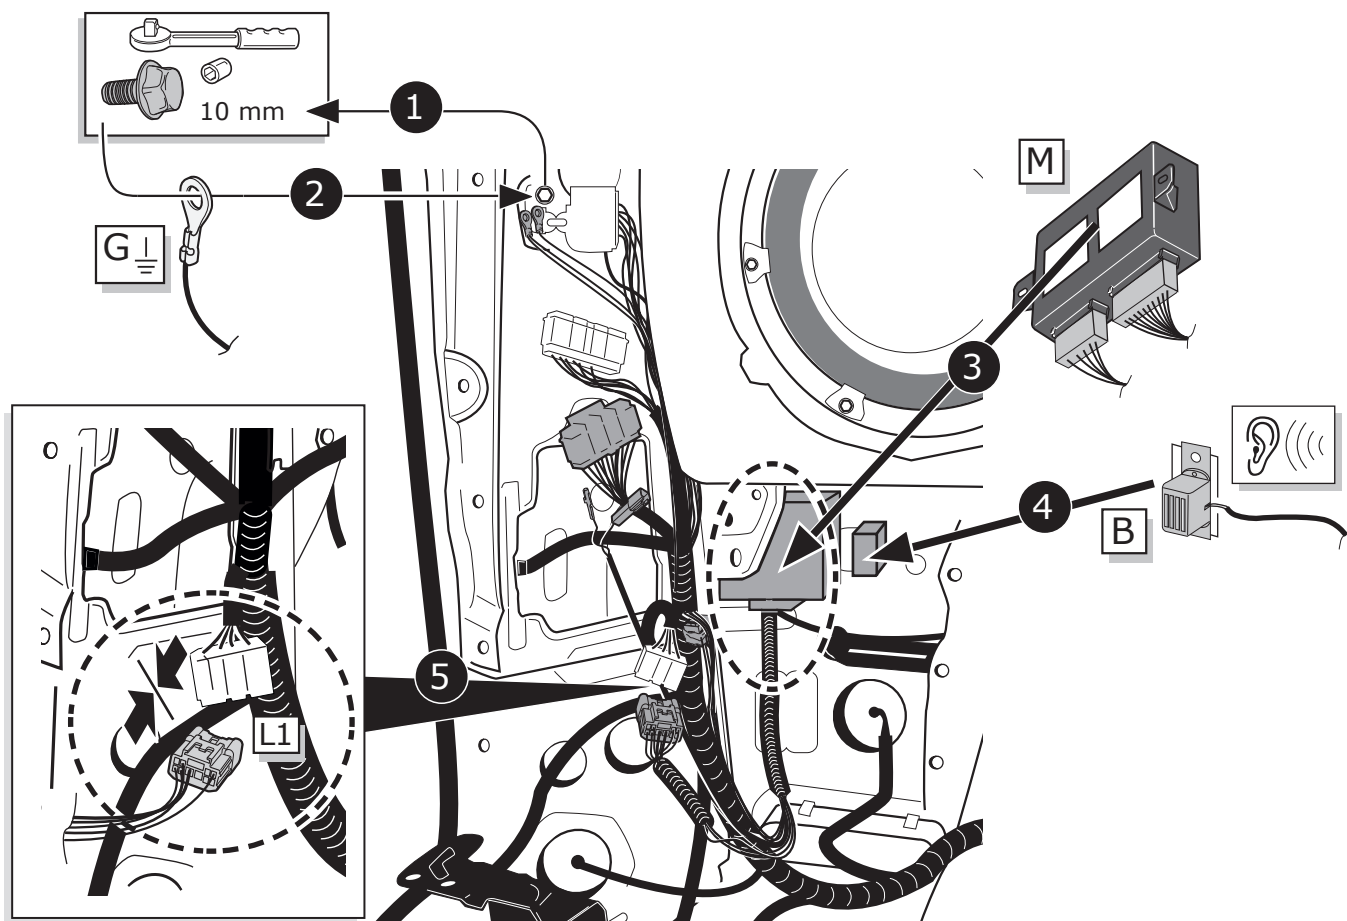




3-Doors

12

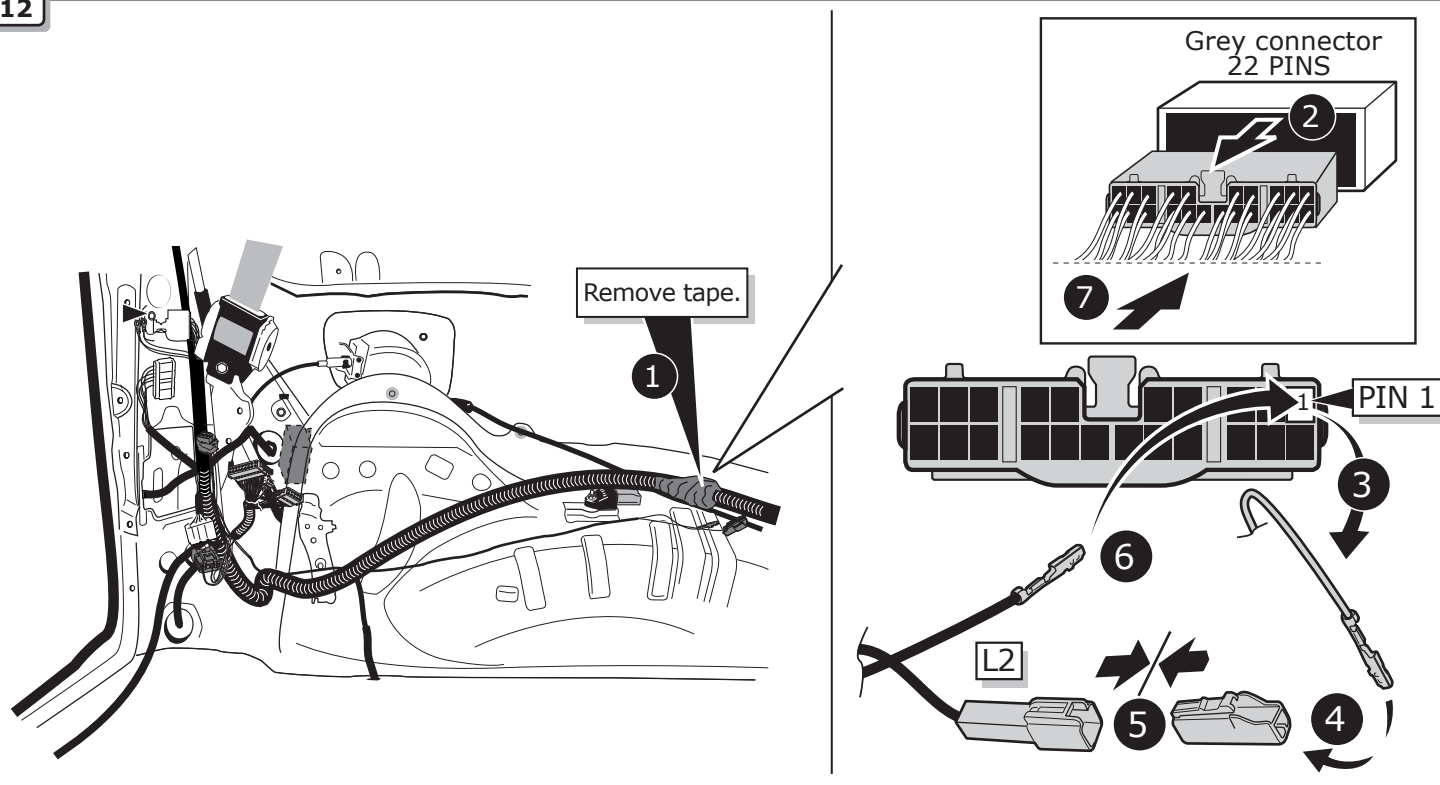


5-Doors

13

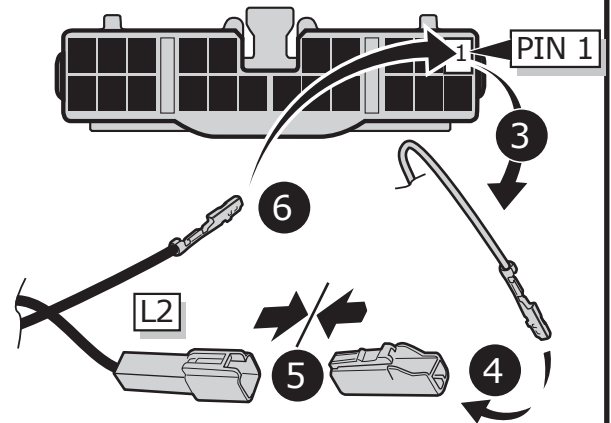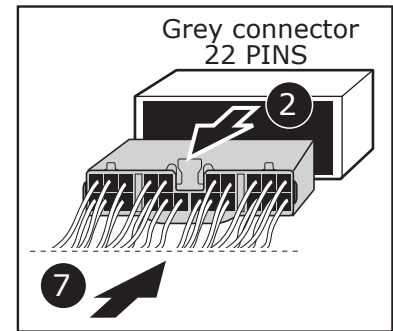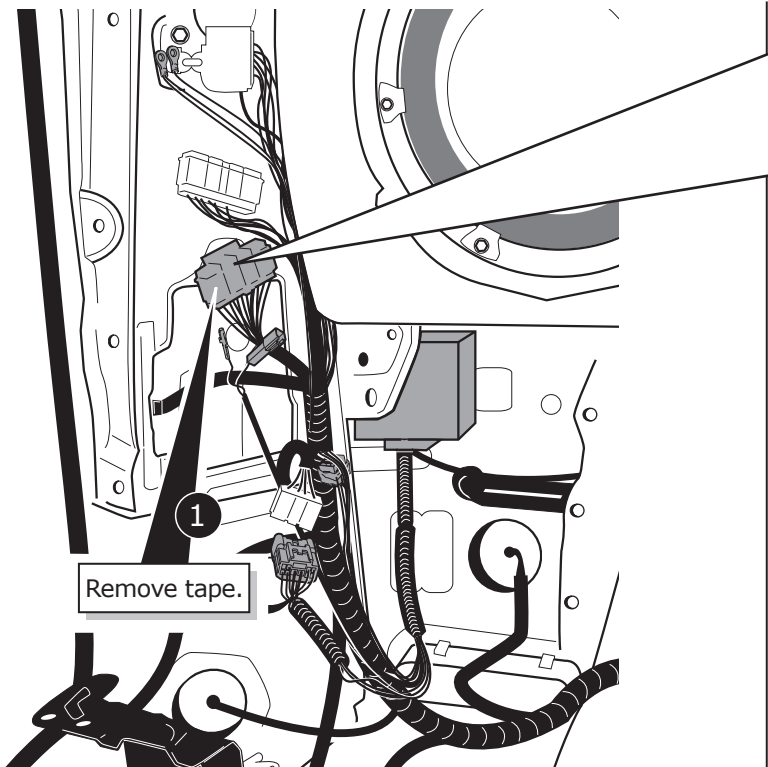


3-Doors & 5-Doors

14

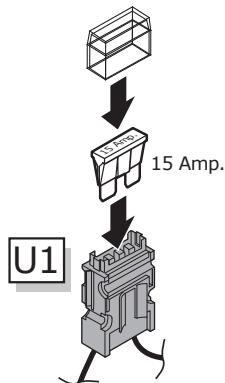

15

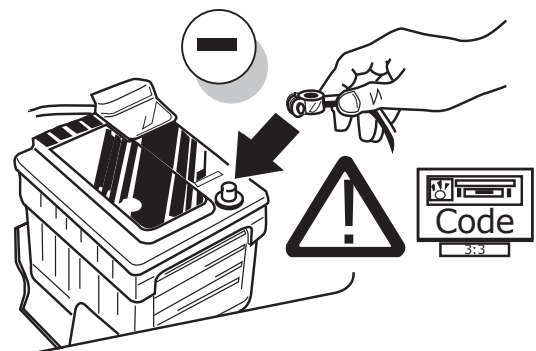


16

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

17

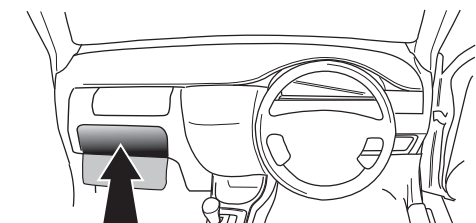

User guide




INFO

SOCKET CONNECTION


DIN/ISO 1724	←	🚗	⏚ 1-7	→	☀	STOP	☀
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	2x21W		21W	52W	3x21W	52W
Colour	Yellow	Blue	White	Green	Brown	Red	Black

UN-243-YZ Reverse lamp pre-wire extension


⚠ MAX = 21W

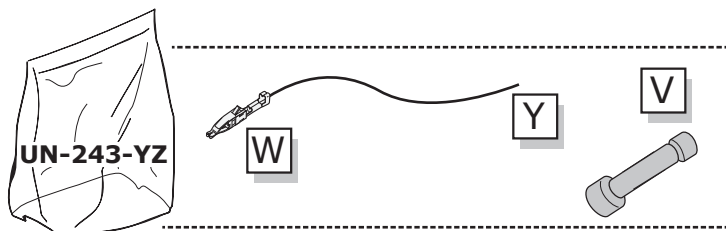


A

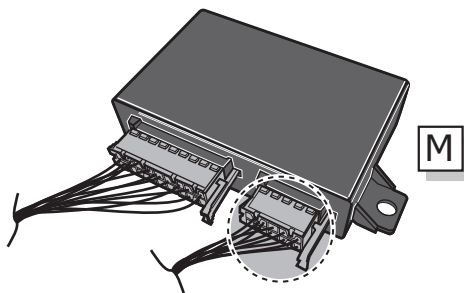


1

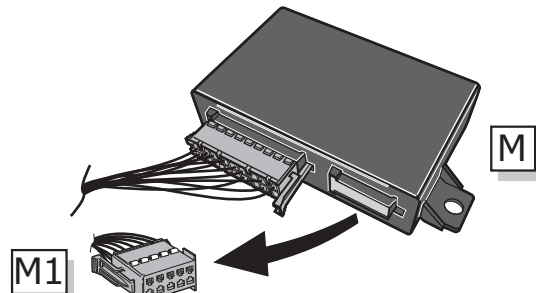


2

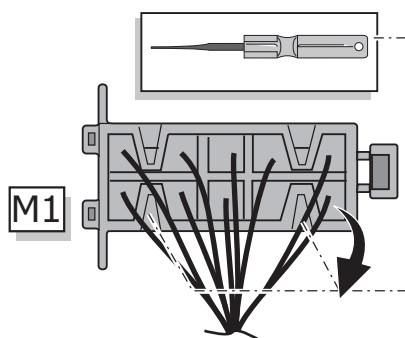


3

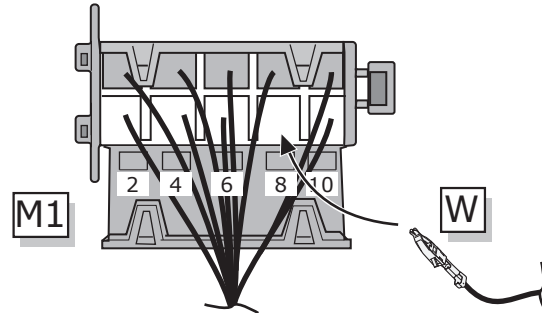

4

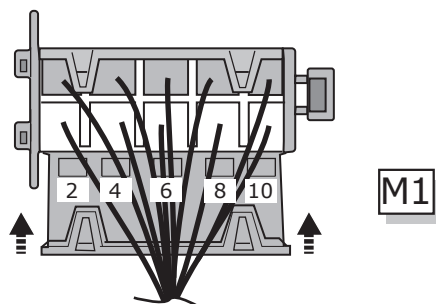

5

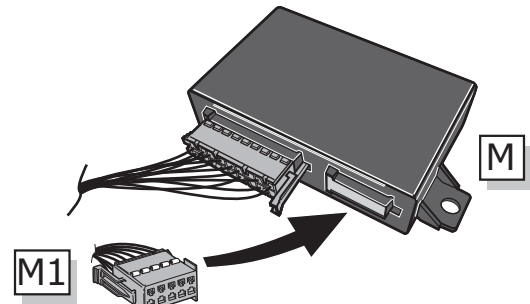

B

⚠ MAX = 21W

